


INSTALLATION INSTRUCTIONS FOR IMCO-NV HELM POST AND HELM CONTROL

- A. USE THE ADAPTER PLATE FOR LOCATING HOLES TO BE DRILLED IN DASHBOARD
- B. DRILL 4ea 1/2" HOLES
- C. DRILL 3" CENTER HOLE
- D. ATTACH ADAPTER PLATE TO THE HELM CONTROL USING THE 3/8" BOLTS PROVIDED
- E. INSTALL HELM POST THRU DASHBOARD AND SECURE WITH 1/2" NUTS PROVIDED
- F. FACE OIL PORTS IN THE 12, 3, 6 OR 9 O-CLOCK POSITION INSTALL HELM CONTROL W/ADAPTER PLATE TO END OF STEP STUDS SECURE WITH 3/8" NUTS PROVIDED


A.
ADAPTER PLATE/
DRILL TEMPLATE

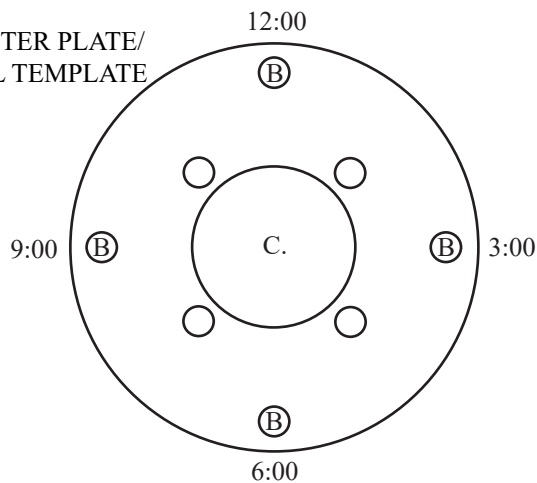

D.
ADAPTER PLATE



E.
HELM POST

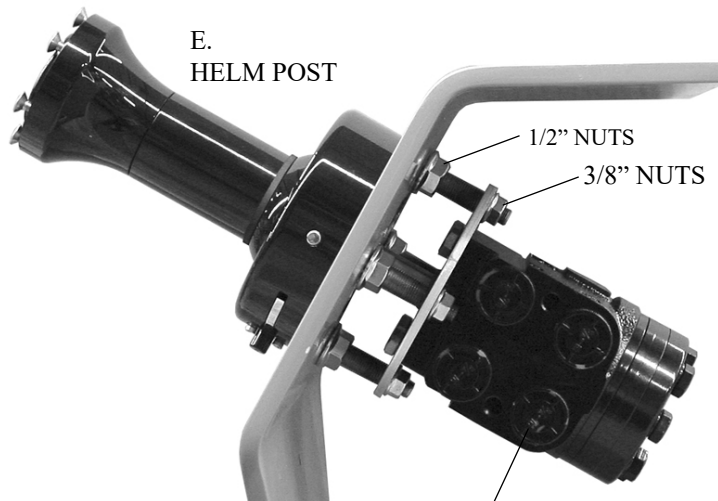

F.
OIL PORTS

1/2" NUTS
3/8" NUTS