


MC Machine billet timing pointer for Ford 2.3

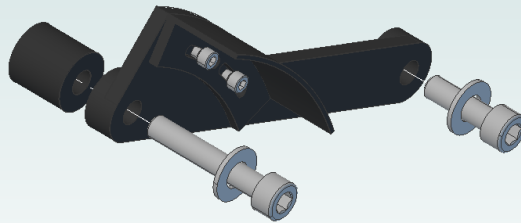

Do NOT use with factory plastic cover. Crank pulley must be removed to install.