

DuraFloors

SPC Luxury Vinyl Plank Installation Instructions

(6.5mm)

SUBFLOOR EVALUATION & PREPARATION

- The subfloor should be evaluated for moisture and properly prepared prior to installation. The subfloor should be level and clear of any dirt or debris
- Installation is NOT allowed over any type of carpet.
- DuraFloors can be installed over most existing hard surface floors, provided that the existing floor surface is clean, flat, dry, and structurally sound. For tile, grout lines need to be filled and levelled.
- Existing sheet vinyl floors should not be heavily cushioned. Soft underlayment and soft substrates will diminish the product's click system.

PRE-INSTALLATION


- Although our SPC has a low rate for expansion and contraction, we do suggest allowing the product to acclimate in the area where it is going to be installed where temperatures are kept between 55°F and 85°F (13°C and 30°C). Failure to comply with these installation parameters may disallow warranty coverage.
- To ensure the best results we suggest you square your room prior to installation, Exterior walls are commonly known to be more square than interior walls.

INSTALLATION

- A ¼" expansion gap left between the planks & the walls are required to allow for minor expansion & contraction during temperature changes
- A 6" stagger between rows is required to ensure warranty. By no means should the joints of planks line up unless separated by multiple rows. (2+)
- When fitting under door casings, a flat bar may be used to assist in locking the planks. If needed, tap the long joint while applying pressure from the flat bar to assist in clicking the joint together.
- **Please refer to the visual guide below.**

DuraFloors


- Please refer to the visual guide below.

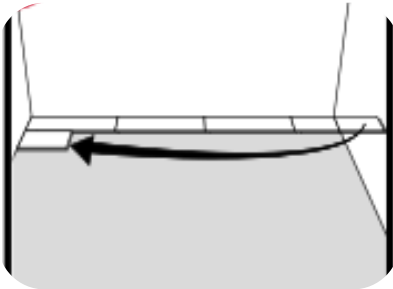


we recommend to
install the entire length
of the first row



After installing the first piece
of the second row, click the
second piece into the short,
end joint.

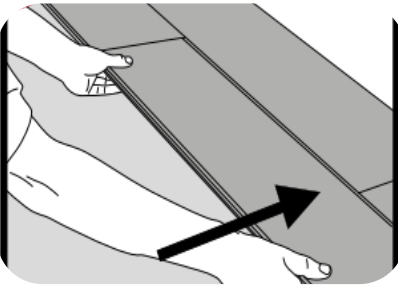

Slightly lifting the opposite end,
click the plank into the long side of
the groove. A rubber mallet or
tapping block may be required

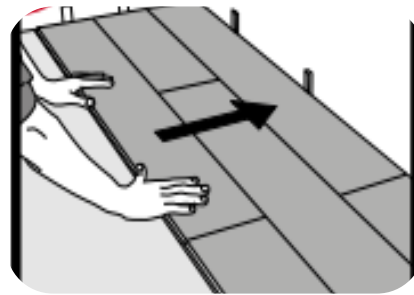

Continue this step,
ensuring you stagger
each row appropriately

We value your business and aim to provide the best service possible. Thank you for choosing DuraFloors for your flooring needs. Your satisfaction is important to us, and we are here to assist you throughout the return or exchange process.