


## RIDGE 1000 GAS CAP COVER



The spring hinge will need to be positioned flush with the outside plastics

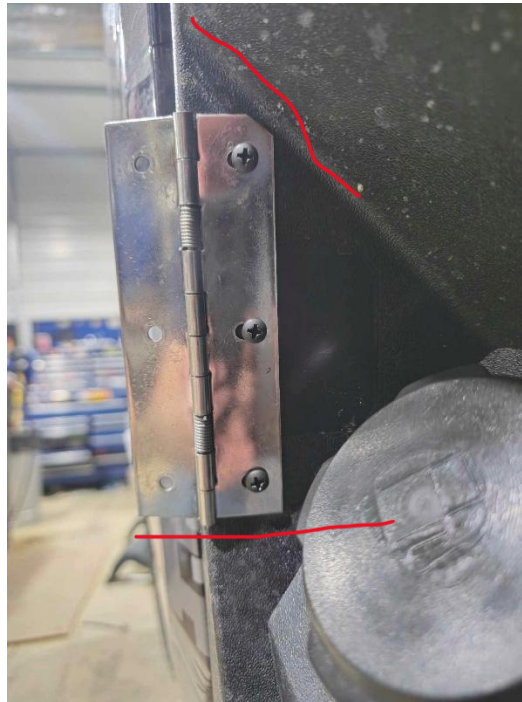

The hinge will sit in the pocket of the inner plastics, there is an upper crease and a lower crease the hinge will fit into.

Mark the top hole, remove the hinge and screw the screw  
Reinstall the hinge and mark and drill the remaining two screws.

This will ensure accurate spacing of the screws.



If the door will not open far enough for your requirements, you can slot the hinge and readjust the door.

Bolt the door to the hinge after the hinge has been screwed to the plastics with all three screws