


B Series Base Cabinet

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	ADJUSTABLE SHELF	1 PC
H	DOOR PANEL	1 PC
I	DRAWER	1 SET


1 Door, 1 Drawer

B12、B15、B18、B21

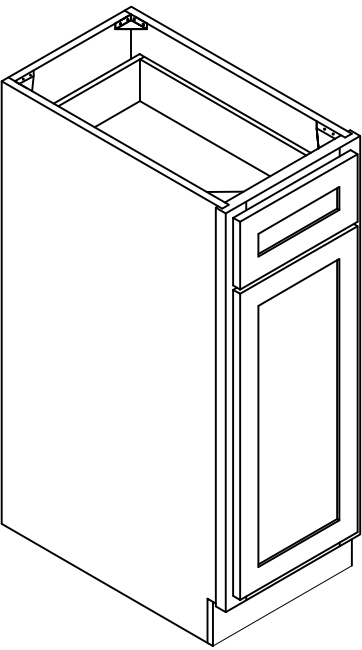


A4

STEP 1

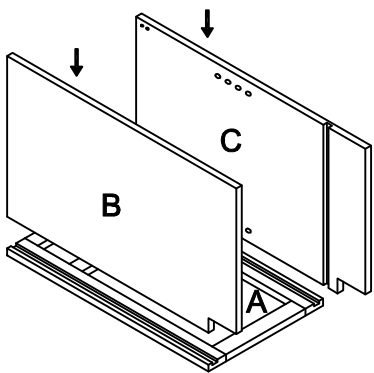


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

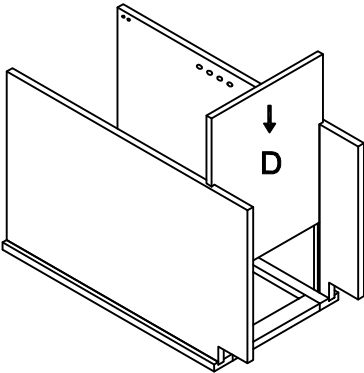


Slide D into grooves A, B & C

STEP 3

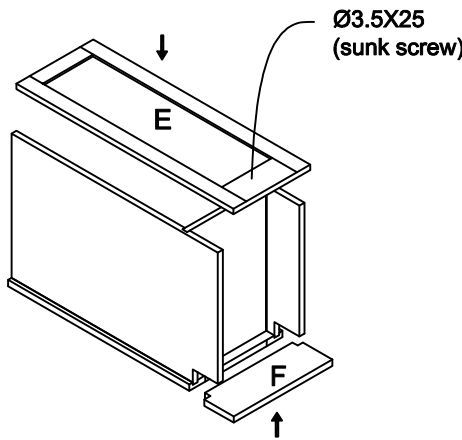


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4

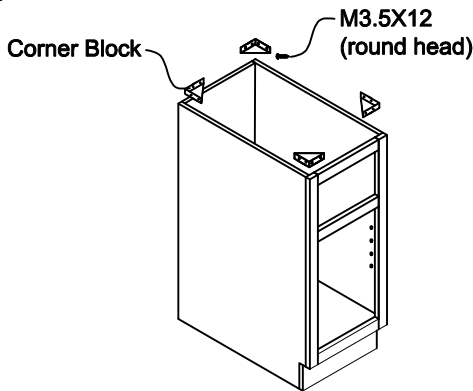


Attach corner block into corners of
A & B & C & E with round head screws

STEP 5



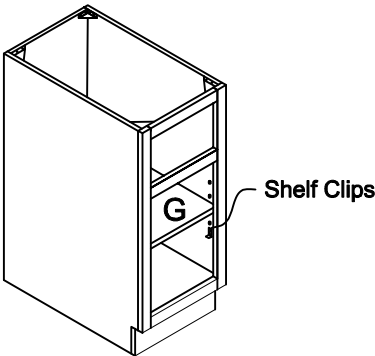


Insert the shelf clips then put G in

STEP 6

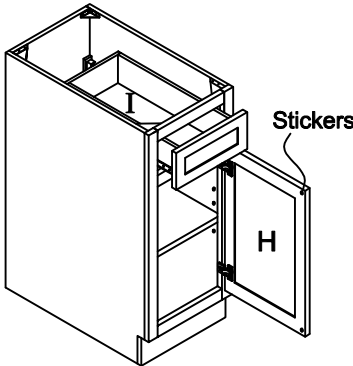

Attach H as illustrated
Attach I as illustrated
Attach cushion stickers

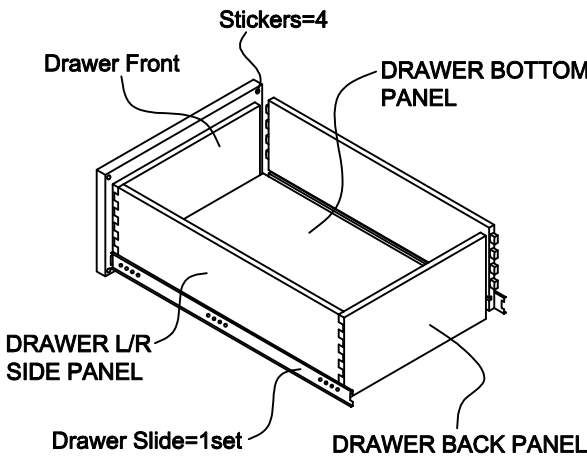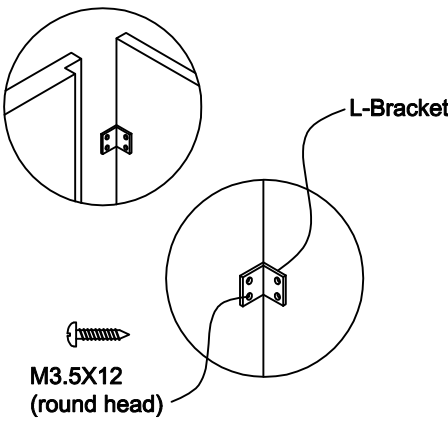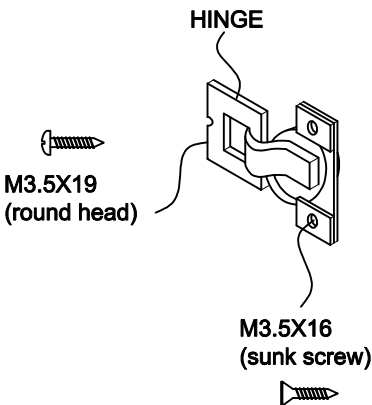


B Series Base Cabinet

2 Door, 1 Drawer










B24、B27、B30

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	ADJUSTABLE SHELF	1 PC
H	DOOR PANEL	2 PCS
I	DRAWER	1 SET

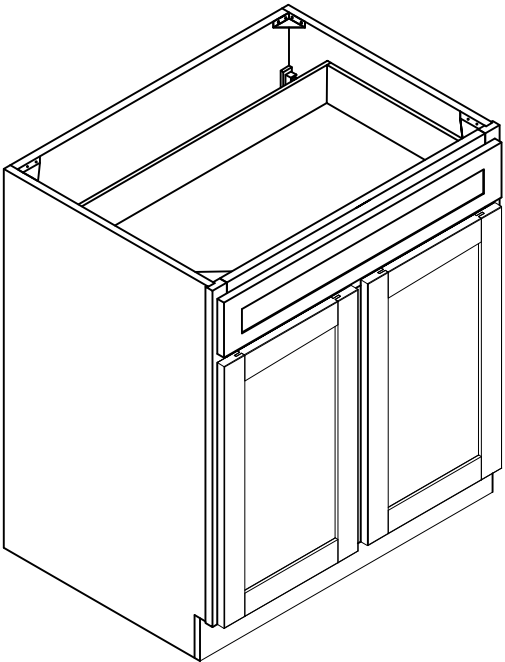

A5

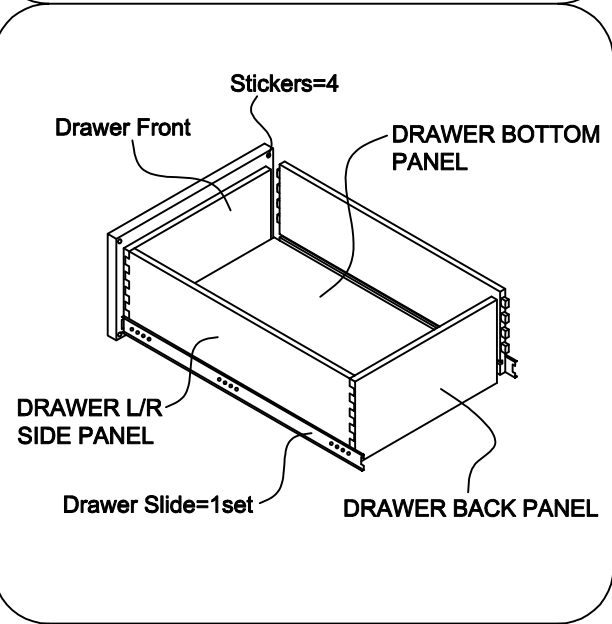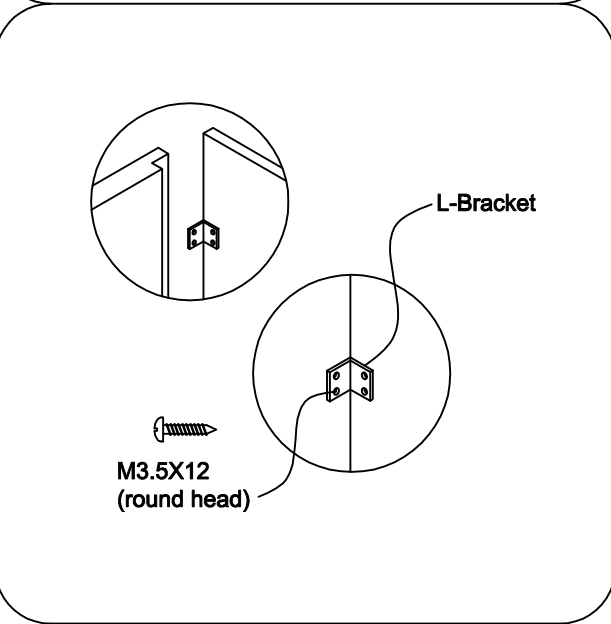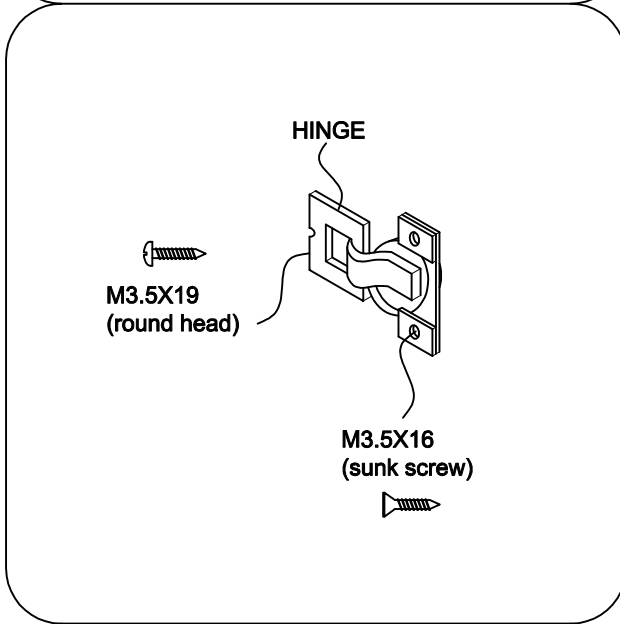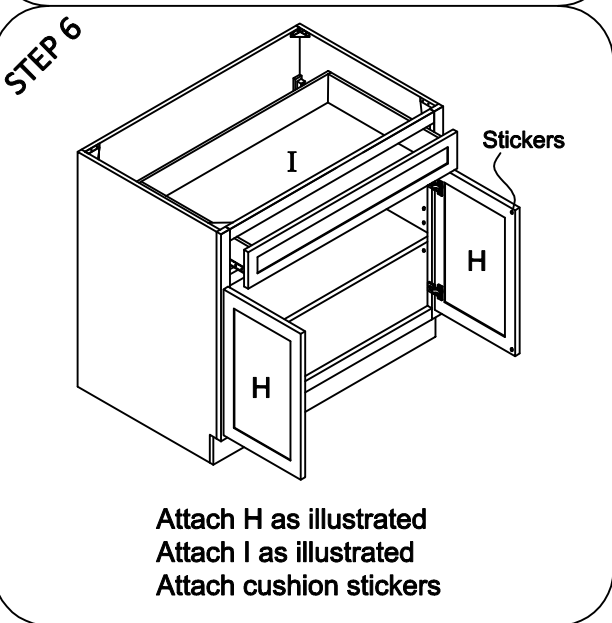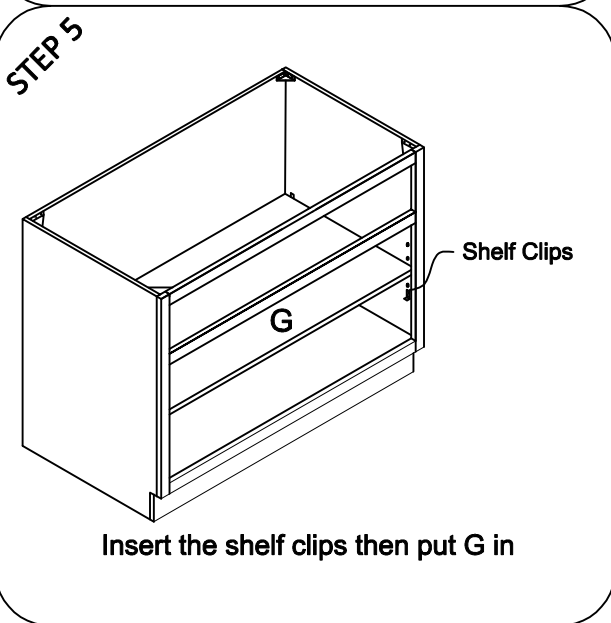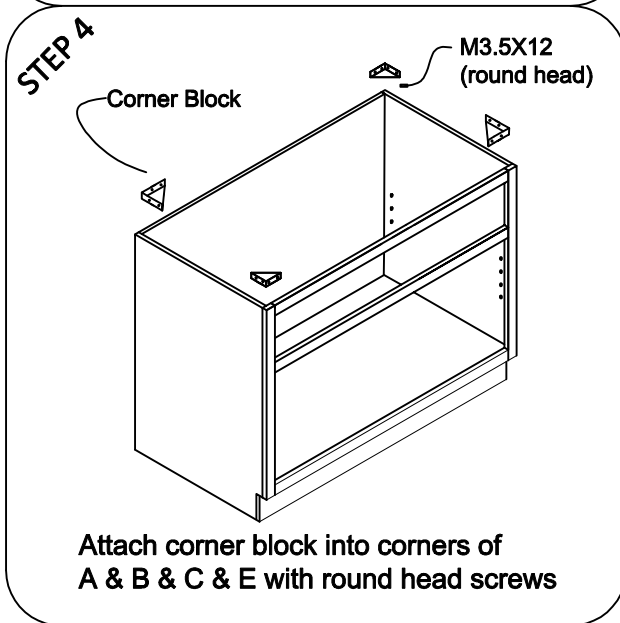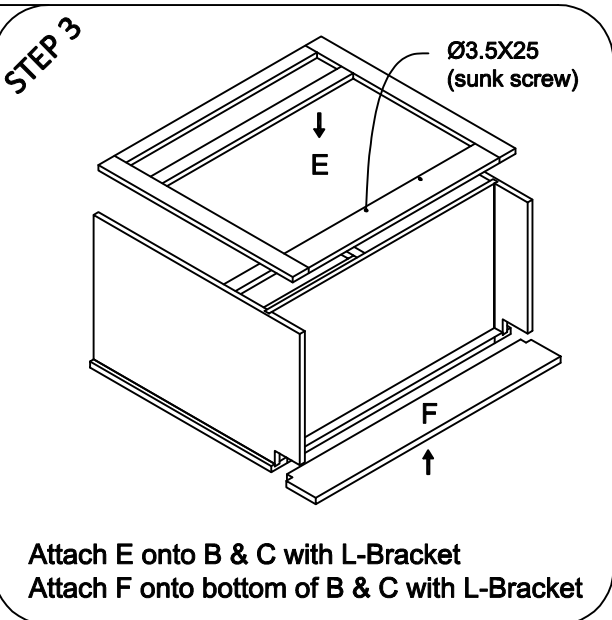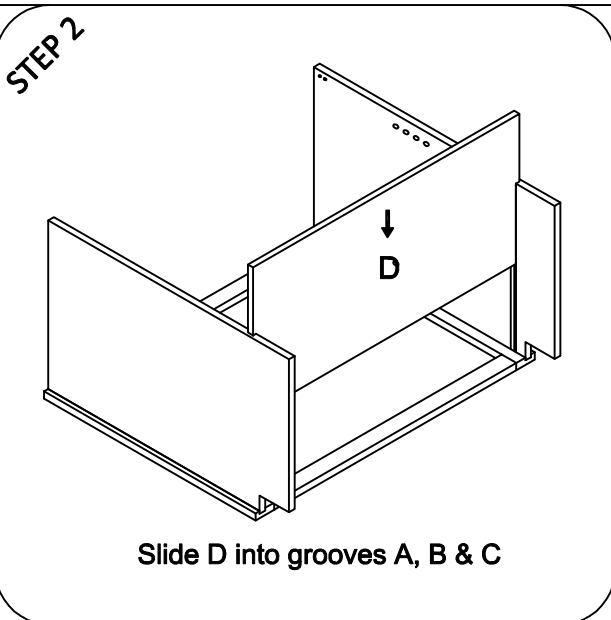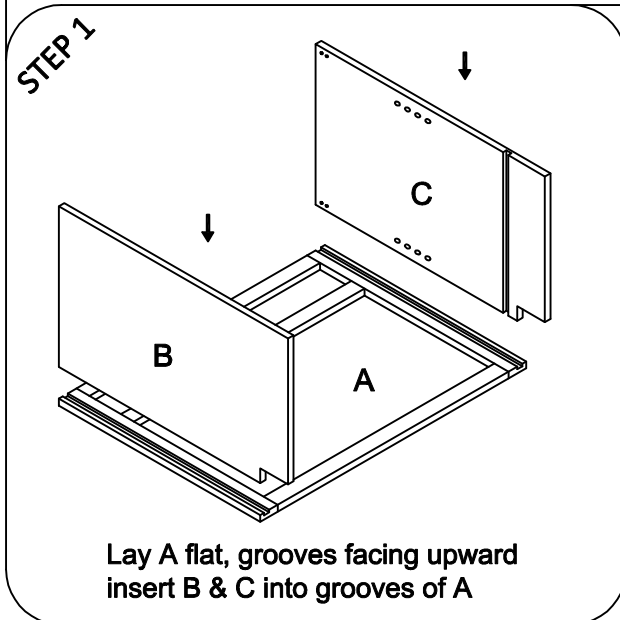


B Series Base Cabinet

2 Door, 2 Drawer

Step-by-Step Assembly Instructions


B33、B36、B39、B42

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	ADJUSTABLE SHELF	1 PC
H	DOOR PANEL	2 PCS
I	DRAWER	2 SET

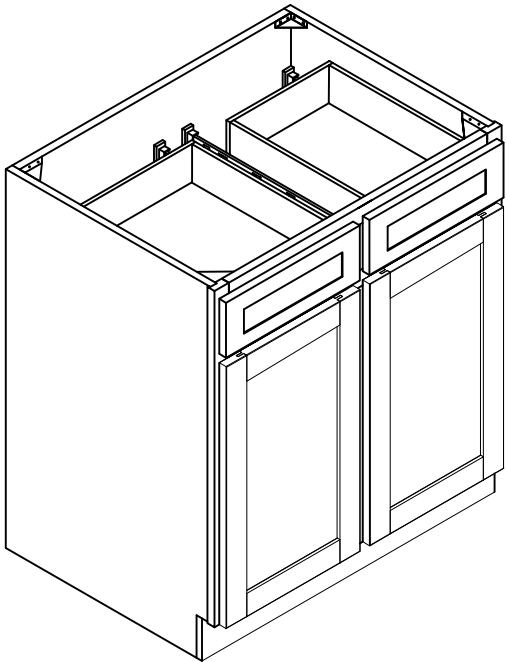


A6

STEP 1

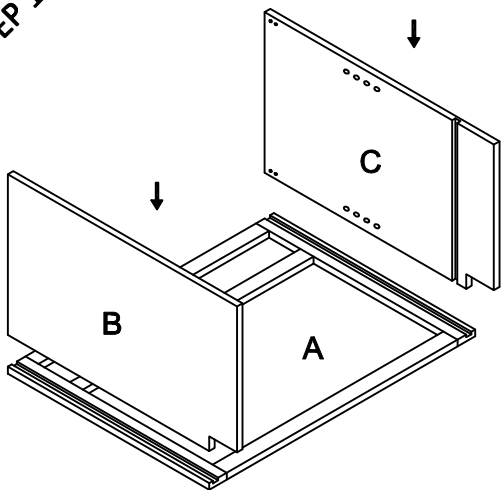


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

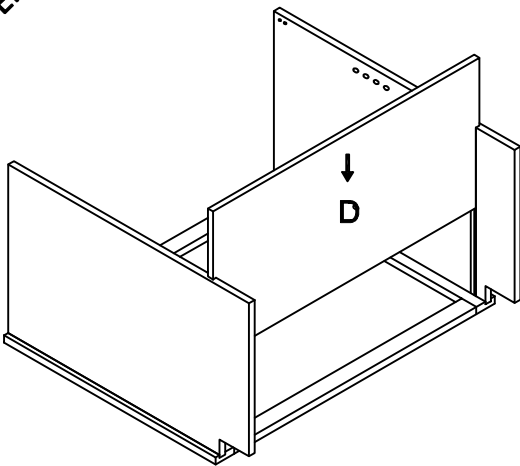


Slide D into grooves A, B & C

STEP 3

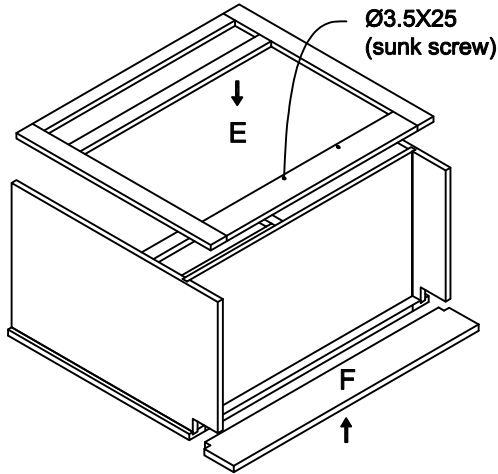


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4

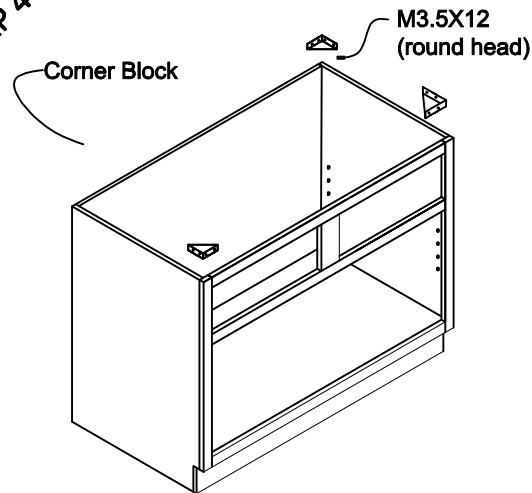


Attach Corner Block into corners of
A & B & C & E with round head screws

STEP 5



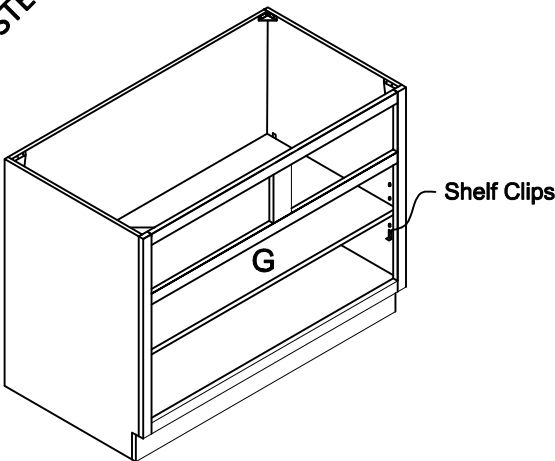


Insert the shelf clips then put G in

STEP 6

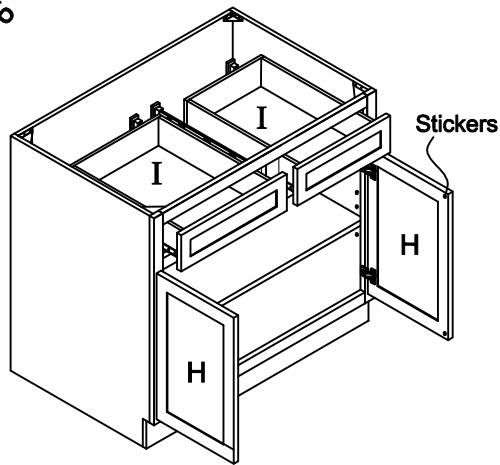

Attach H as illustrated
Attach I as illustrated
Attach cushion stickers

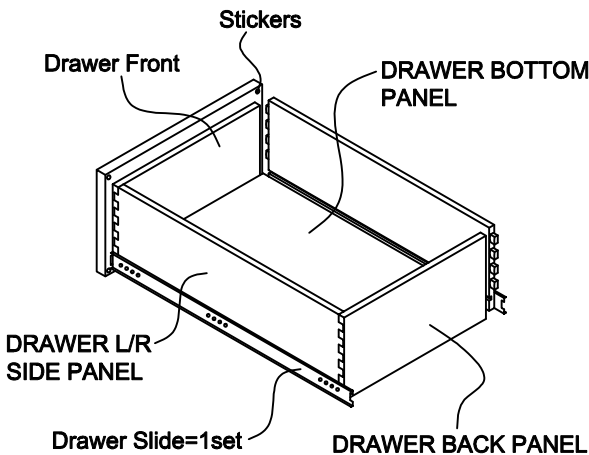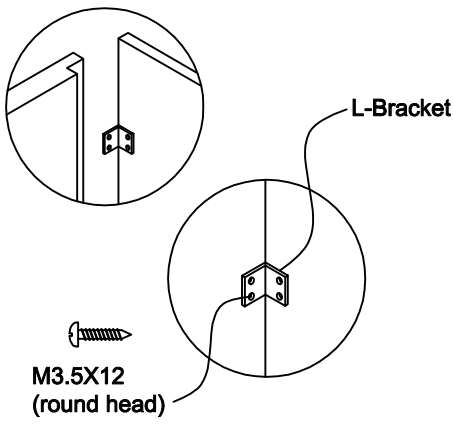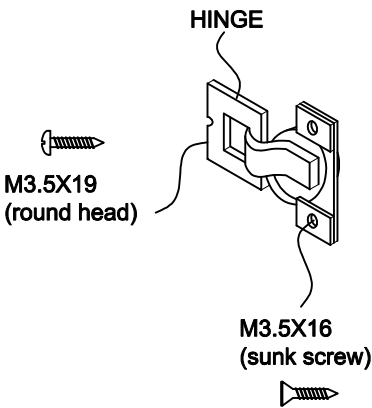


BBC Series Base Cabinet

1 Door, 1 Drawer

BBC36、BBC42、BBC45


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DASH PLATE	1 PC
H	ADJUSTABLE SHELF	1 PC
I	DOOR PANEL	1 PC
J	DRAWER	1 SET

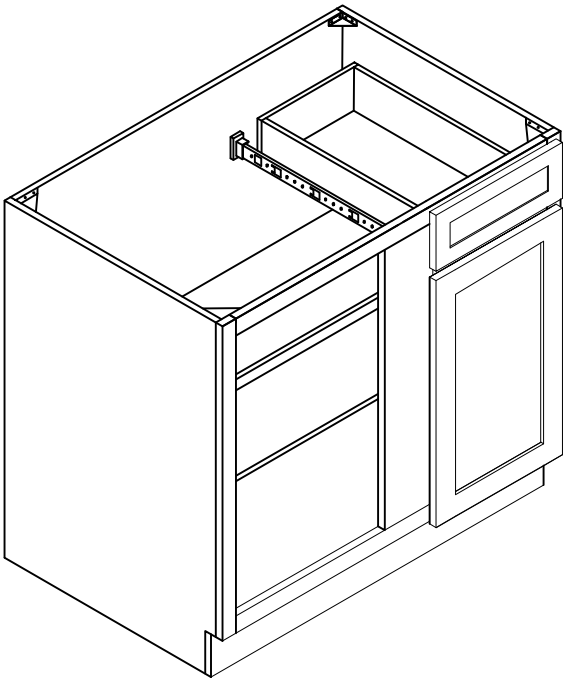


A7

STEP 1

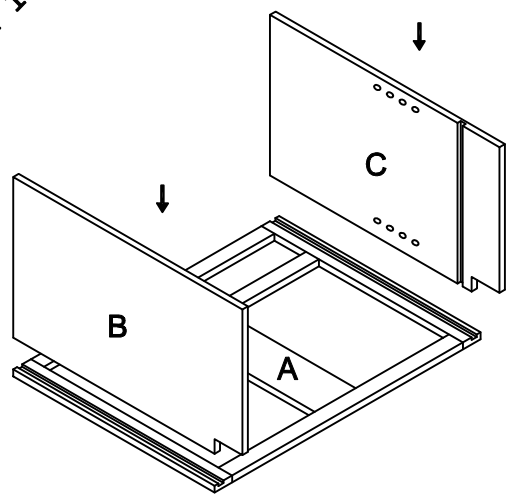


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

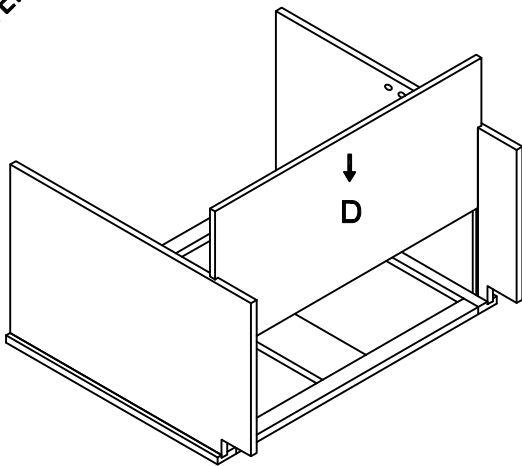


Slide D into grooves A, B & C

STEP 3

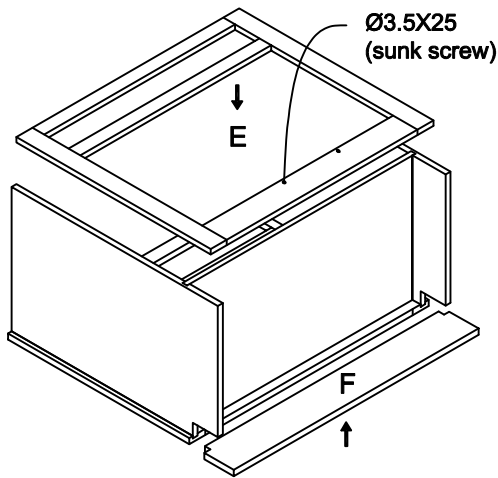


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4

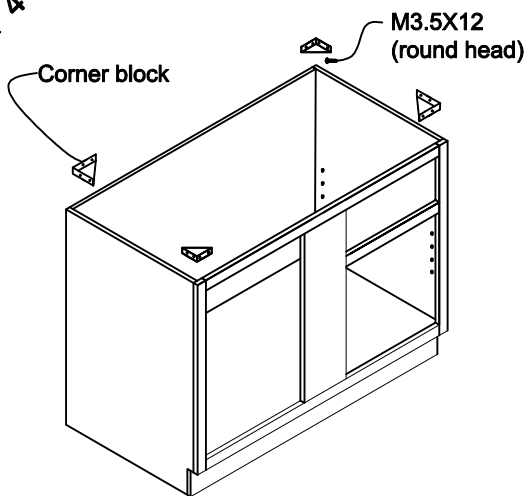


Attach corner block into corners of
A & B & C & E with round head screws

STEP 5

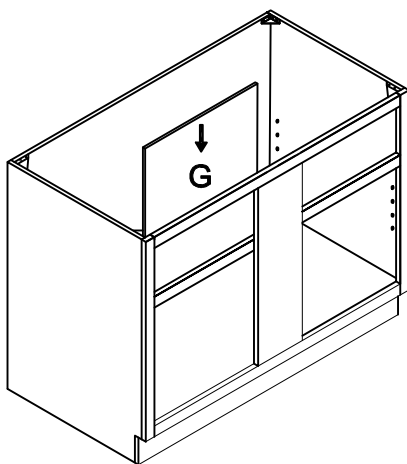


Insert G

STEP 6


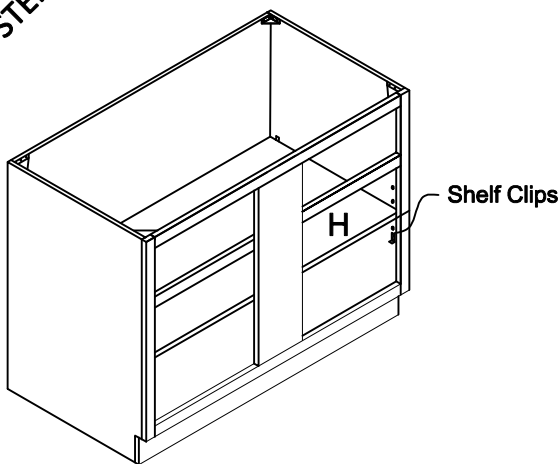


Insert the shelf clips then put H in

STEP 7

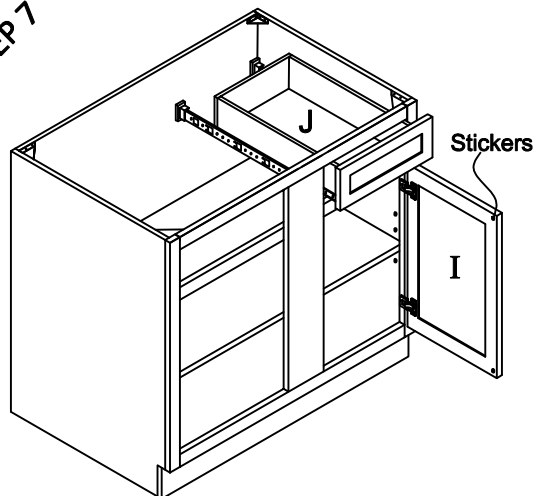

Attach J as illustrated
Attach I as illustrated
Attach cushion stickers

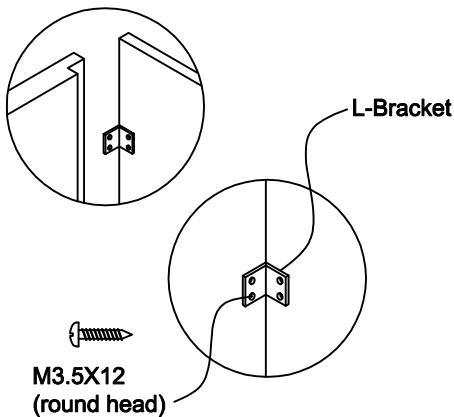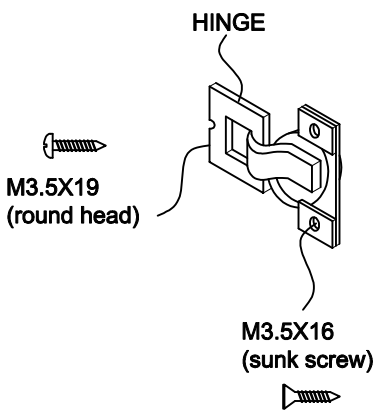


BLS Series Base Cabinet

2 Door
BLS33、BLS36


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	FRONT LEFT SIDE PANEL	1 PC
C	BACK LEFT SIDE PANEL	1 PC
D	FRONT RIGHT SIDE PANEL	1 PC
E	BACK RIGHT SIDE PANEL	1 PC
F	LZ BOTTOM	1 PC
G	BACK PANEL	1 PC
H	TOE KICK PLATE	1 SET
I	LZ SHELF	1 PC
K	DOOR PANEL	2 PCS
L	SUPPORT PANEL	1 PC

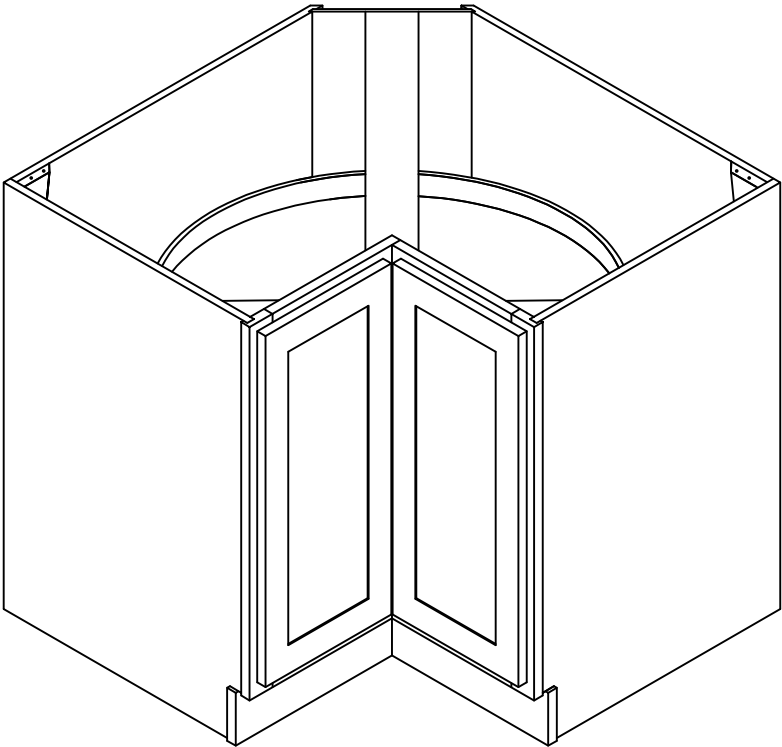


A8

STEP 1

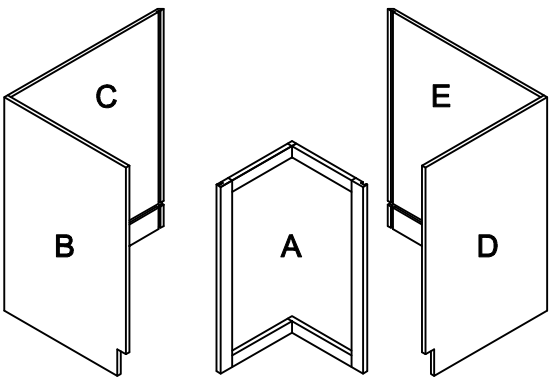


Position A,B,C,D & E as illustrated

STEP 2

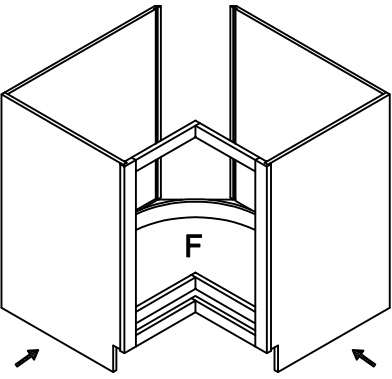


Put F down and attach A,B,C,D & E

STEP 3

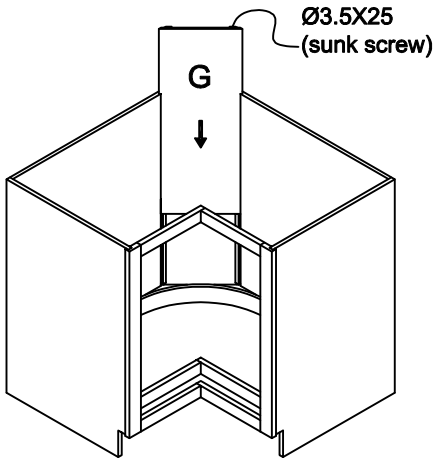


Attach G to C & E with screws

STEP 4

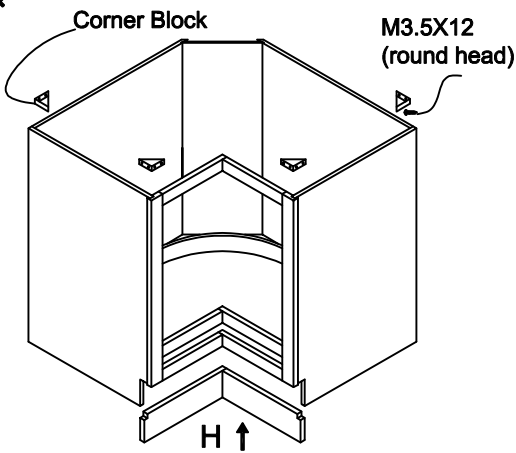


Attach corner block into corners of A,B,
C & E with round head screws
Attach H

STEP 5

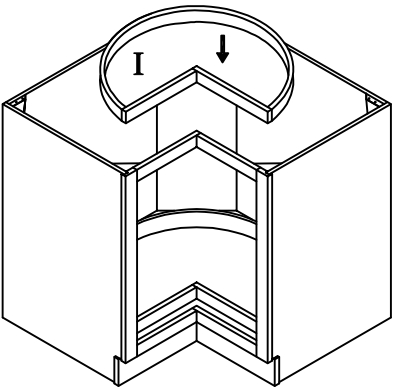


Insert I

STEP 6


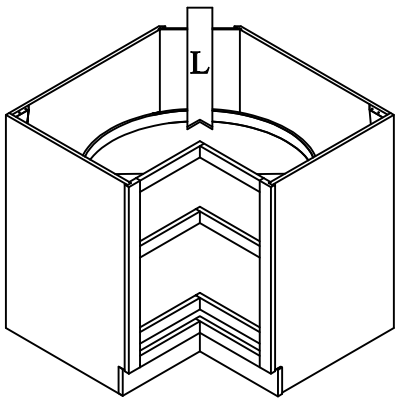


Attach L into A and G

STEP 7

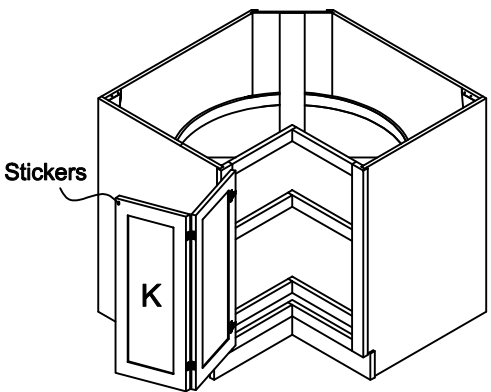

Attach K as illustrated
Attach cushion stickers

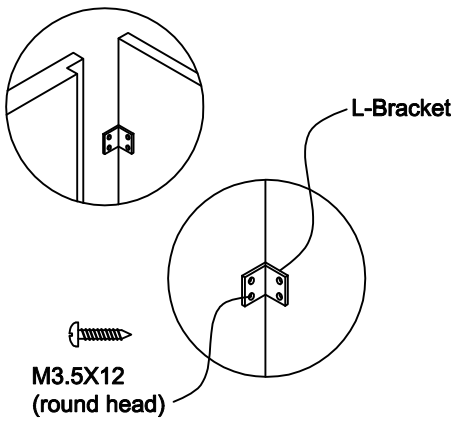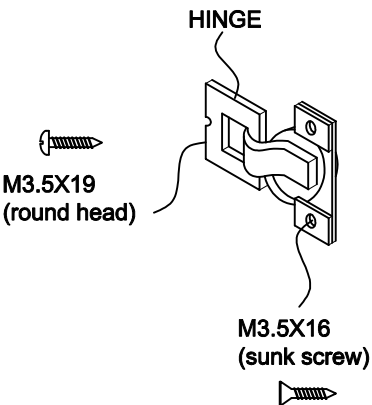


OC Series Cabinet

2 Door & 2 Drawer
OC 3084、OC3384、OC 3090、OC3390


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	TOP / BOTTOM PANEL	4 PCS
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DOOR PANEL	2 PCS
H	DRAWER	2 SET

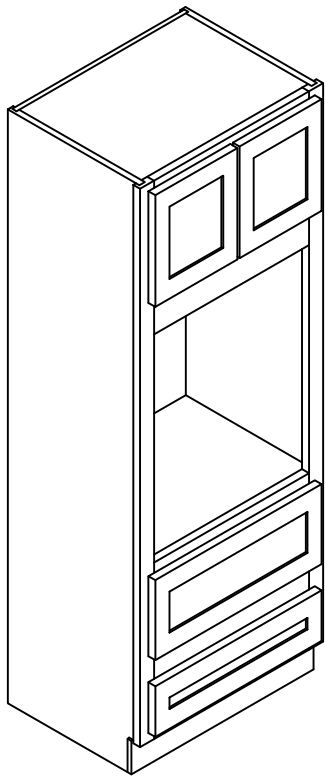


A9

STEP 1

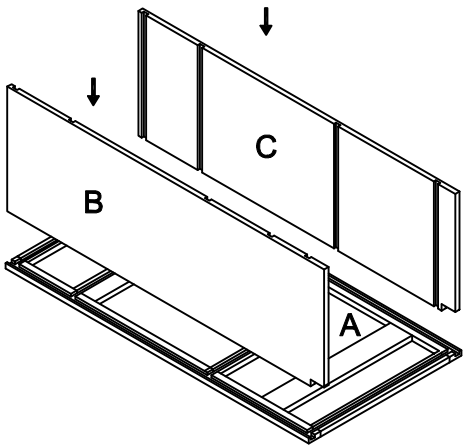


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

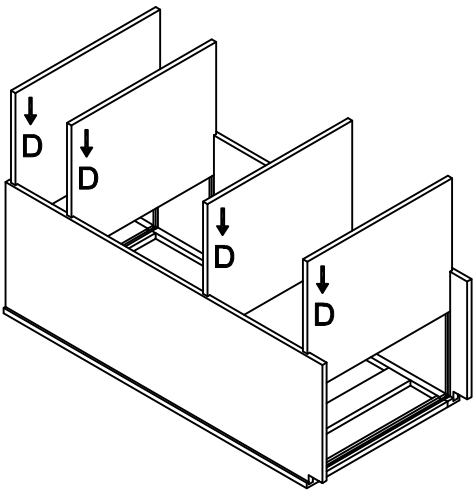


Slide D into grooves A, B & C

STEP 3



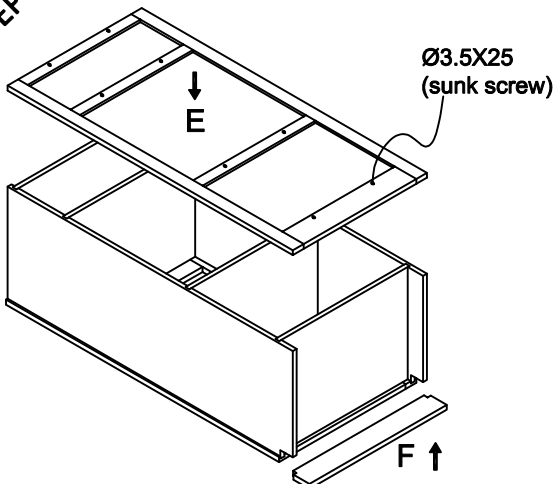


Attach E to the Box with screws
Attach F onto bottom of B & C with L-Bracket

STEP 4

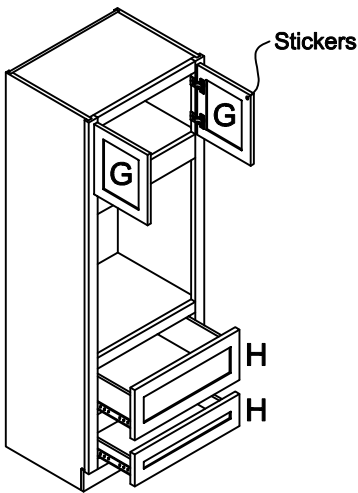

Attach G as illustrated, Attach H as illustrated
Attach cushion stickers

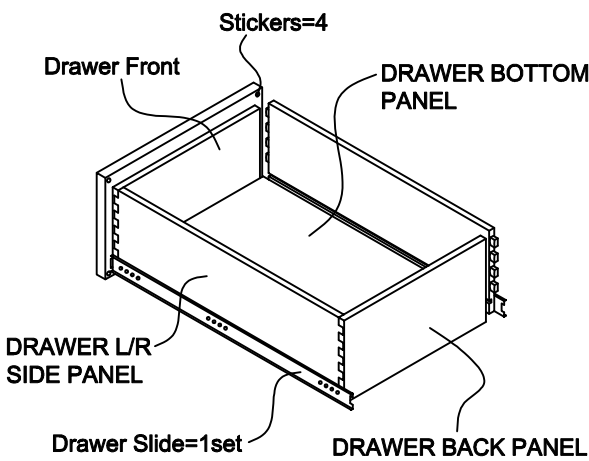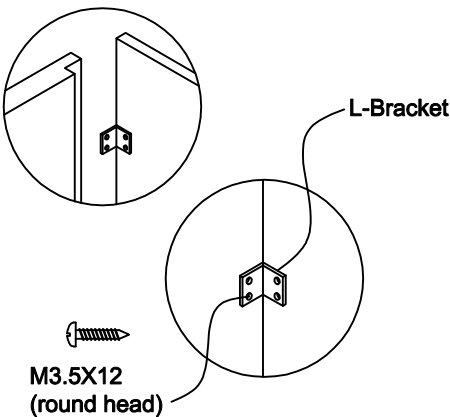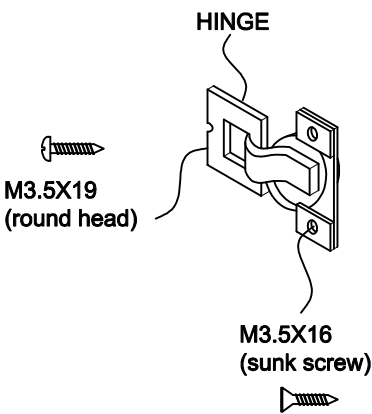


P Series Cabinet

2 Door, 3 Shelf
PC1884


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	TOP / BOTTOM PANEL	3 PCS
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	ADJUSTABLE SHELF	3 PCS
H	DOOR PANEL	2 PCS

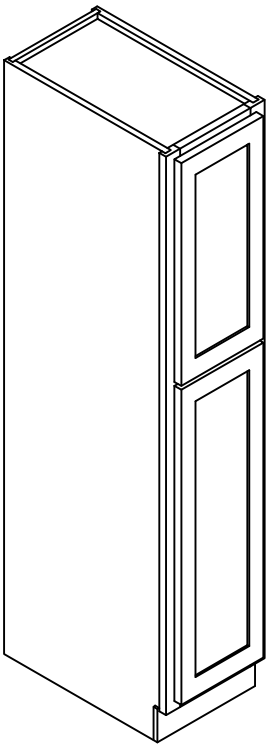


A11

STEP 1

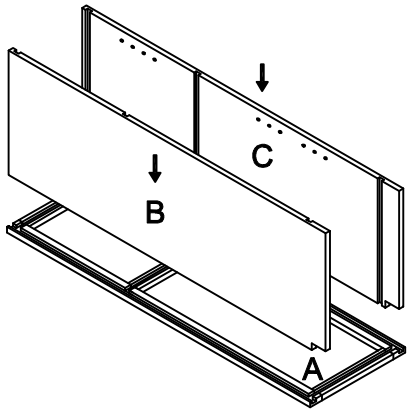


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

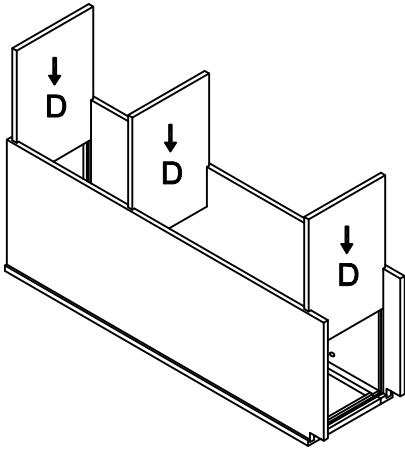


Slide D into grooves A, B & C

STEP 3

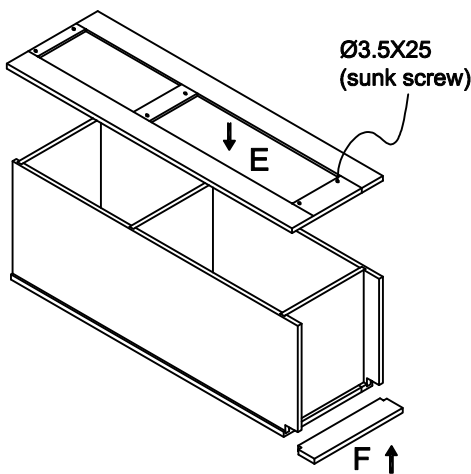


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4


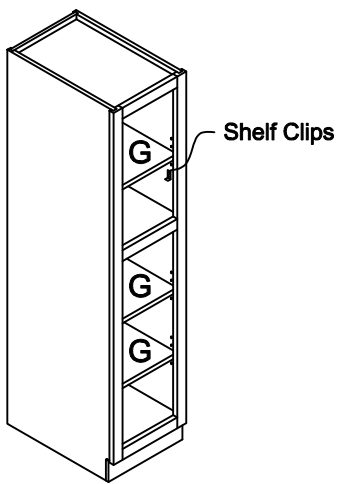


Insert the shelf clips then put G in

STEP 5

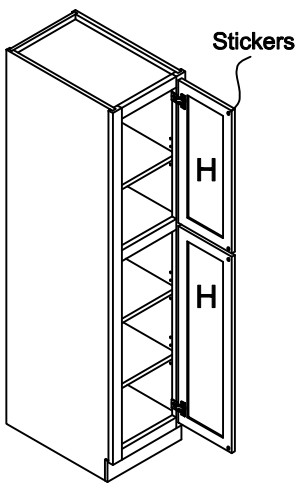

Attach H as illustrated
Attach cushion stickers

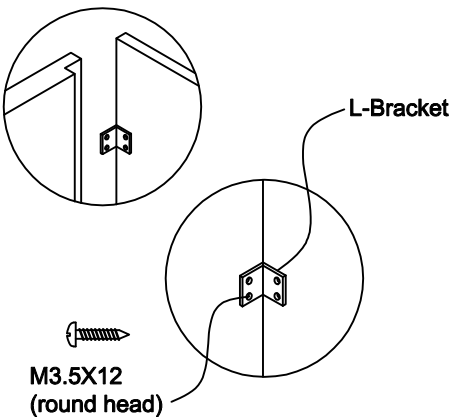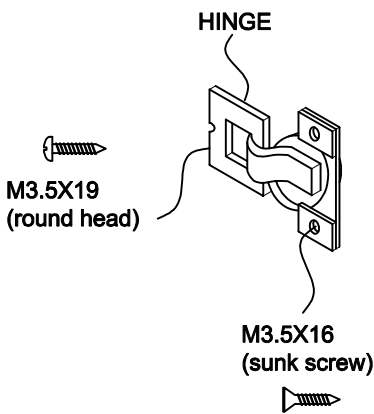


P Series Cabinet

4 Door, 3 Shelf
PC2484、PC3084、PC3684


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	TOP / BOTTOM PANEL	3 PCS
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	ADJUSTABLE SHELF	3 PCS
H	DOOR PANEL	4 PCS

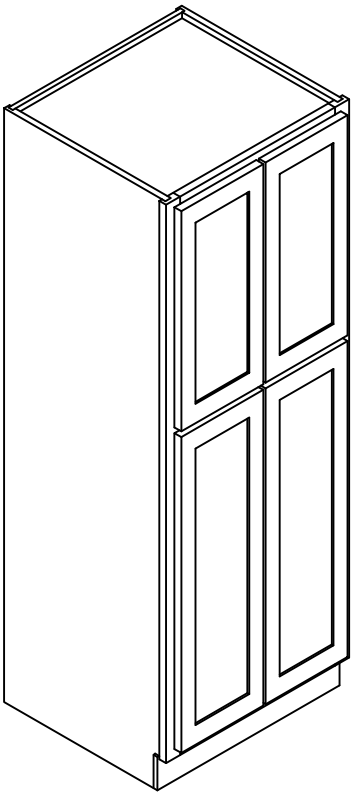


A13

STEP 1

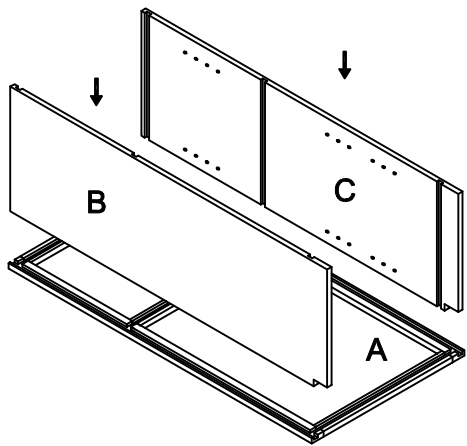


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

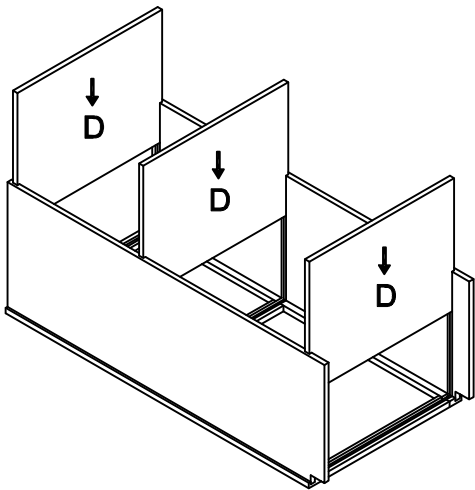


Slide D into grooves A, B & C

STEP 3

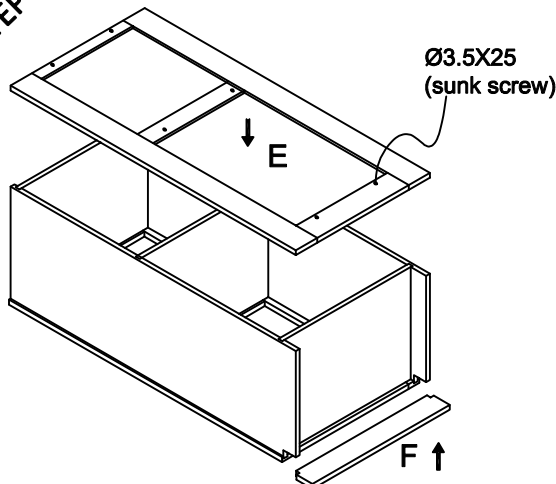


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4


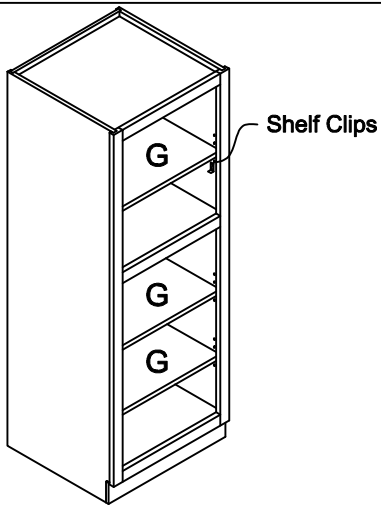


Insert the shelf clips then put G in

STEP 5

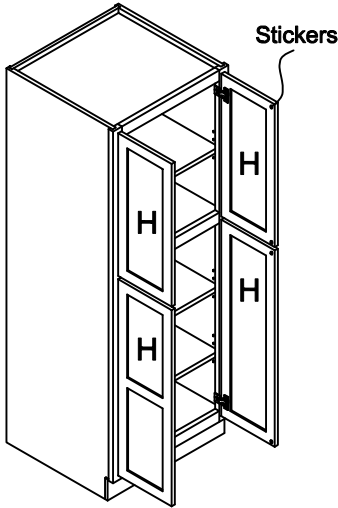

Attach H as illustrated
Attach cushion stickers

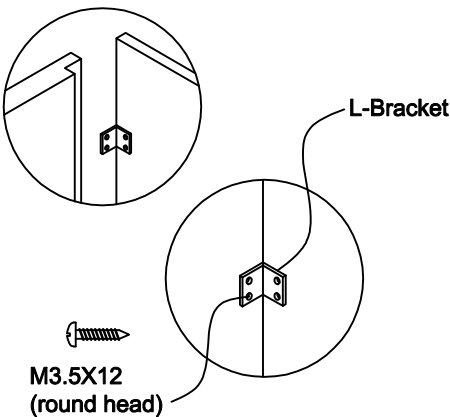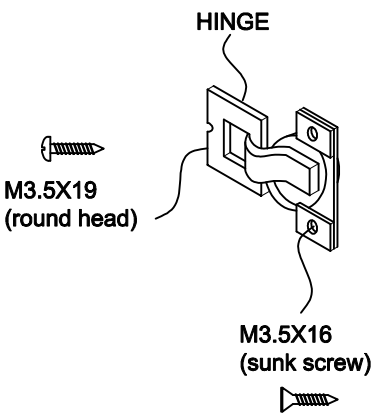


SB Series Base Cabinet

Step-by-Step Assembly Instructions

2 Door & 1 fake Drawer

SB30、SB33、SB36、SB42

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DOOR PANEL	2 PCS

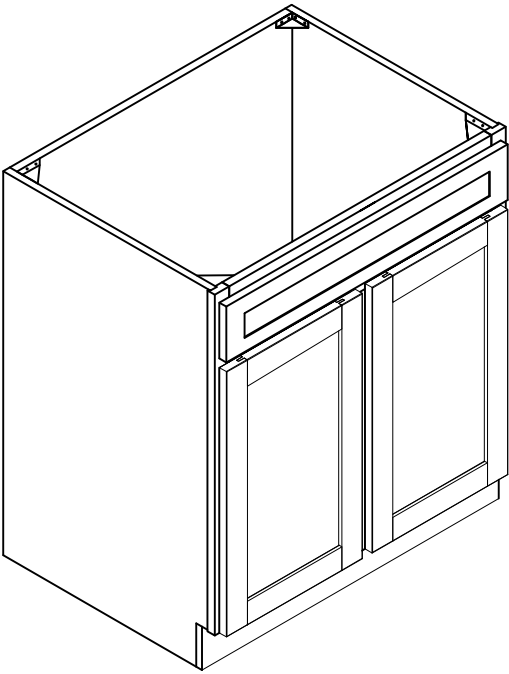

A15

STEP 1

Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

Slide D into grooves A, B & C

STEP 3

Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4

Attach corner block into corners of
A & B & C & E with round head screws

STEP 5

Attach G as illustrated
Attach cushion stickers

HINGE

M3.5X19
(round head)

M3.5X16
(sunk screw)

L-Bracket


M3.5X12
(round head)

VSD Series Cabinet









2 Door, 2 Drawer & 1 fake Drawer
VSD36-L、VSD36-R

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DOOR PANEL	2 PCS
H	DRAWER	2 SET

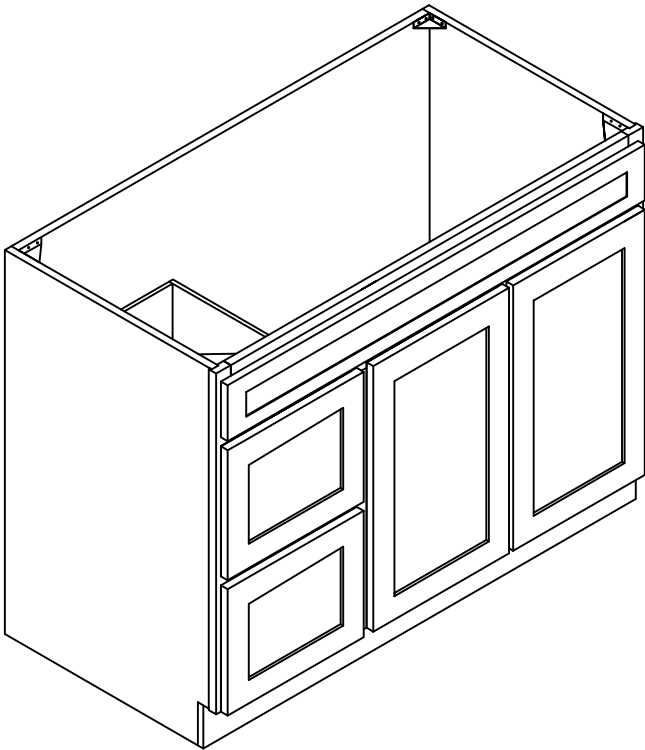

A18

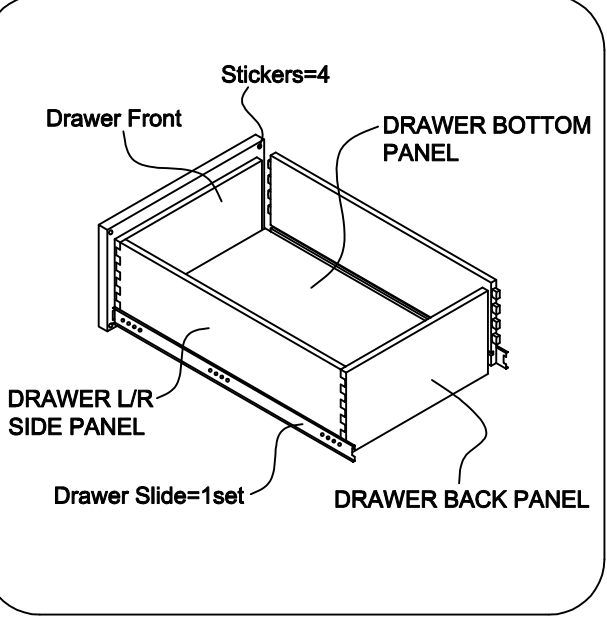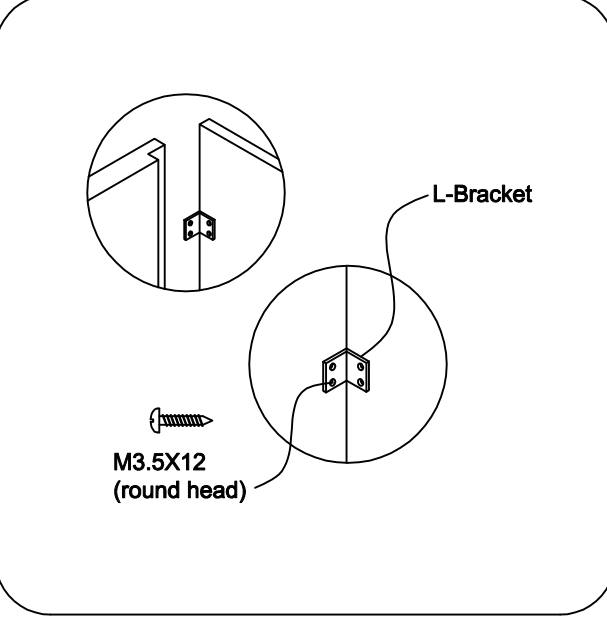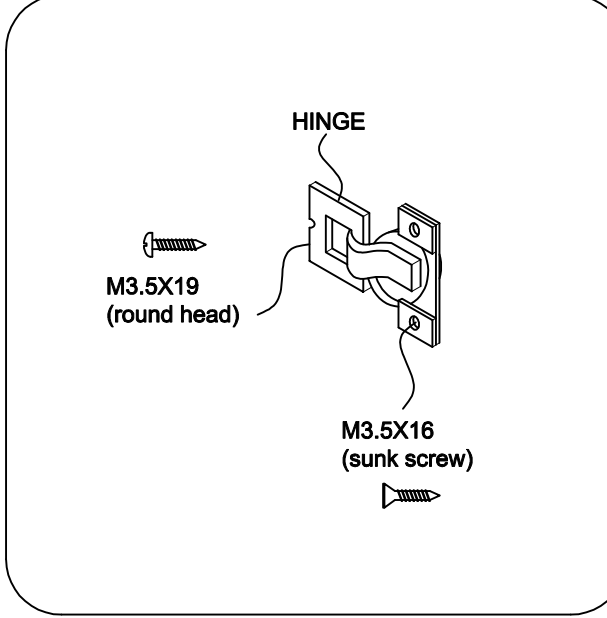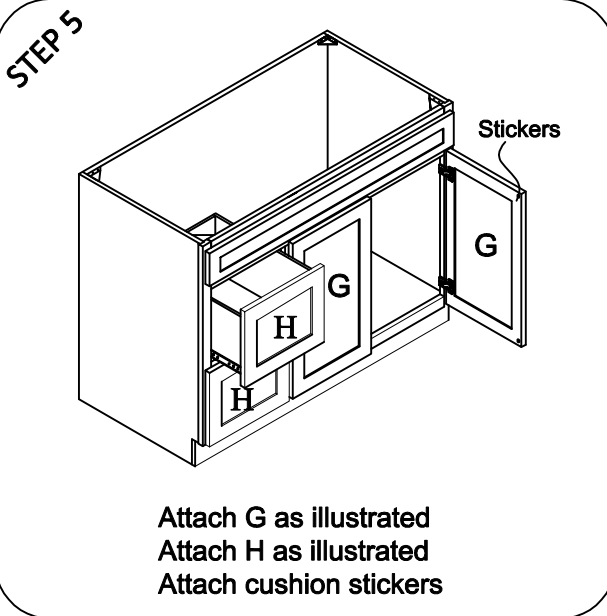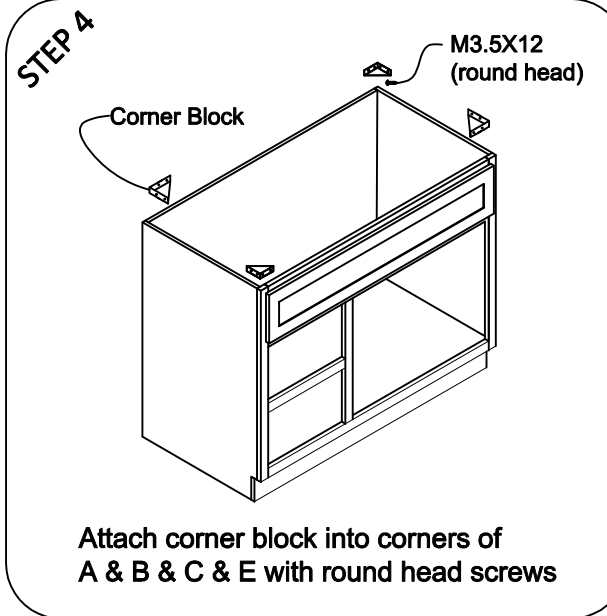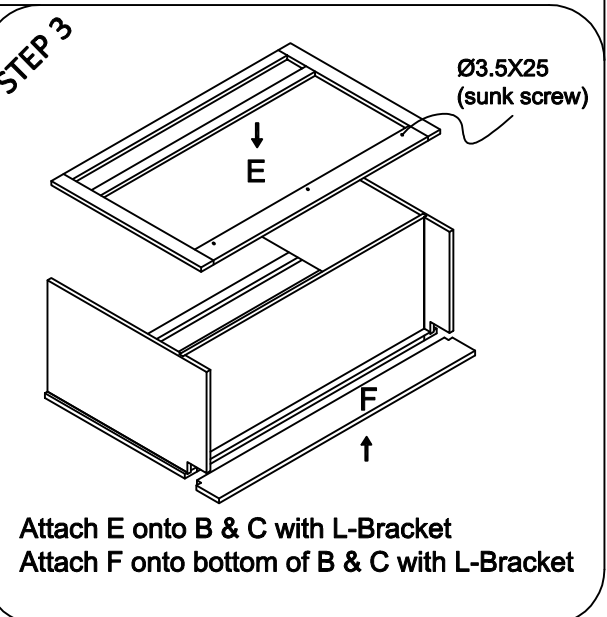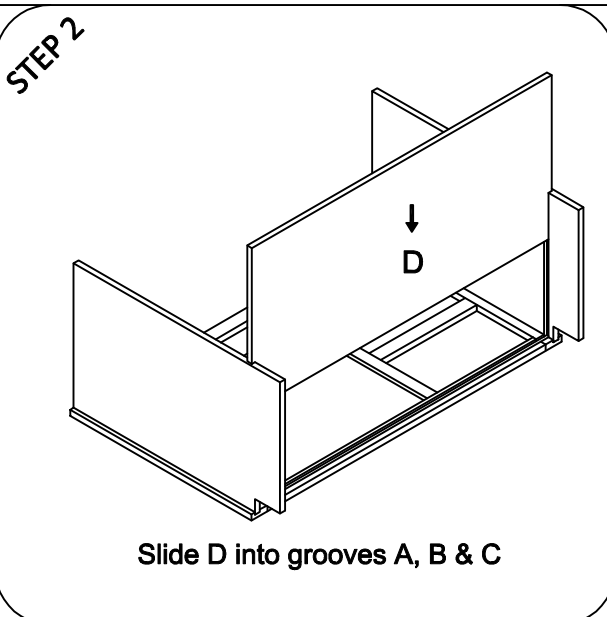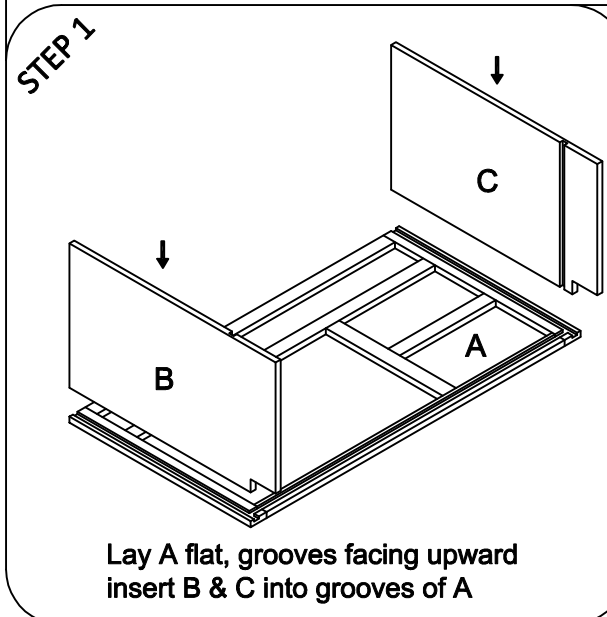


VSD Series Cabinet









2 Door, 2 Drawer & 1 fake Drawer
VSD42-L、VSD42-R

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DOOR PANEL	2 PCS
H	DRAWER	3 SET

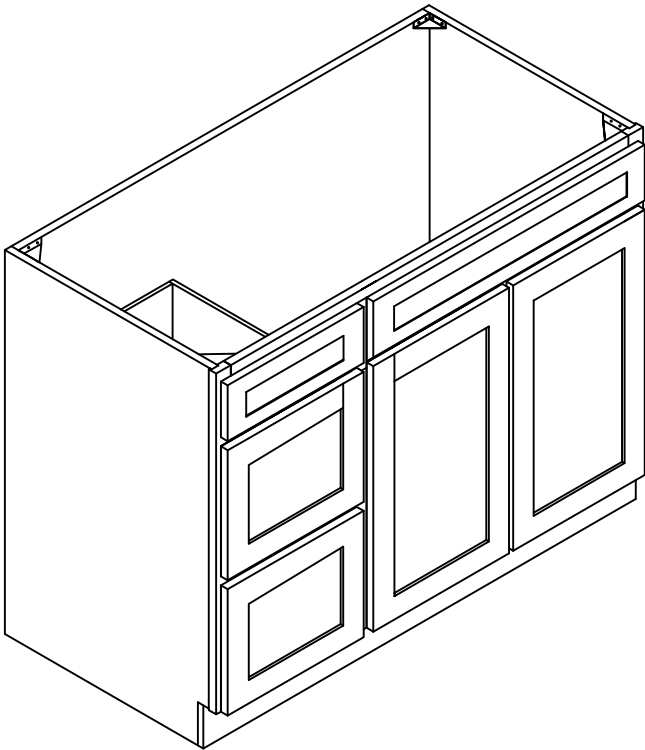

A19

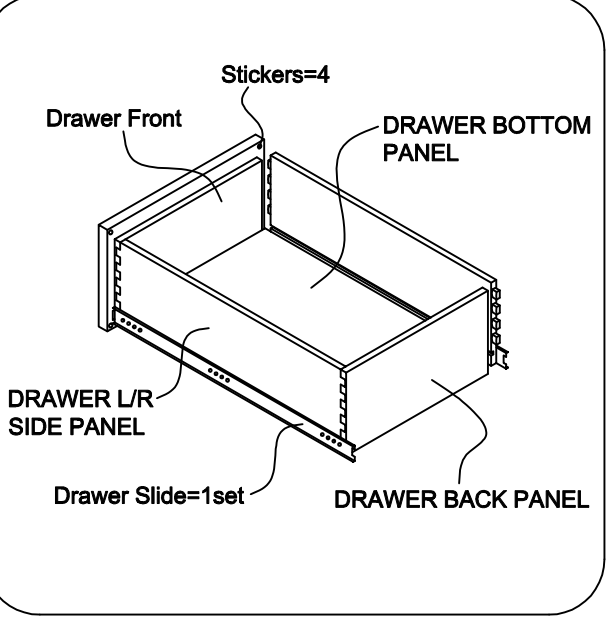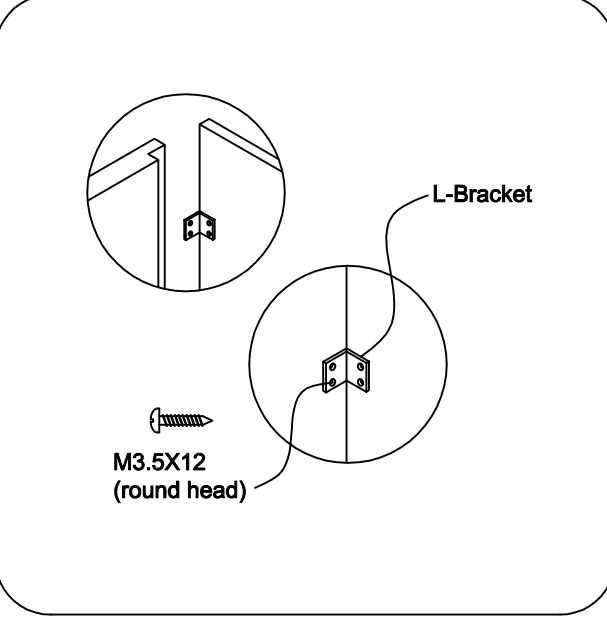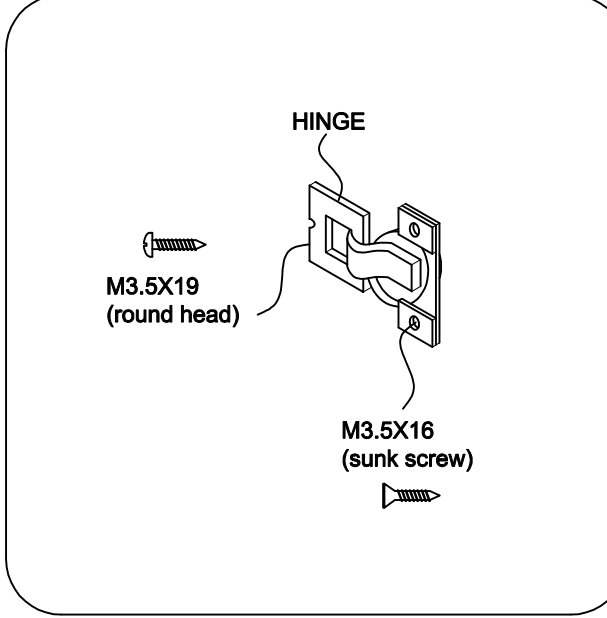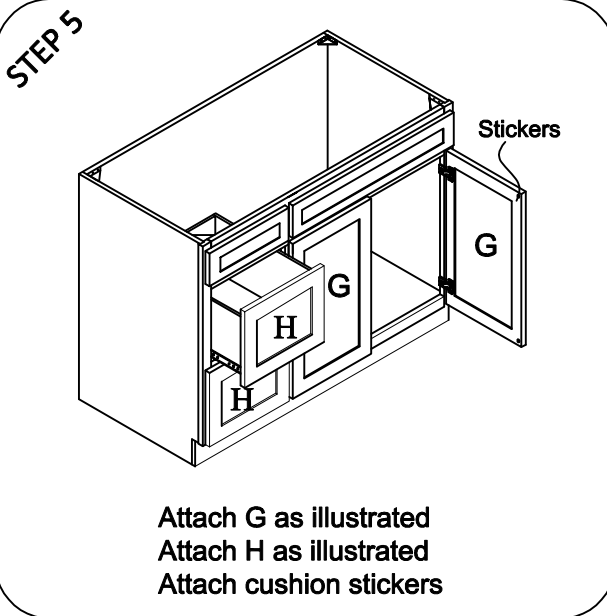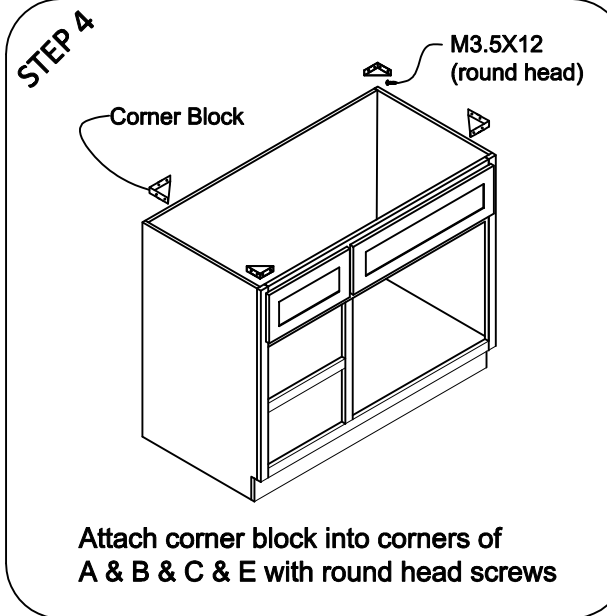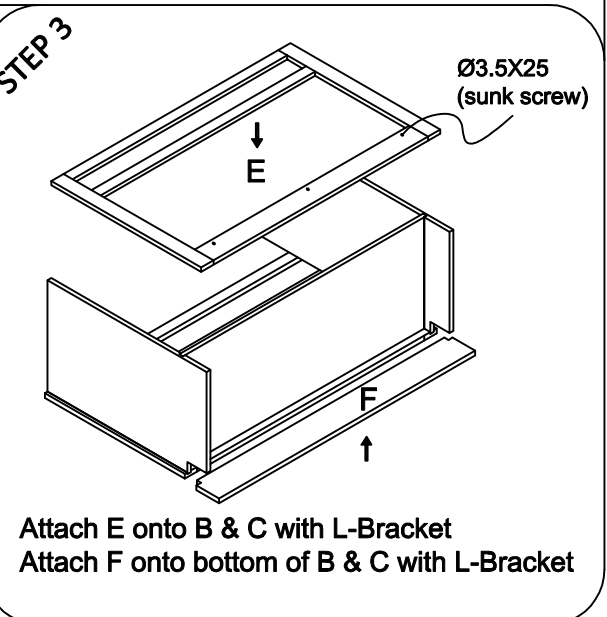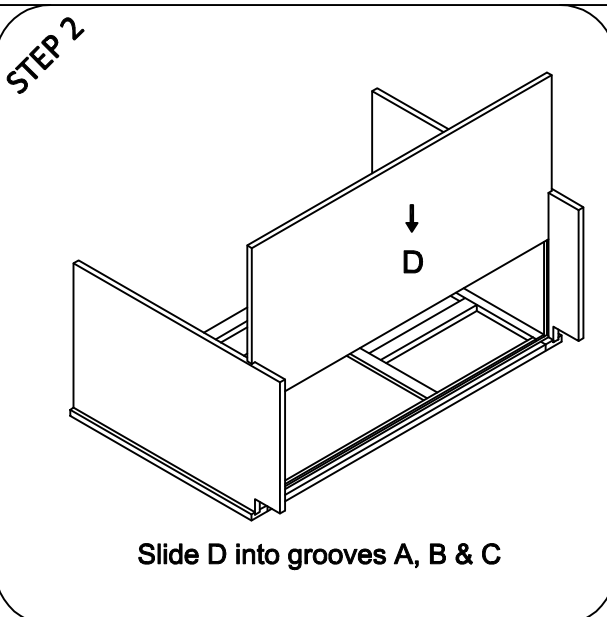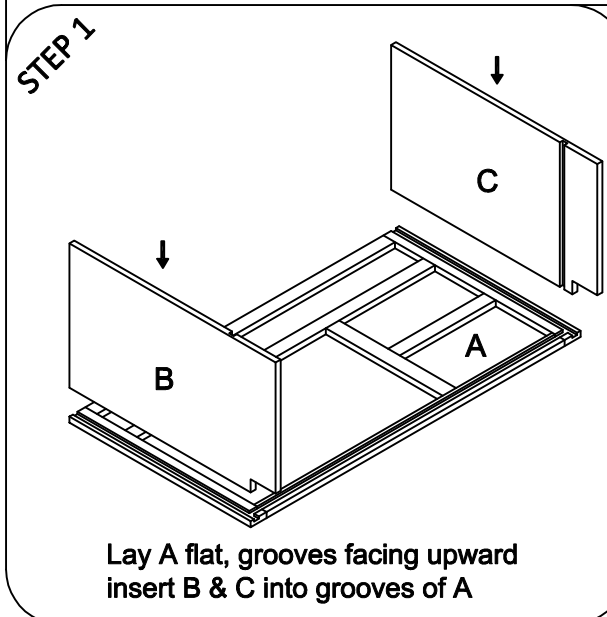


BMC Series Base Cabinet

Step-by-Step Assembly Instructions

1 Drawer


BMC24、BMC27、BMC30

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	2 PCS
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DRAWERS	1 SET

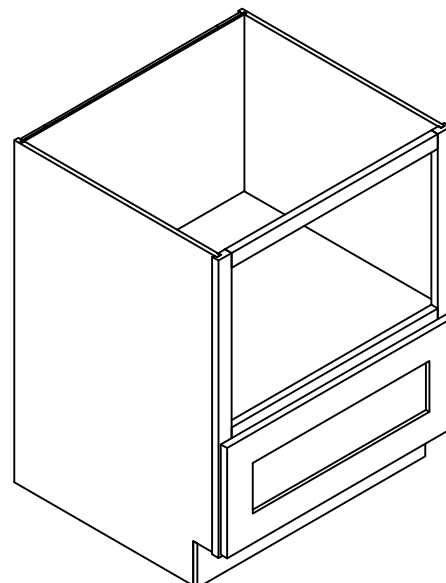


A20

STEP 1

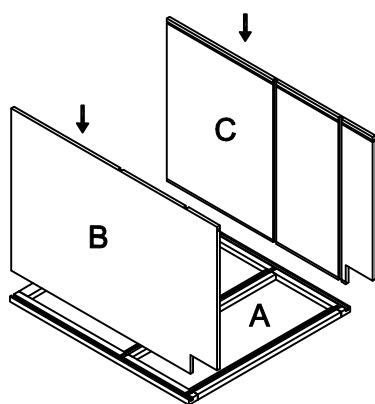


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

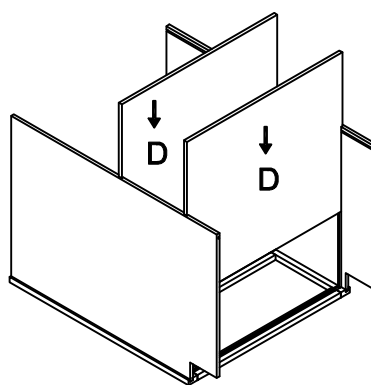


Slide D into grooves A, B & C

STEP 3

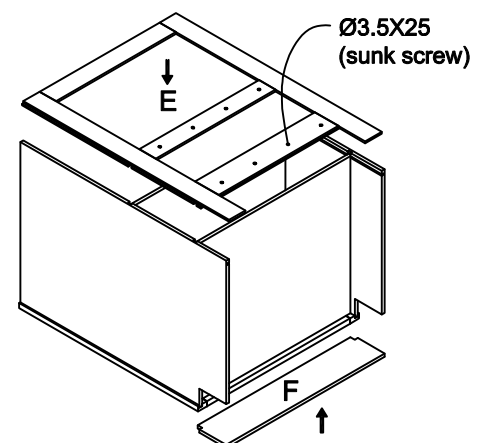


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4


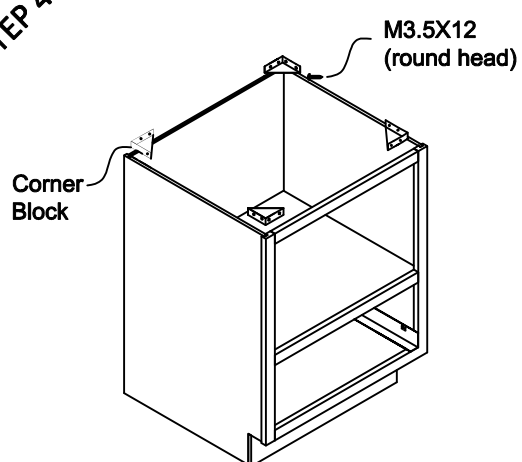


Attach corner block into corners of
A & B & C & E with round head screws

STEP 5

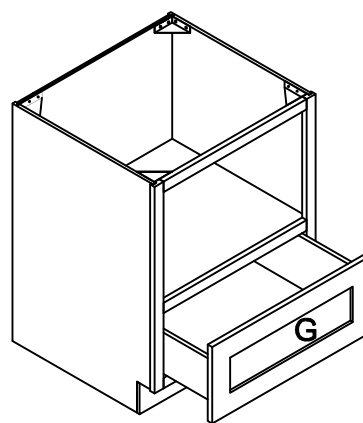

Attach G as illustrated

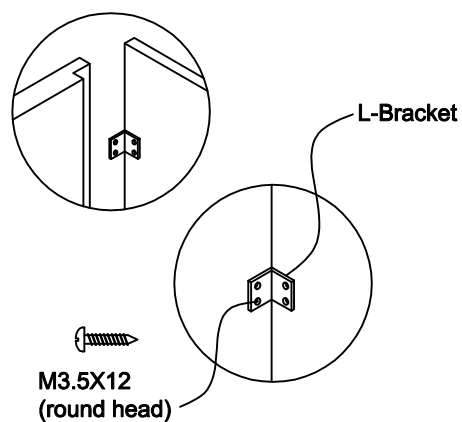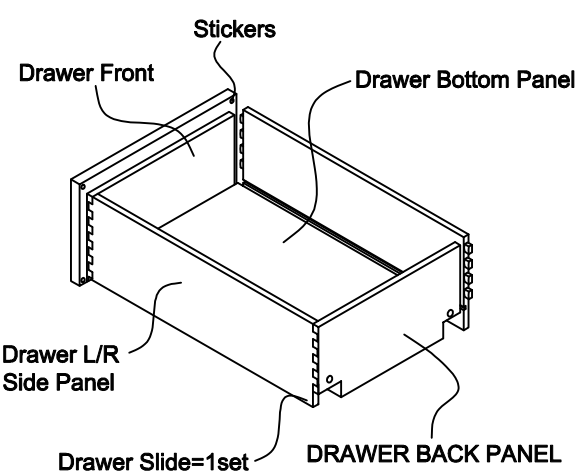


VSD Series Cabinet

2 Door, 6 Drawer & 1 fake Drawer









VSD48-6D、VSD60-6D

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
G	DOOR PANEL	2 PCS
H	DRAWER	6 SET

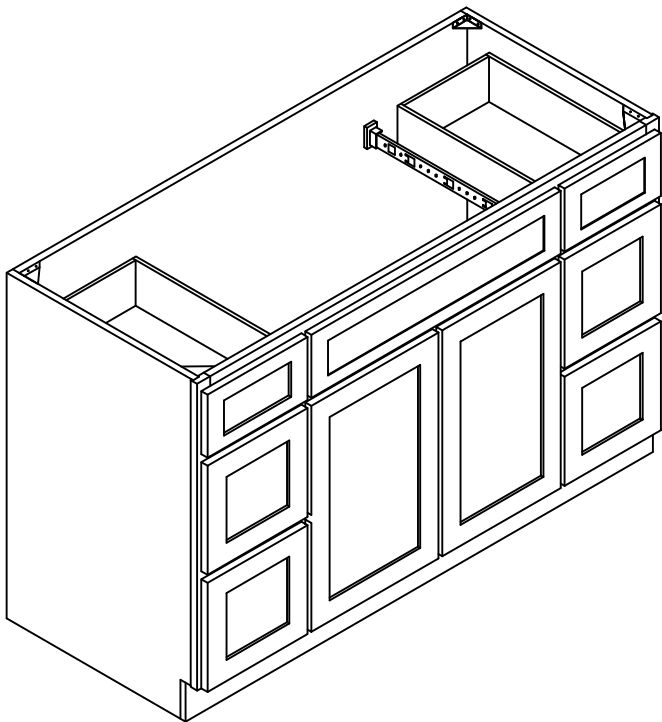

A22

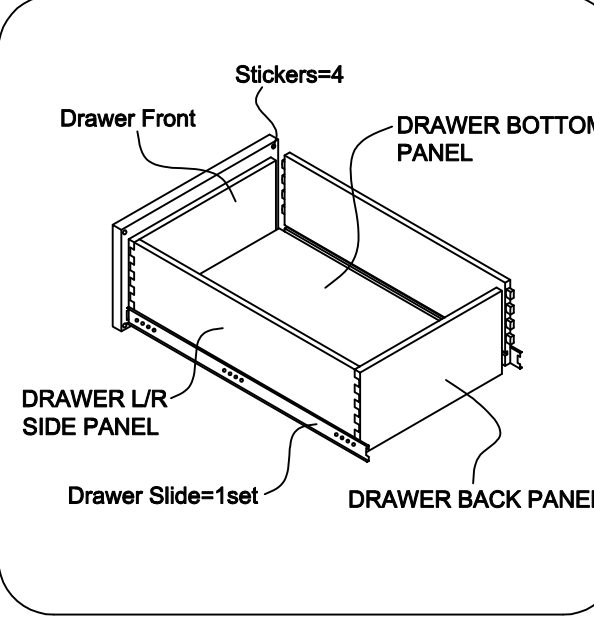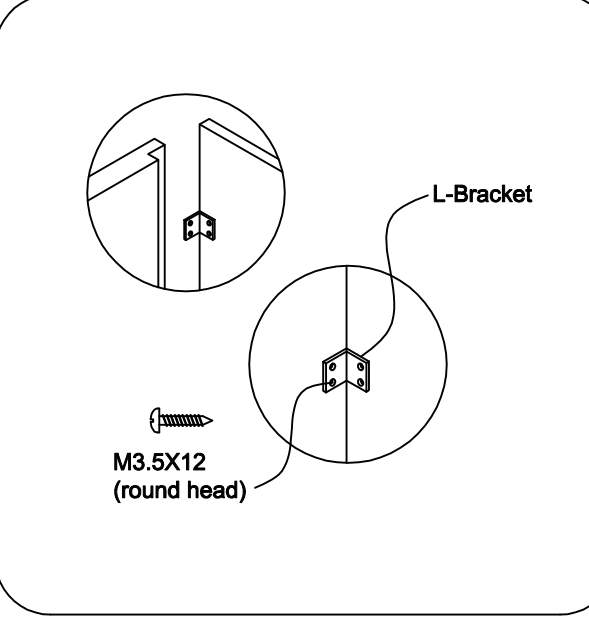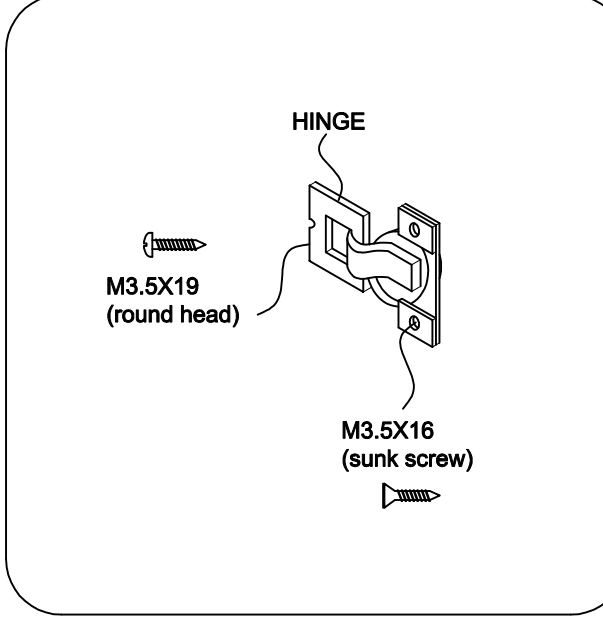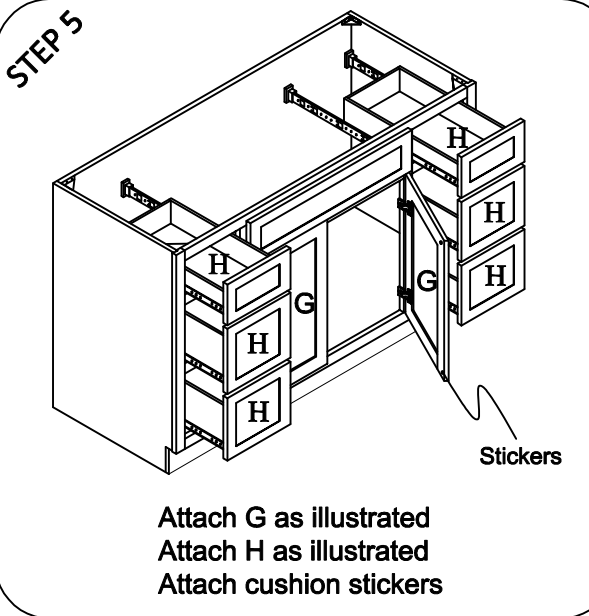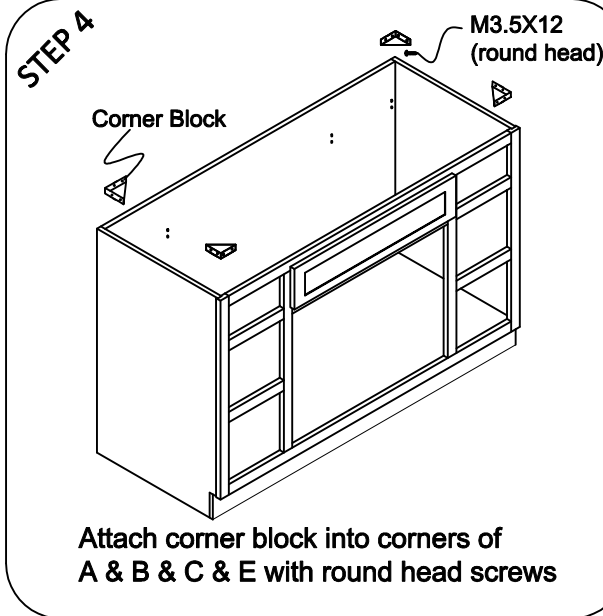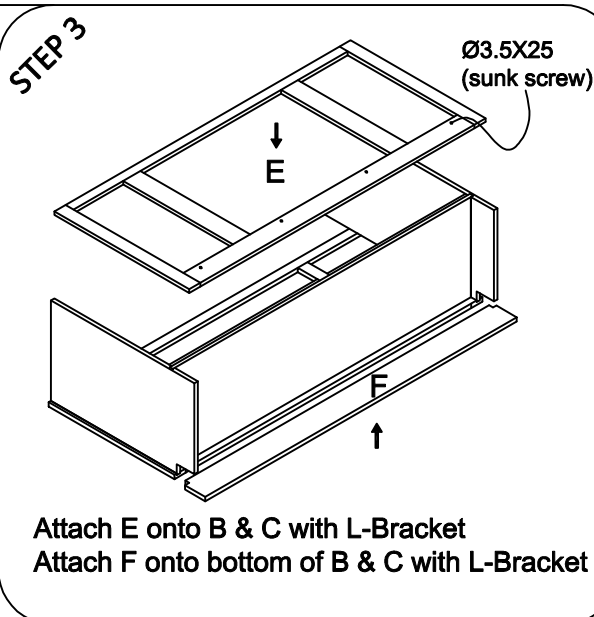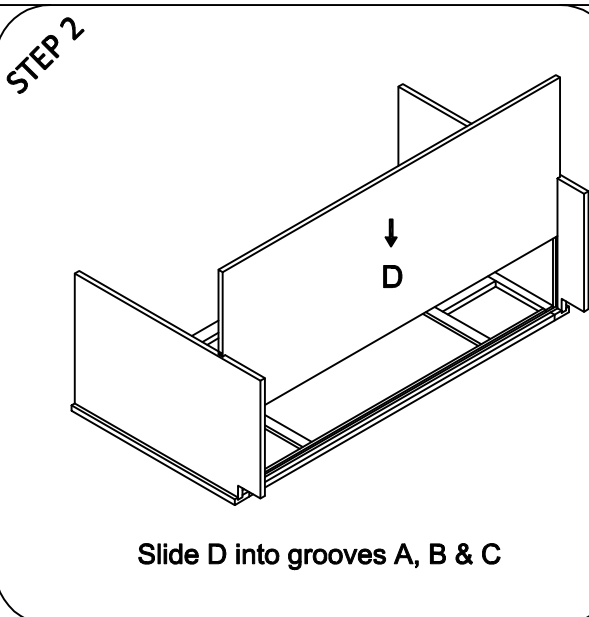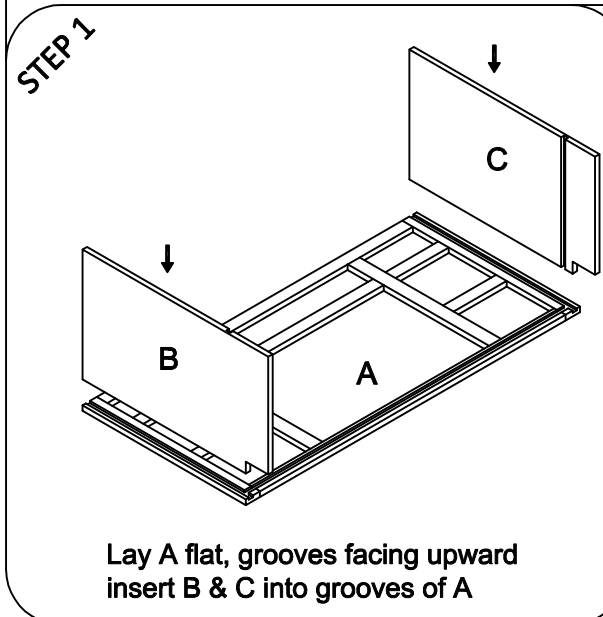


VSD Series Cabinet









4 Door, 3 Drawer & 2 fake Drawer
VSD60-3D、VSD72-3D

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PLATE	1 PC
H	DOOR PANEL	4 PCS
I	DRAWER	3 SET

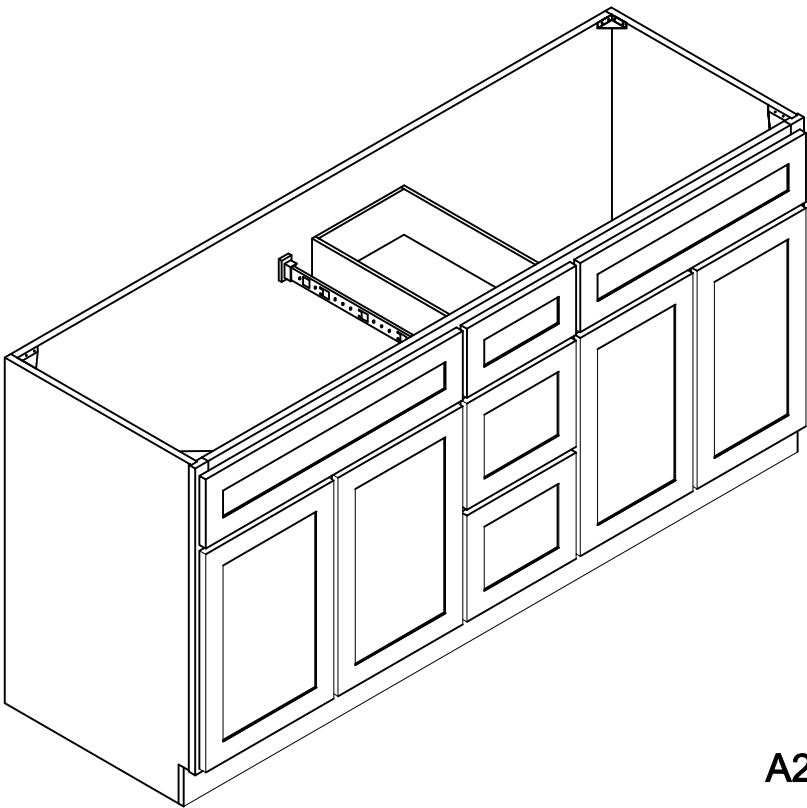

A23

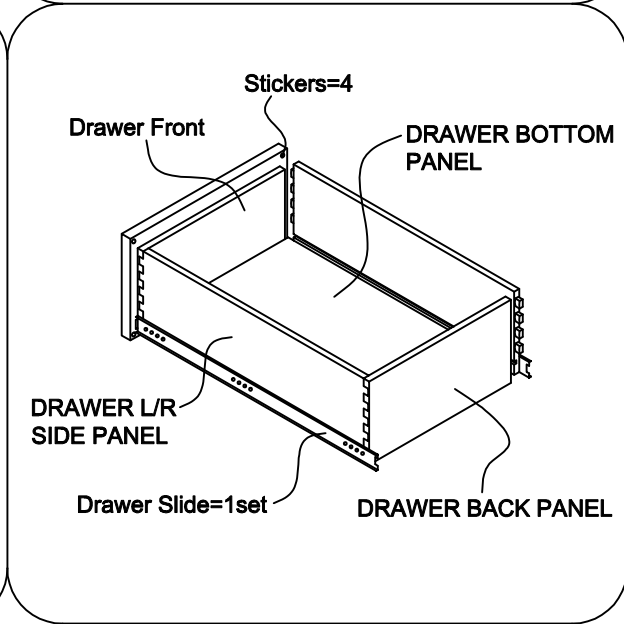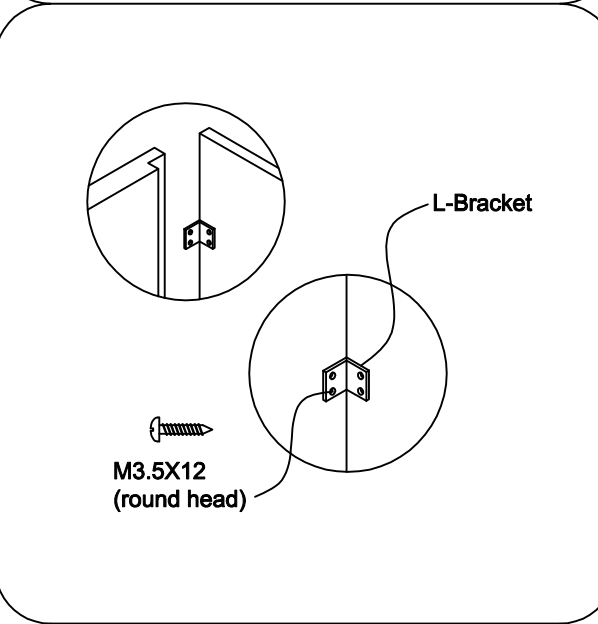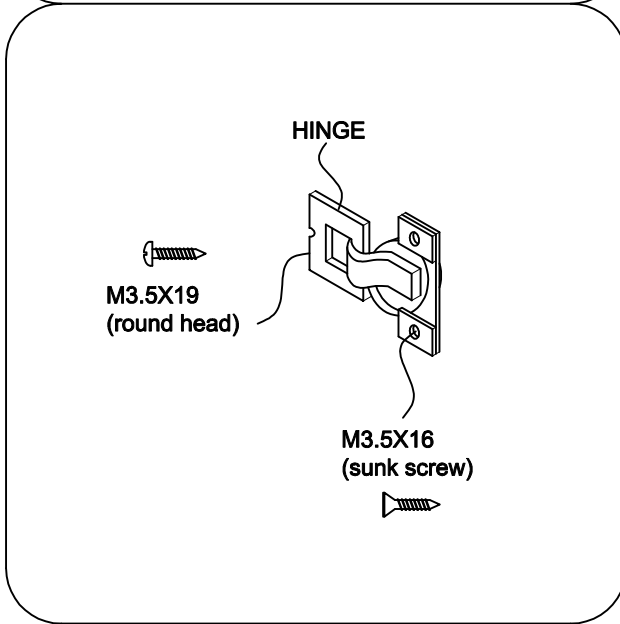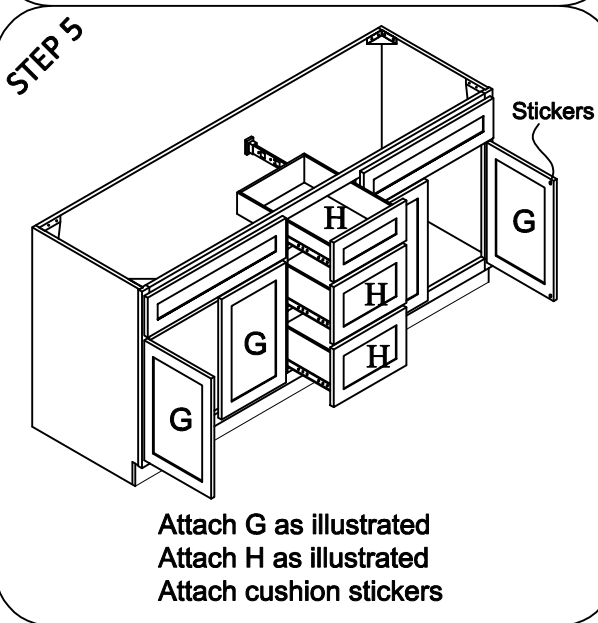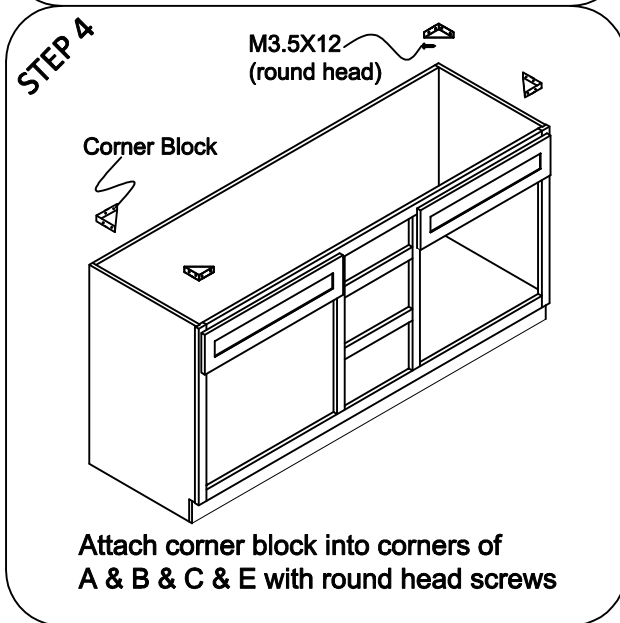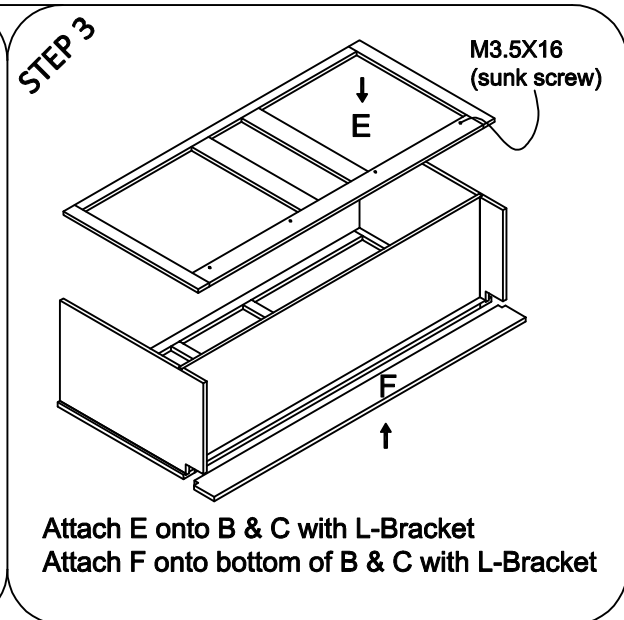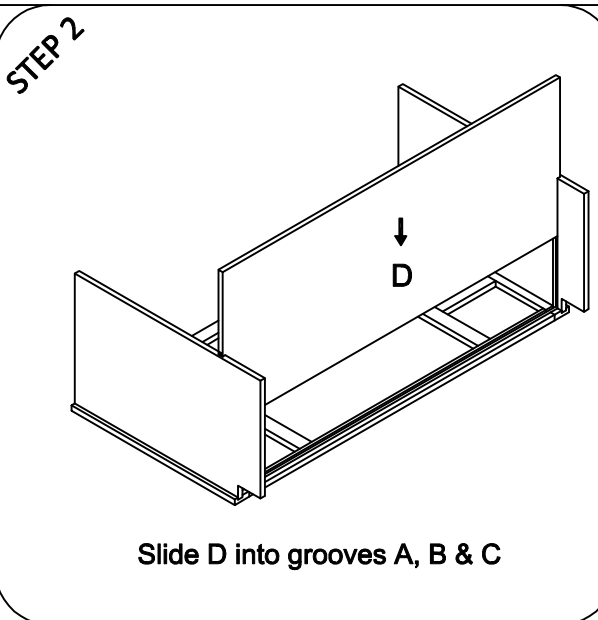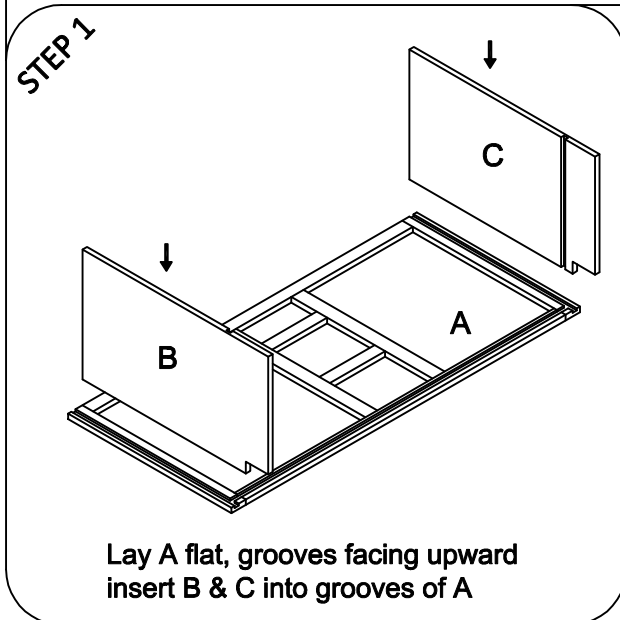


DSB Series Base Cabinet

DSB 42


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	FRONT L/R SIDE PANEL	2 PCS
C	BOTTOM PANEL	1 PC
D	BACK L/R SIDE PANEL	2 PCS
E	TOE KICK PANEL	1 PC
F	BACK PANEL	1 PC
G	DOOR	2 PCS

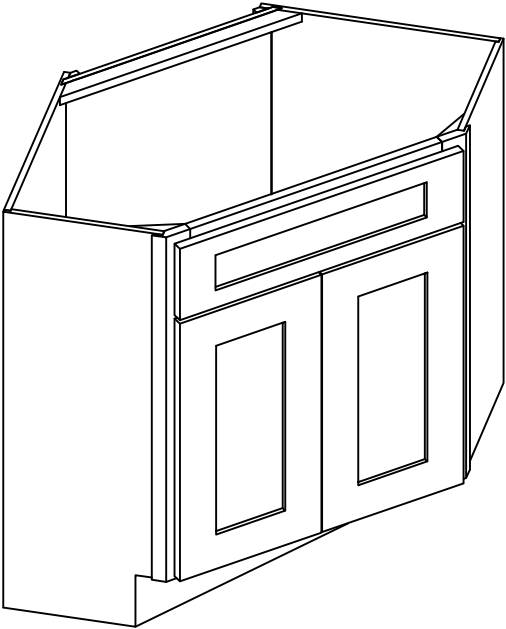


A25

STEP 1

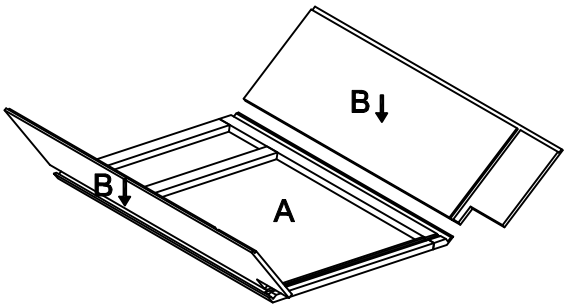


Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

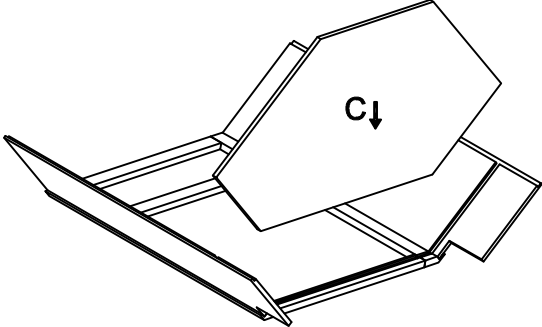


Slide C into grooves A & B

STEP 3

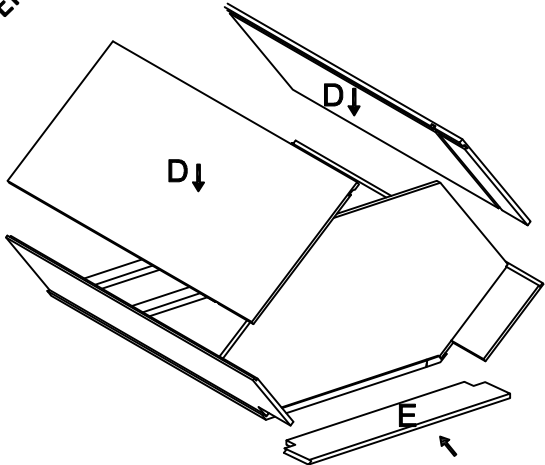


Attach D onto B & C with L-Bracket
Attach E onto bottom of B with L-Bracket

STEP 4


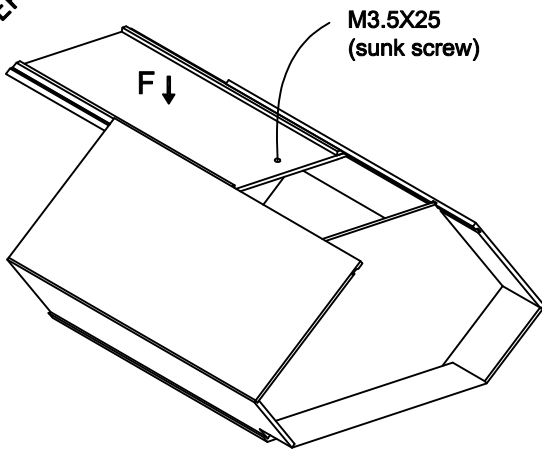


Attach F to D with screws
Lock it as illustrated

STEP 5

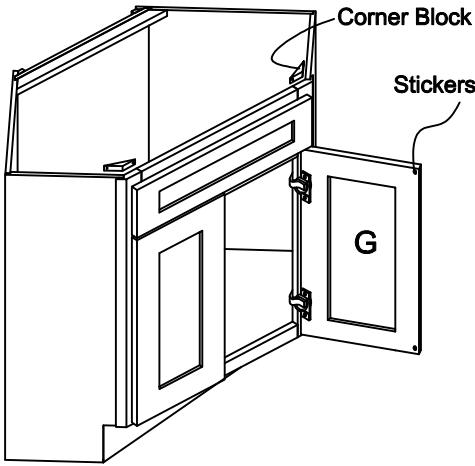

Attach corner block into corners of A,B
with round head screws
Attach G and cushion stickers illustrated

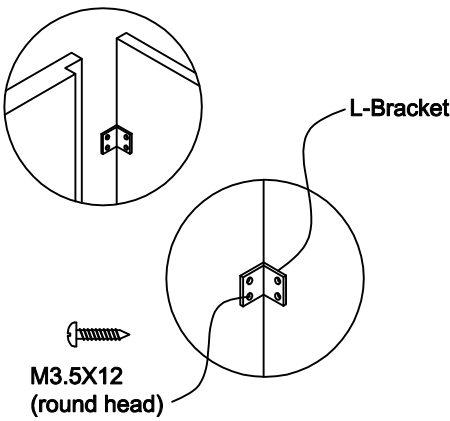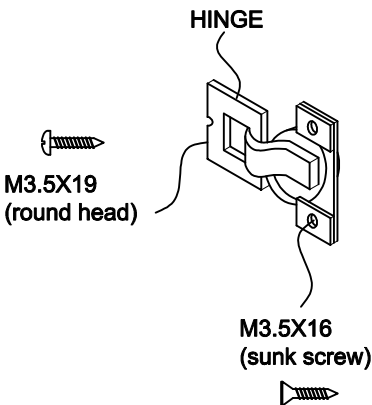


BWB Series Base Cabinet

BWB18-N


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PCS
C	LEFT SIDE PANEL	1 PCS
D	TOP & BOTTOM PANEL	2 PCS
E	BACK PANEL	1 PC
F	TOE KICK PANEL	1 PC
G	DRAWERS	2 SET

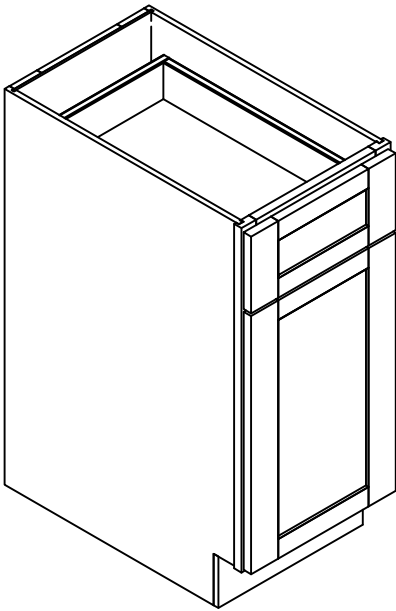


A26

STEP 1

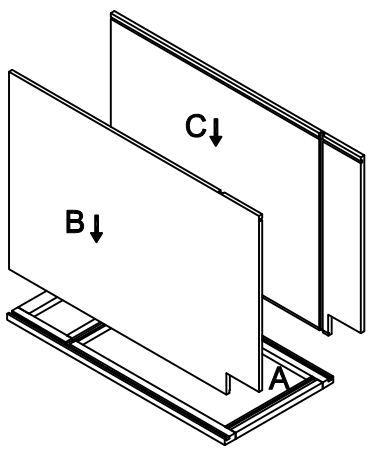


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

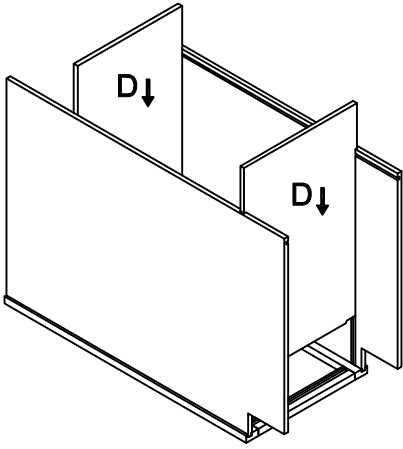


Slide D into grooves A, B & C

STEP 3

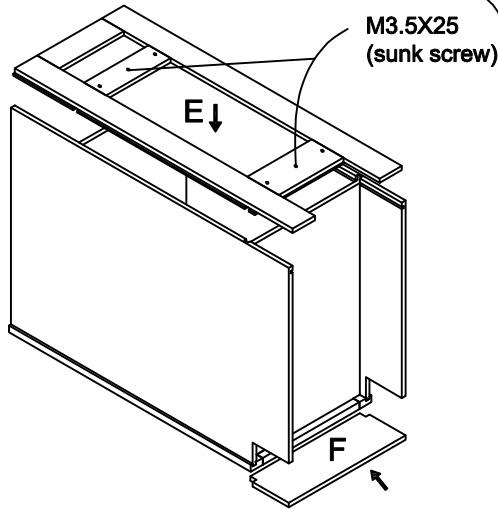


Attach E onto B & C with L-Bracket
Attach F onto bottom of B & C with L-Bracket

STEP 4



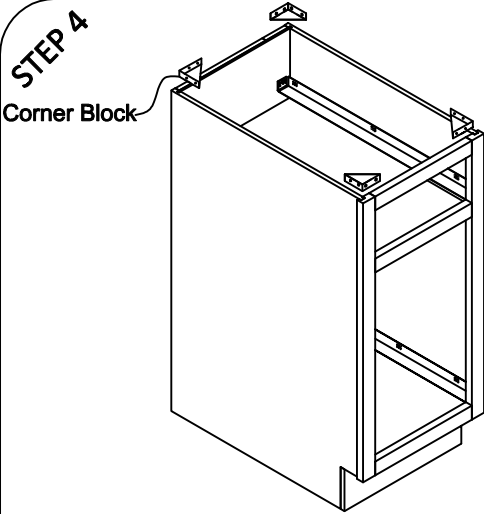


Attach corner block into corners of
A & B & C & E with round head screws

STEP 5

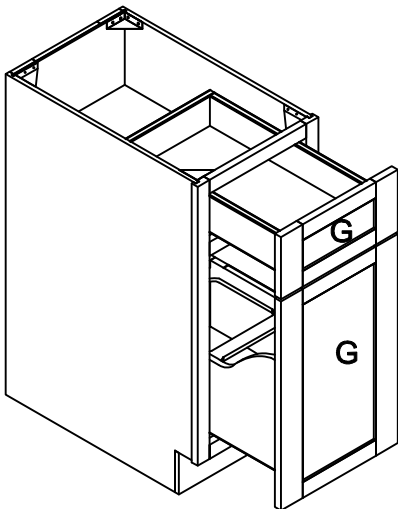

Attach G as illustrated

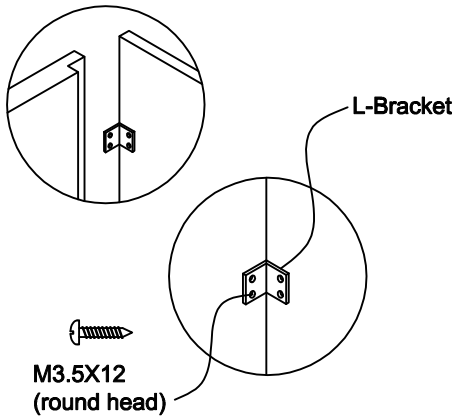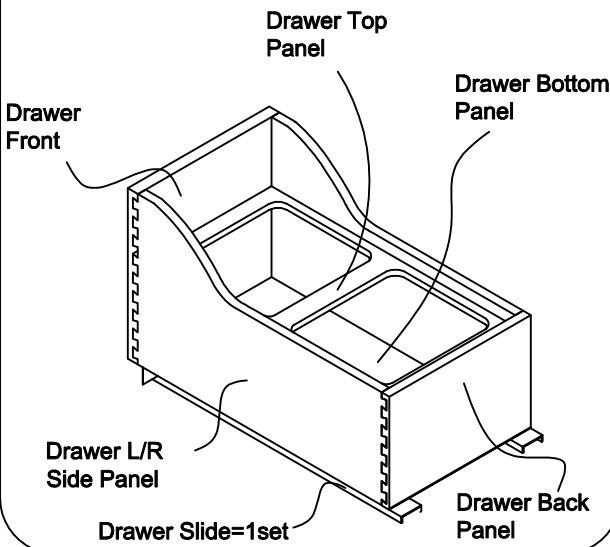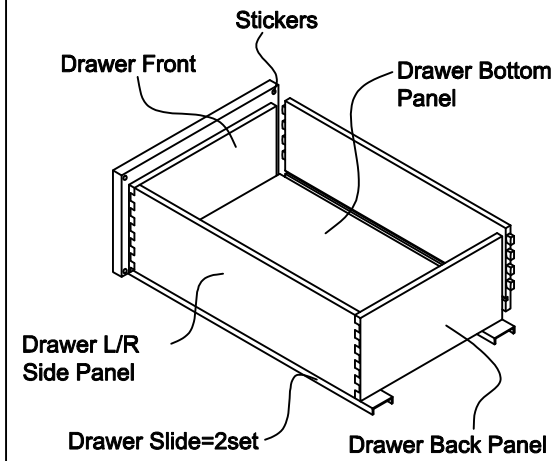


BOES Series Base Cabinet

BOE09、BOE12


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT SIDE PANEL	1 PC
B	BACK SIDE PANEL	1 PC
C	TOP & BOTTOM PANEL	2 PCS
D	SHELF PANEL	2 PCS

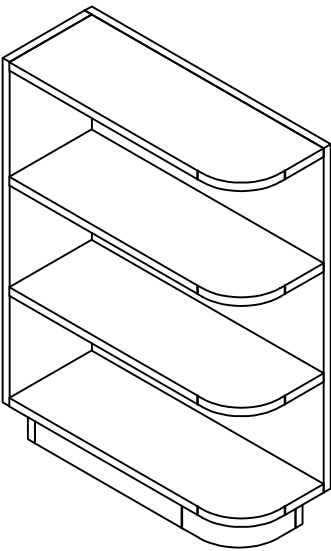


A27

STEP 1

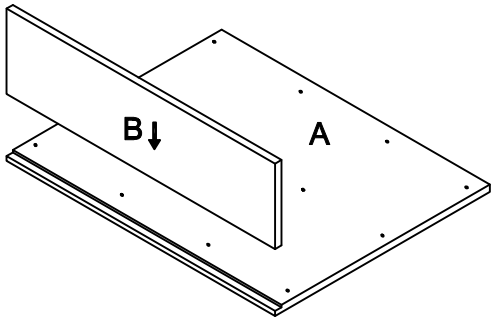


Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

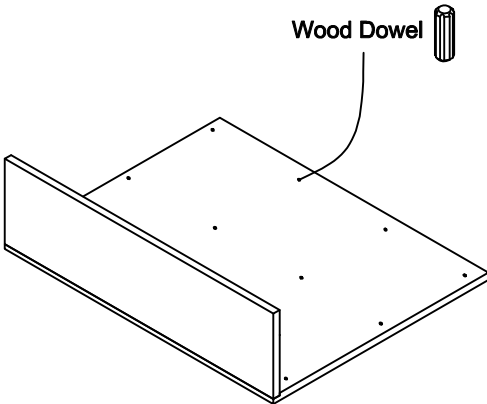


Insert wood dowel

STEP 3

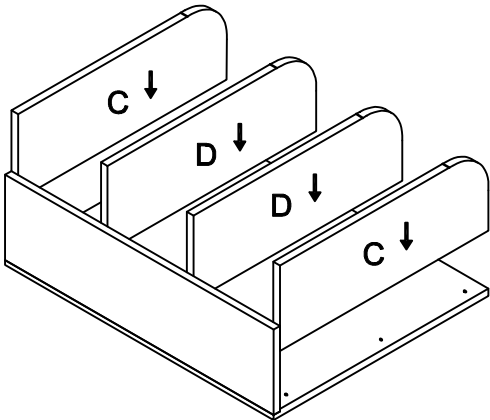

Attach D & C into A & B

STEP 4

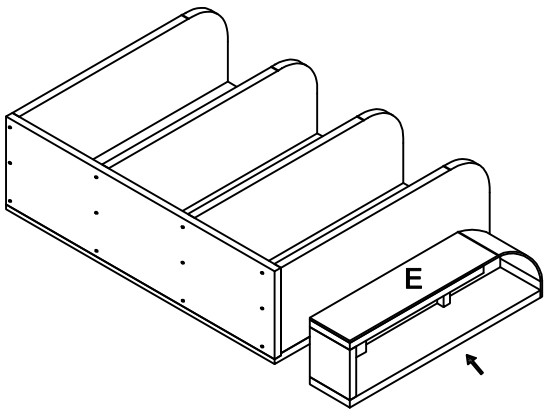

Attach E onto bottom of C


B Series Base Cabinet

1 Door, 2 Shelf

Step-by-Step Assembly Instructions

BEC24- L/R

CODE	ITEM	QTY
A	FRONT FRAME	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	TOE KICK PANEL	1 PC
G	ADJUSTABLE SHELF	2 PCS
H	DOOR PANEL	1 PC

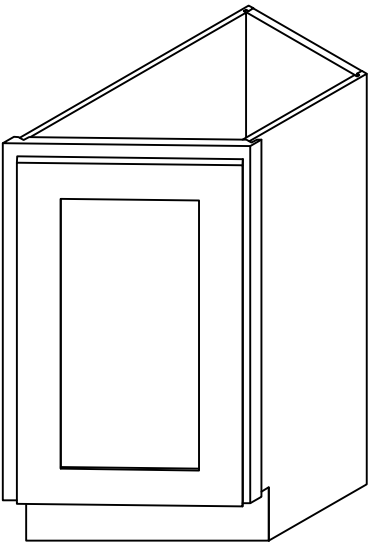


A28

STEP 1




STEP 2

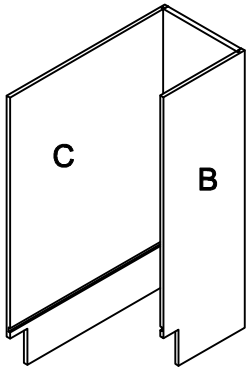


Insert E into slots B and C

STEP 3

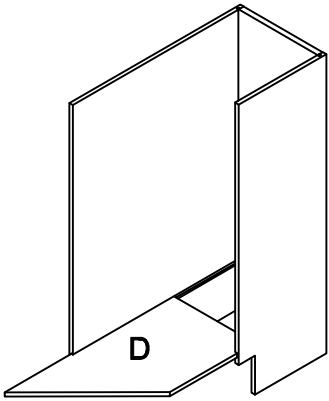


Insert D

STEP 4

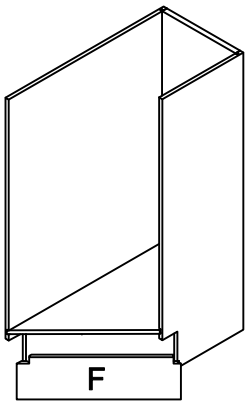


Attach F into B & C

STEP 5

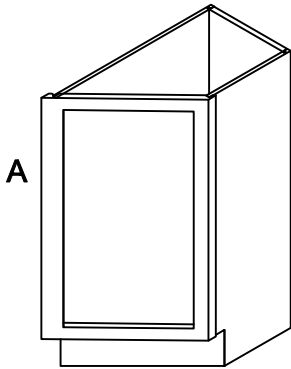


Attach A into B & C

STEP 6

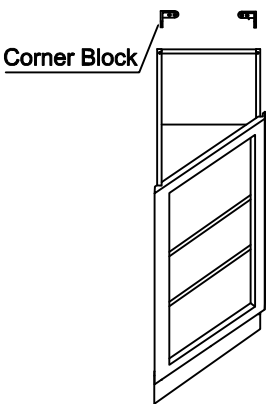

Attach corner block into corners of B & C & E with round head screws

STEP 7

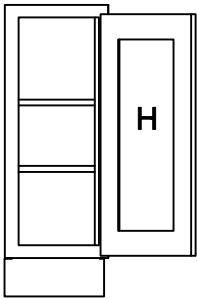


Attach H and cushion stickers illustrated

HINGE

M3.5X19
(round head)

M3.5X16
(sunk screw)

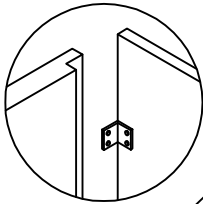

L-Bracket


M3.5X12
(round head)

W Series Cabinet

Step-by-Step Assembly Instructions


CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	L / R SIDE PANEL	2 PCS
C	TOP / BOTTOM PANEL	2 PCS
D	BACK PANEL	1 PC
E	ADJUSTABLE SHELF	2 PCS
F	DOOR PANEL	1 PC

1 Door, 2 Shelf
W0930、W1230、W1530、W1830、W2130
W0936、W1236、W1536、W1836、W2136

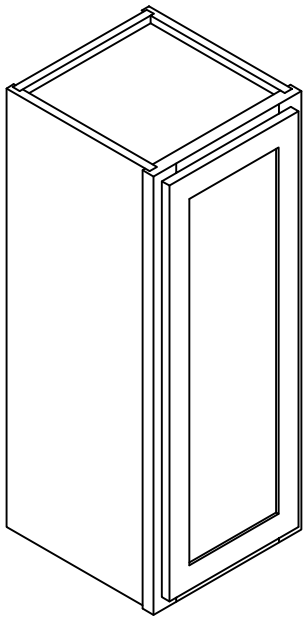


A29

STEP 1

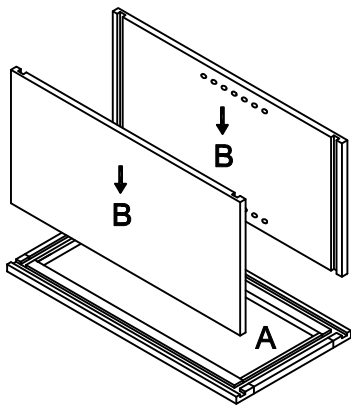


Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

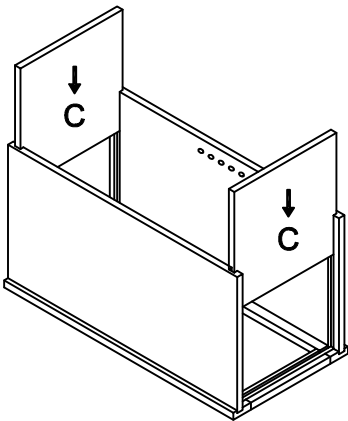


Slide C into grooves of A & B

STEP 3

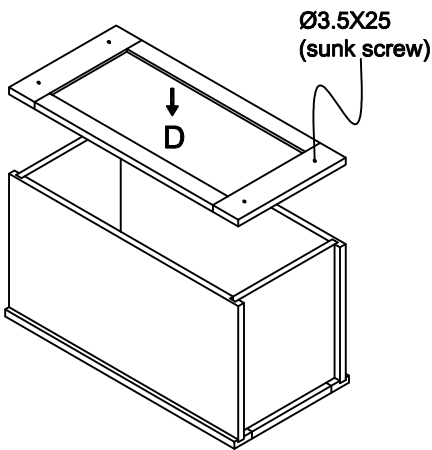


Attach D to the box with screws

STEP 4


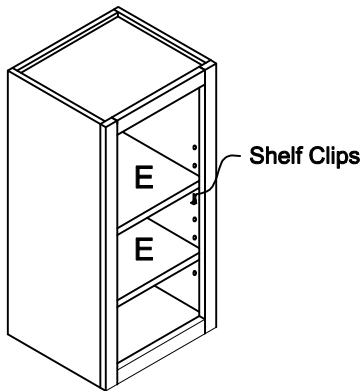


Insert the shelf clips then put E in

STEP 5

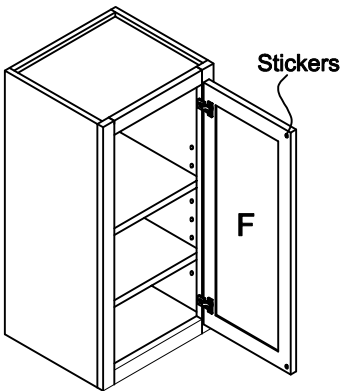

Attach F as illustrated
Attach cushion stickers

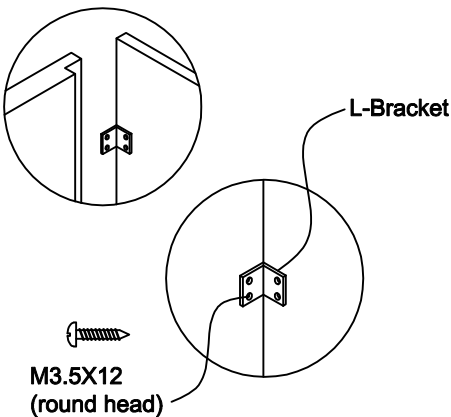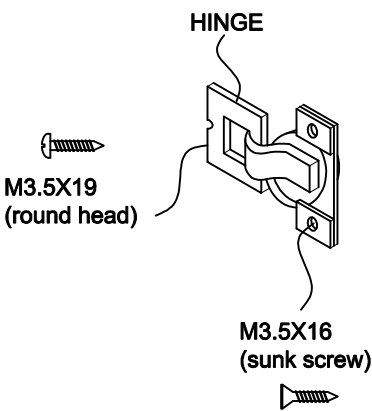


W Series Cabinet

2 Door, 2 Shelf

Step-by-Step Assembly Instructions


W2430、W2730、W3030、W3330、W3630、W3930、W4230
W2436、W2736、W3036、W3336、W3636、W3936、W4236

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	L / R SIDE PANEL	2 PCS
C	TOP / BOTTOM PANEL	2 PCS
D	BACK PANEL	1 PC
E	ADJUSTABLE SHELF	2 PCS
F	DOOR PANEL	2 PCS

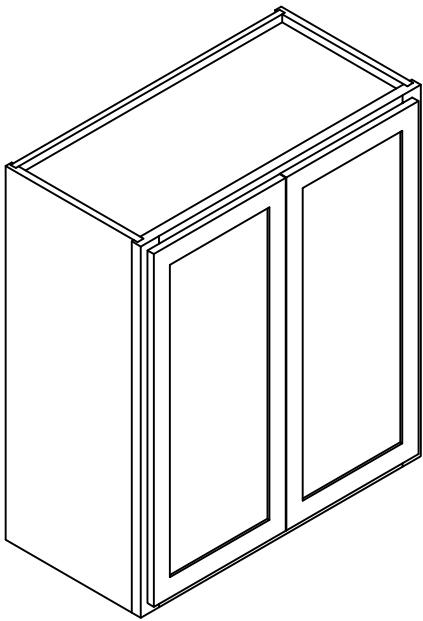


A33

STEP 1

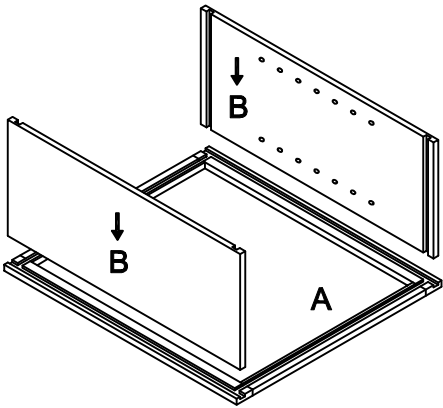


Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

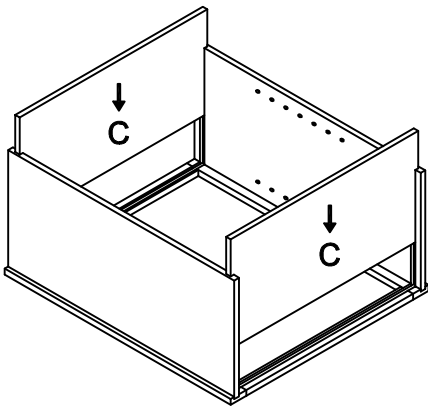


Slide C into grooves of A & B

STEP 3

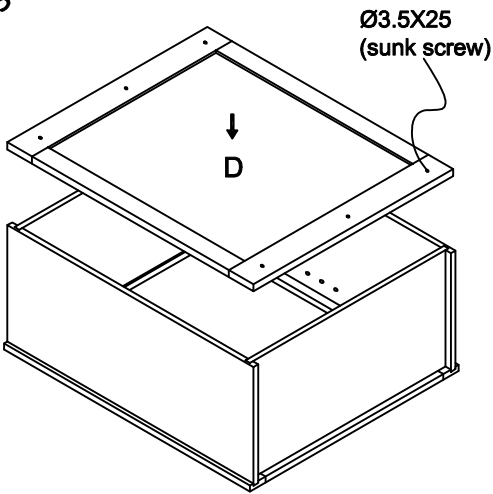


Attach D to the box with screws

STEP 4


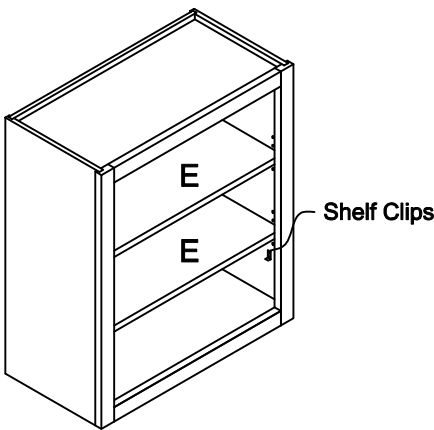


Insert the shelf clips then put E in

STEP 5

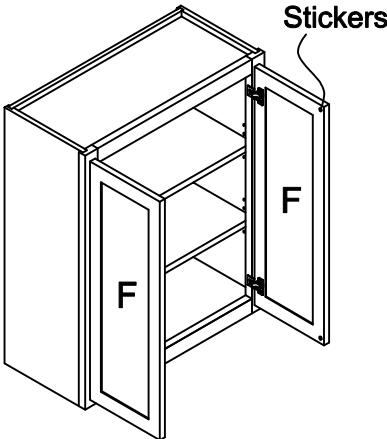

Attach F as illustrated
Attach cushion stickers

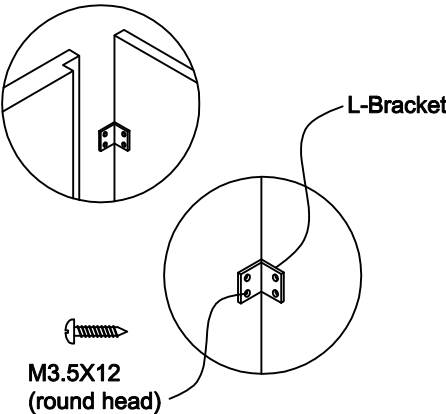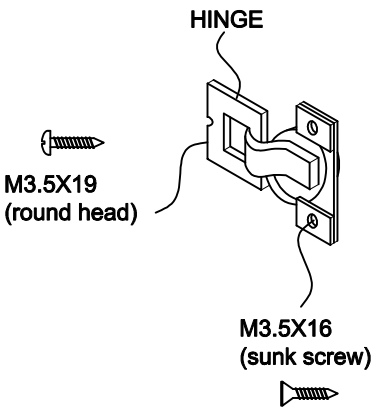


WDC Series Cabinet









1 Door, 2 Shelf
WDC2430、WDC2436

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	FRONT L / R SIDE PANEL	2 PCS
C	TOP / BOTTOM PANEL	2 PCS
D	BACK L / R SIDE PANEL	2 PCS
E	BACK PANEL	1 PC
F	ADJUSTABLE SHELF	2 PCS
G	DOOR PANEL	1 PC

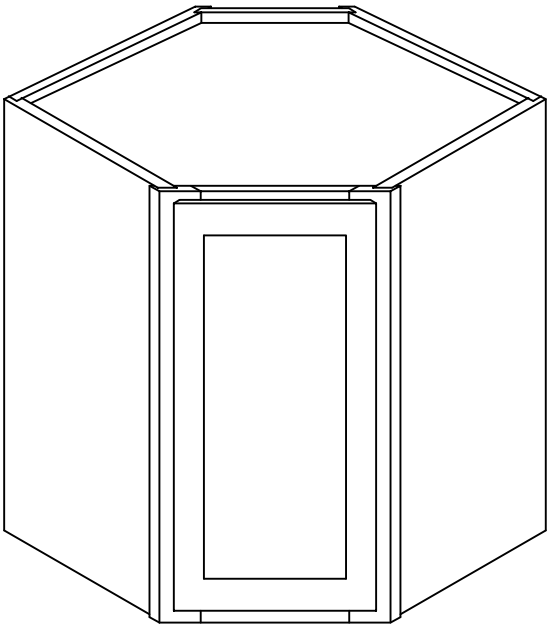

A42

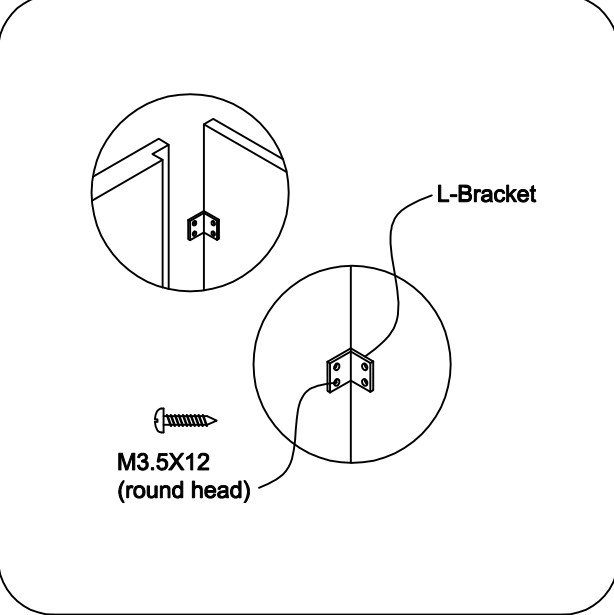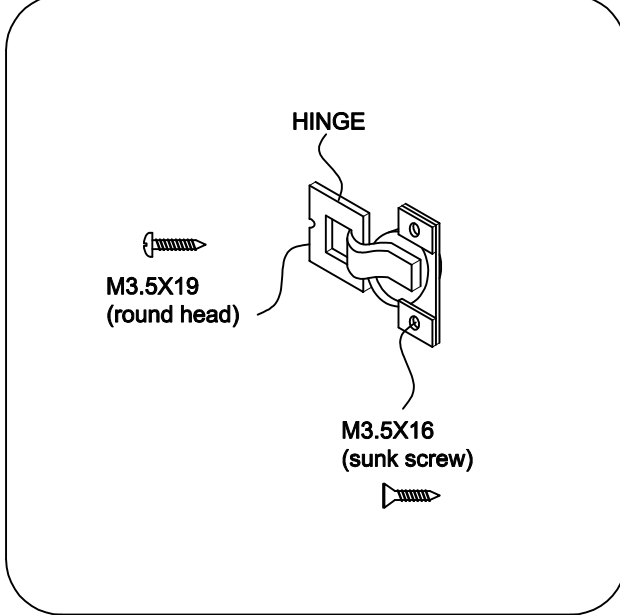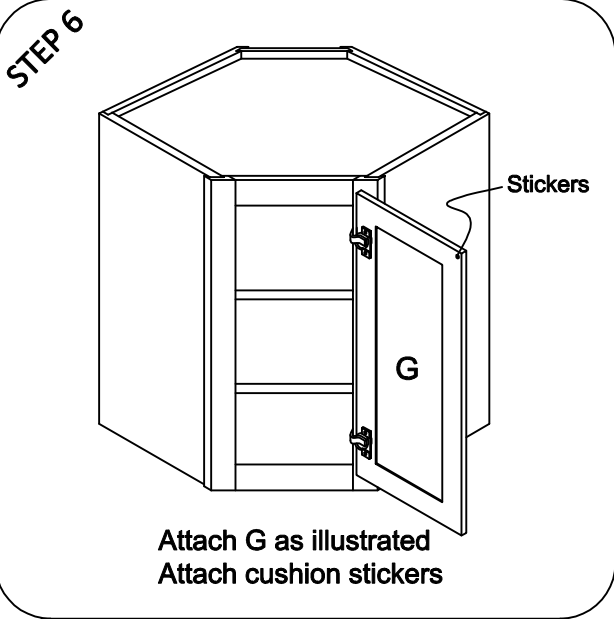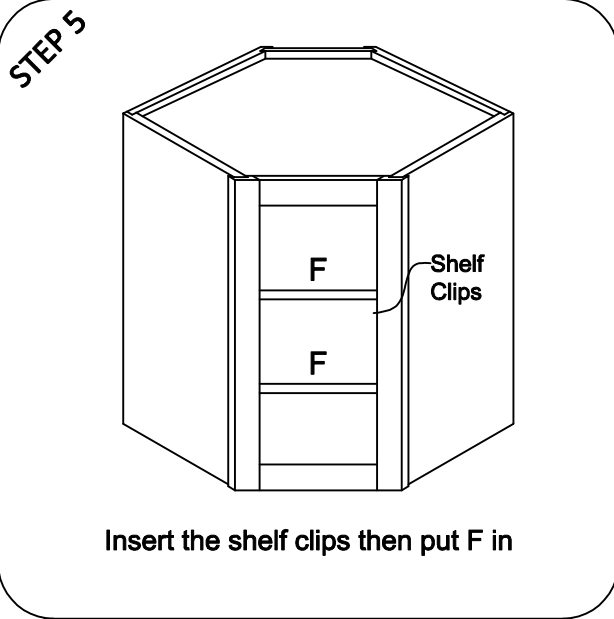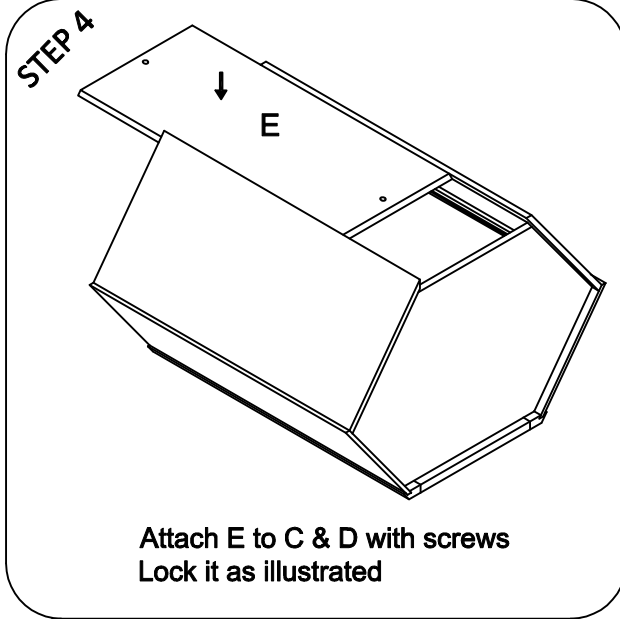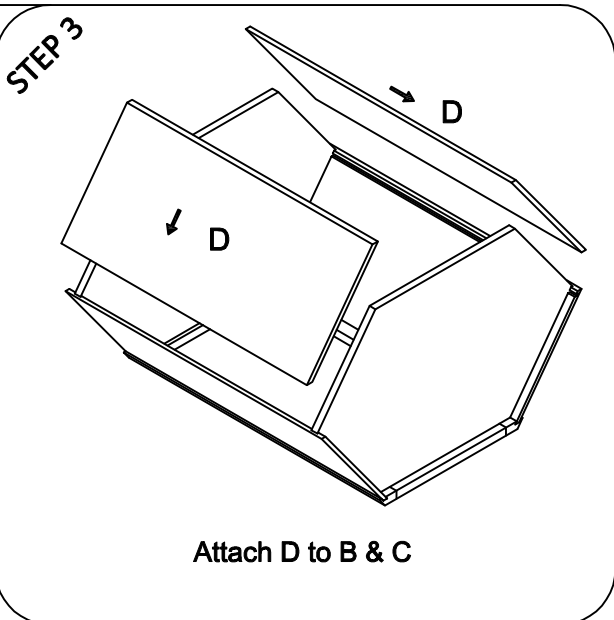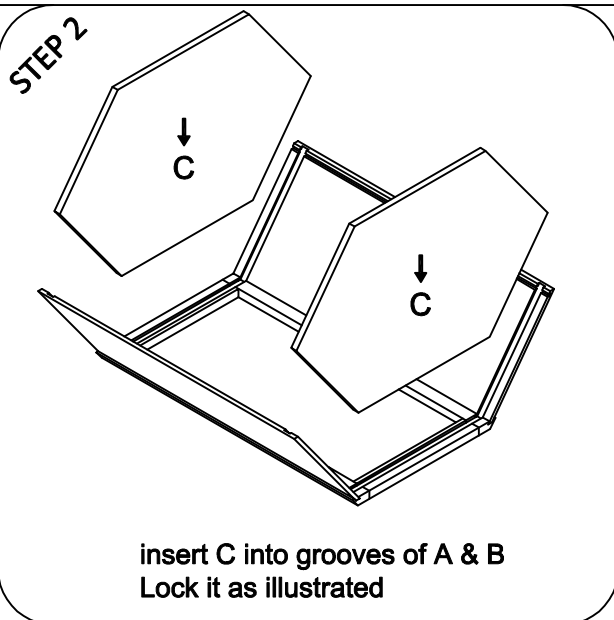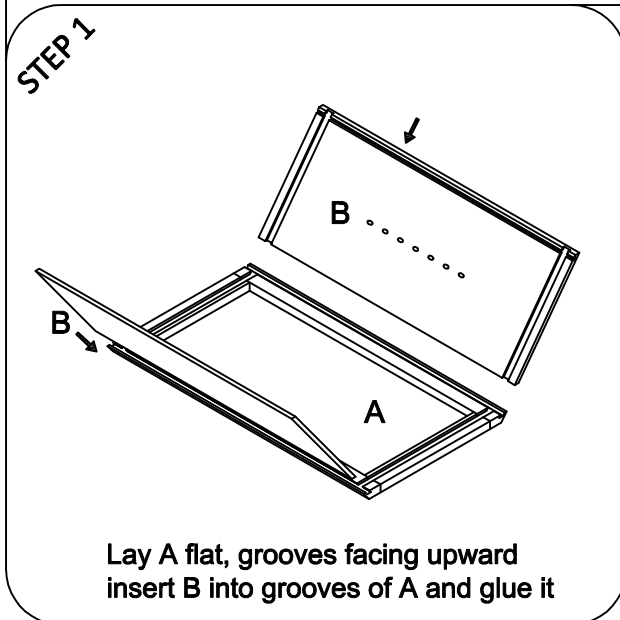


Wine Cabinet

WR3018、WR3618

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	L / R SIDE PANEL	2 PCS
C	TOP / BOTTOM PANEL	2 PCS
D	GRID RACK	2 PCS
E	BACK PANEL	1 PC

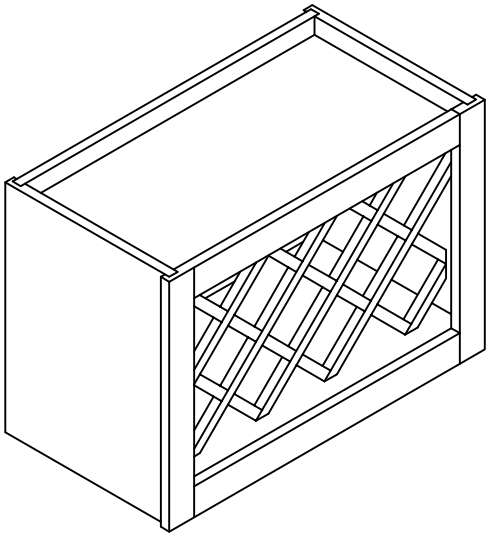

A46

STEP 1

Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

Slide C into grooves A & B

STEP 3

Insert D to the Box

STEP 4

Attach E into the box with screws

L-Bracket


M3.5X12
(round head)

W Series Cabinet

WES0930、WES0936

Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	SIDE MOUNTAIN	2 PCS
B	TOP / BOTTOM PANEL	2 PCS
C	SHELF	2 PCS

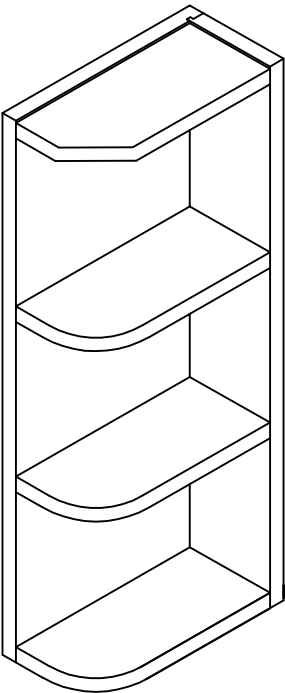

A47

STEP 1

Lay A flat, grooves facing upward
insert B and C into grooves of A

STEP 2

Slide A into grooves of A, B & C

STEP 3

Ø3.5X25
(sunk screw)


Screw all part

WM Series Cabinet

Step-by-Step Assembly Instructions


2 Door
WMC2730、WMC2736

CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	TOP PANEL	2 PCS
F	BACK PANEL	1 PC
G	DOOR PANEL	2 PCS

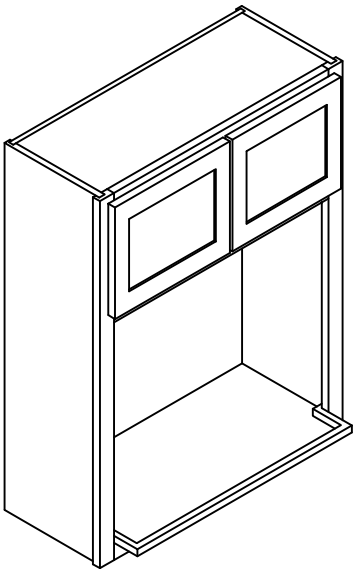


A49

STEP 1

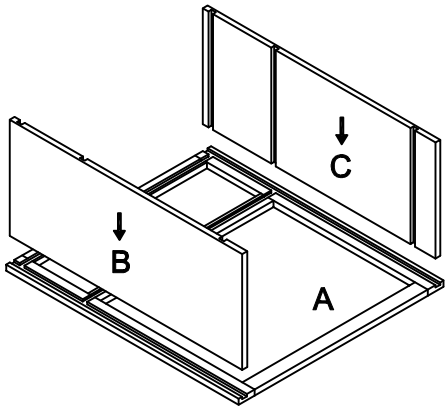


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

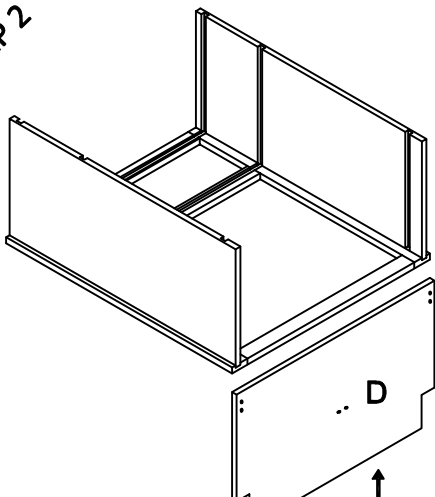


Slide D into grooves A, B & C

STEP 3

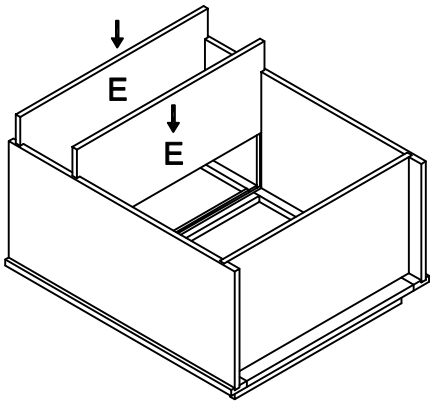


Slide E into grooves A, B & C

STEP 4


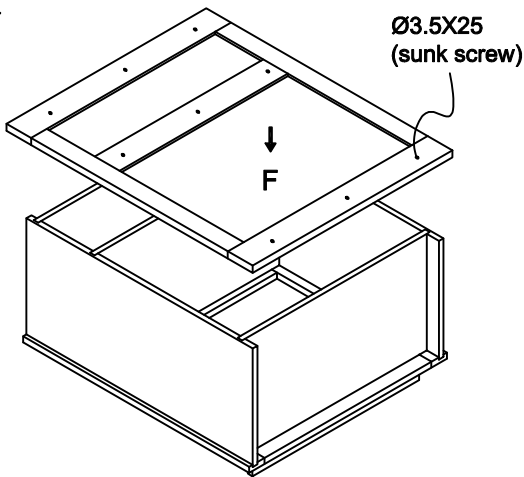


Attach F to the box with screws

STEP 5

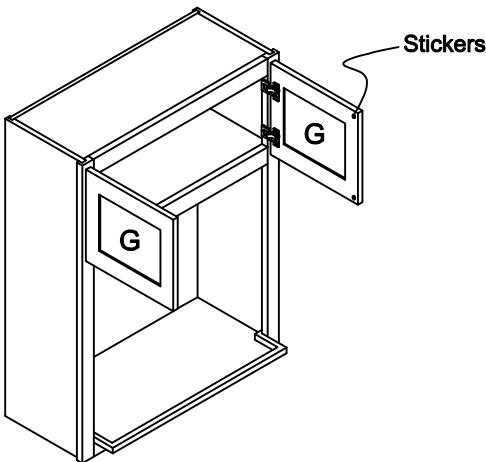

Attach G as illustrated
Attach cushion stickers

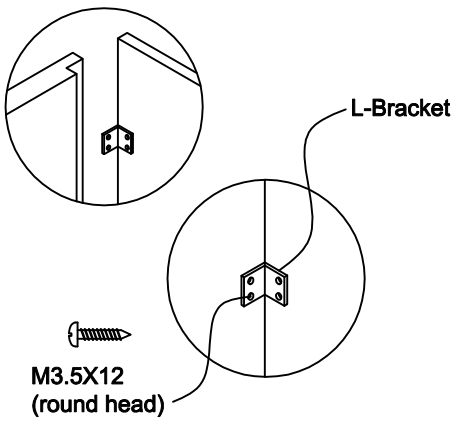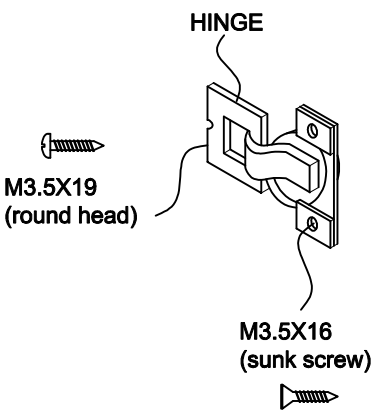


WEC Cabinet

2 Door, 2 Shelf
WEA1230 WEA1236


Step-by-Step Assembly Instructions

CODE	ITEM	QTY
A	LEFT FRONT FACE	1 SET
B	RIGHT FRONT FACE	1 SET
C	TOP / BOTTOM PANEL	2 PCS
D	LEFT SIDE PANEL	1 PC
E	RIGHT SIDE PANEL	1 PC
F	SHELF PANEL	2 PCS
G	DOOR PANEL	2 PCS

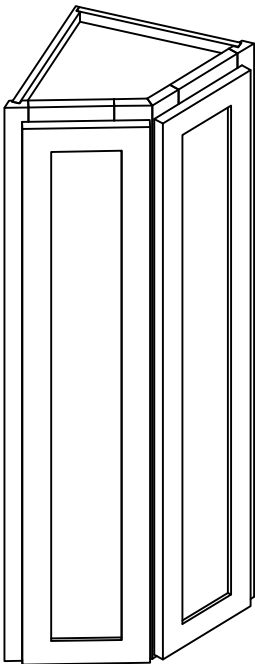


A51

STEP 1

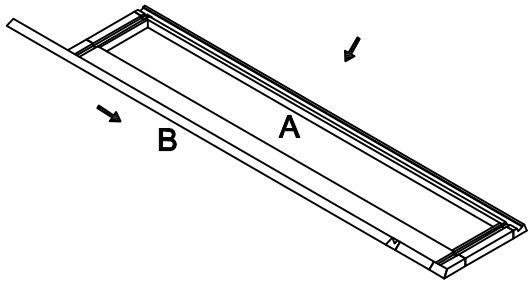


Lay A flat, grooves facing upward
insert B into grooves of A

STEP 2

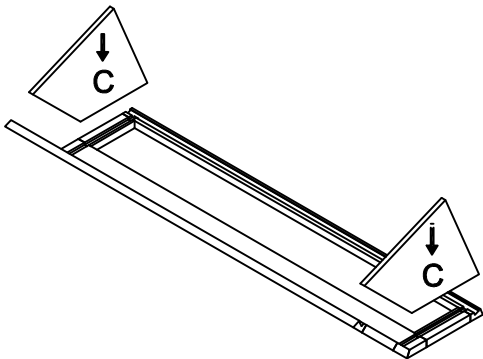


insert C into grooves of A & B
Lock it as illustrated

STEP 3

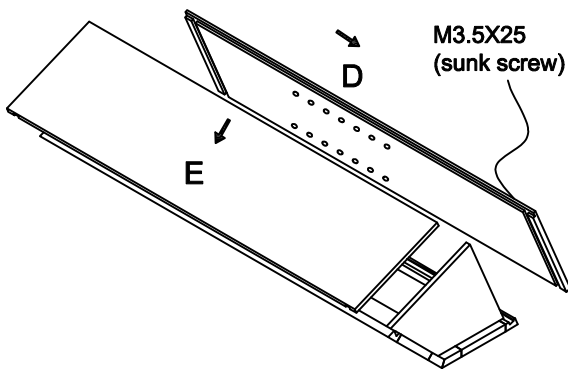


Slide D & E into grooves of A & B
with screw

STEP 4


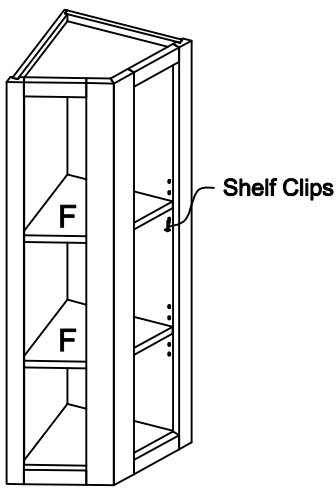


Insert the shelf clips then put F in

STEP 5

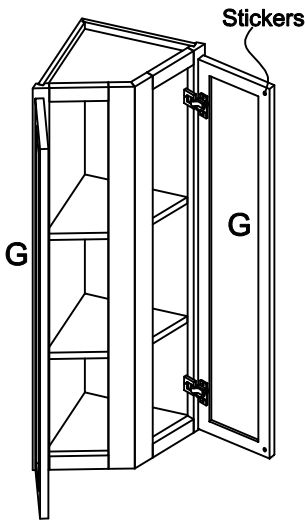

Attach G as illustrated
Attach cushion stickers

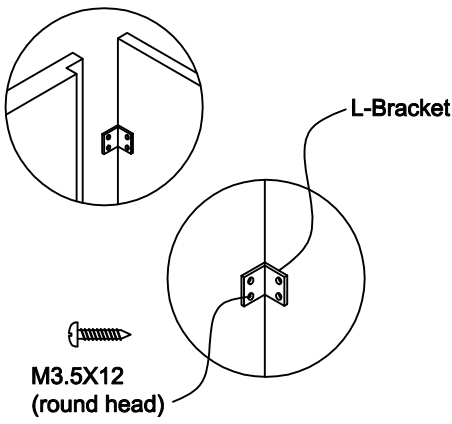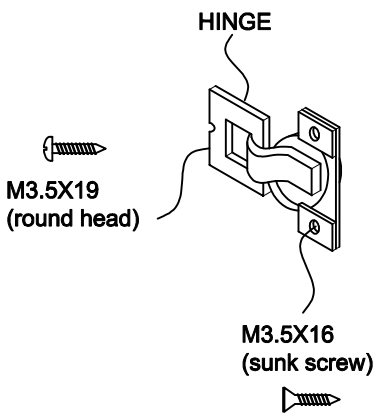


WBC Series Base Cabinet

Step-by-Step Assembly Instructions


CODE	ITEM	QTY
A	FRONT FACE	1 SET
B	RIGHT SIDE PANEL	1 PC
C	LEFT SIDE PANEL	1 PC
D	BOTTOM PANEL	1 PC
E	BACK PANEL	1 PC
F	SHELF PANEL	2 PCS
G	DOOR PANEL	1 PC

1 Door, 2 Shelf
WBC2730,WBC2736
WBC3030,WBC3036
WBC3630,WBC3636

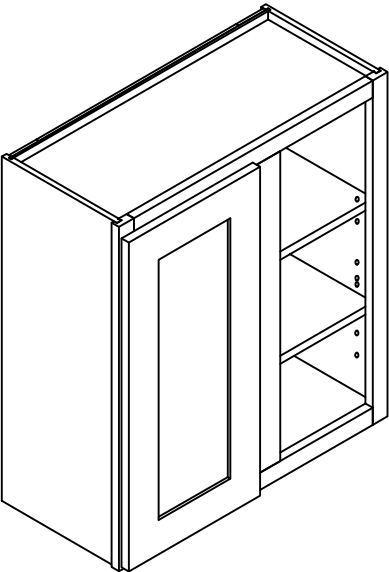


A55

STEP 1

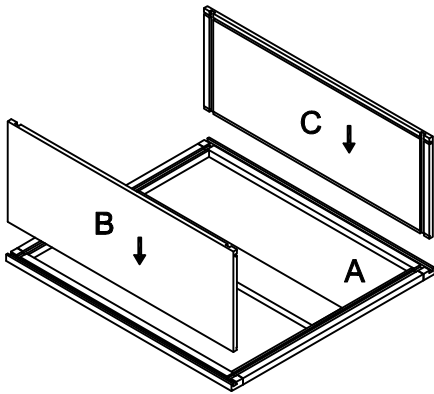


Lay A flat, grooves facing upward
insert B & C into grooves of A

STEP 2

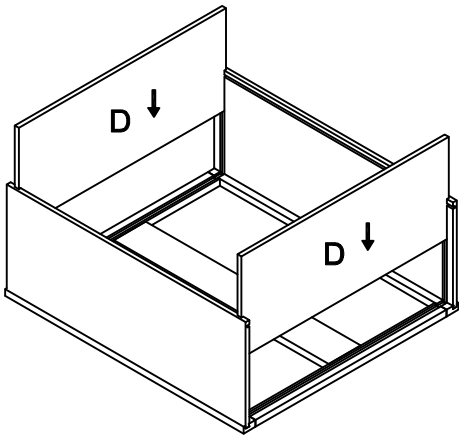


Slide D into grooves A, B & C

STEP 3

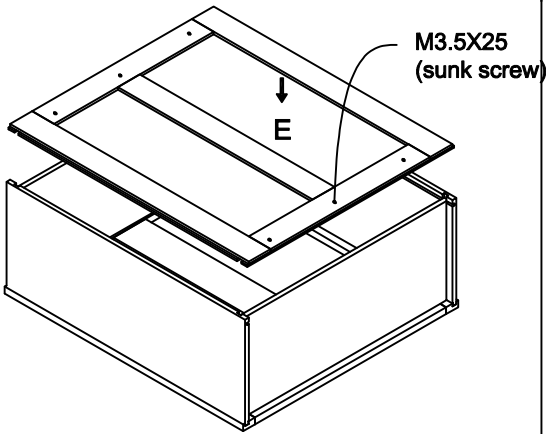


Attach E onto B & C with L-Bracket

STEP 4

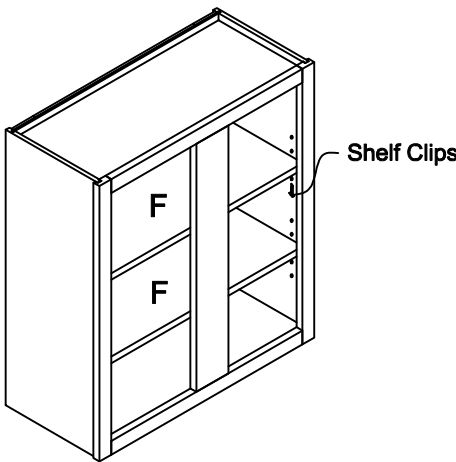

Insert the shelf clips then put F in

STEP 5

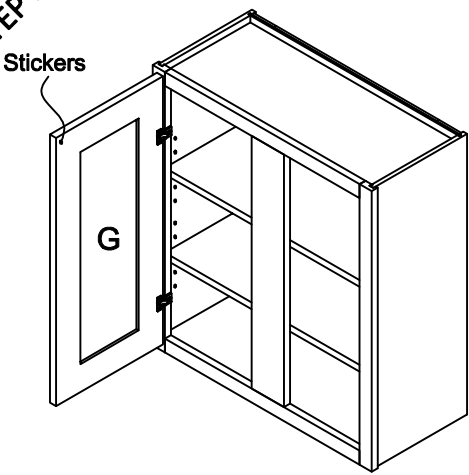

Attach G as illustrated
Attach cushion stickers

