





Construction Zone with Chris DeHut
Project: Chest of drawers in Cherry and Maple



This document, and all other documents and materials are copyrighted materials. Distribution of these materials either in part or whole is a violation of Federal copyright law.

Copyright 2003, by SoftWerks International Inc. All rights reserved.


Edge detail (Shown 2X)

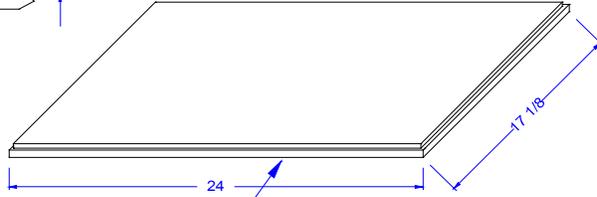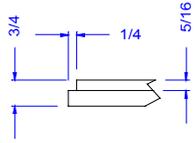


Fasten top to frame through corner braces with (4) #6 x 1 1/4" sheet metal screws.

Attach corner braces to frame using glue and screws (or biscuits)


Attach drawer runners to legs with glue. Use a #6 x 1 1/4" screw at front leg.

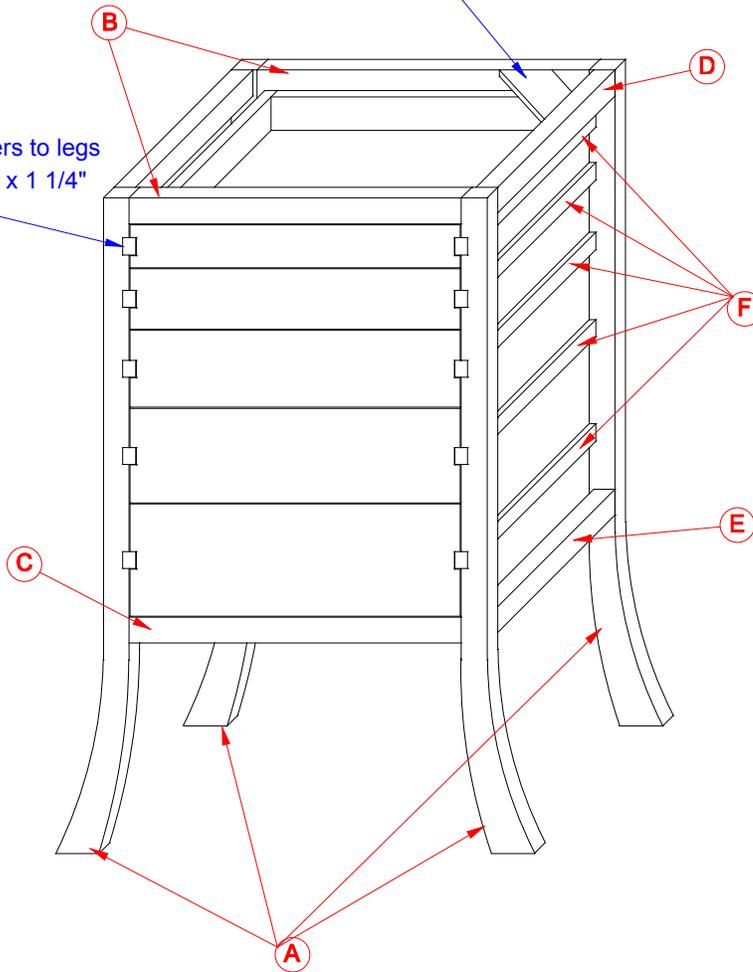


Legs Cherry

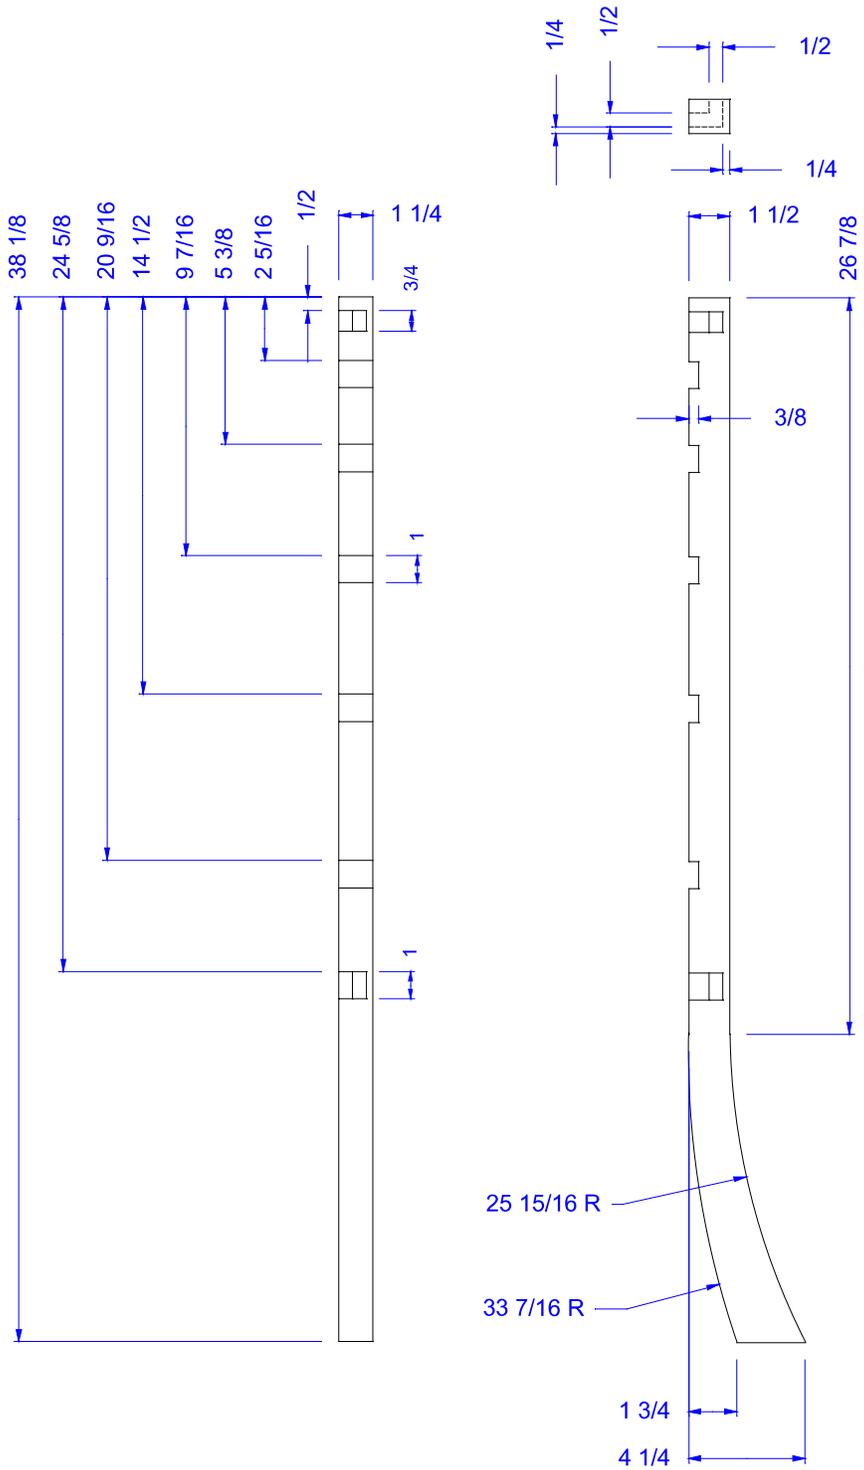



Bottom Rails - Sides

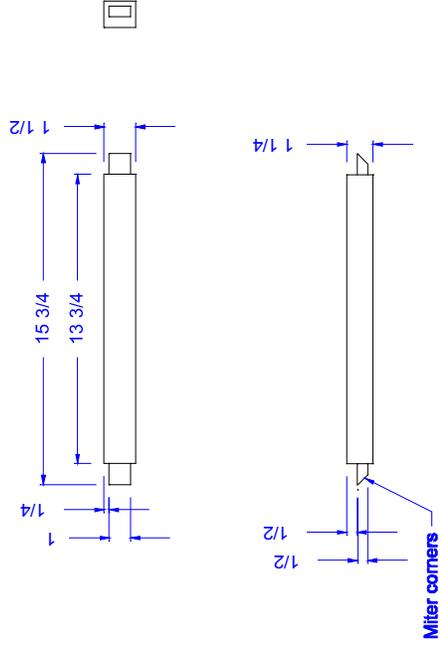



Bottom Rails - Front & Back

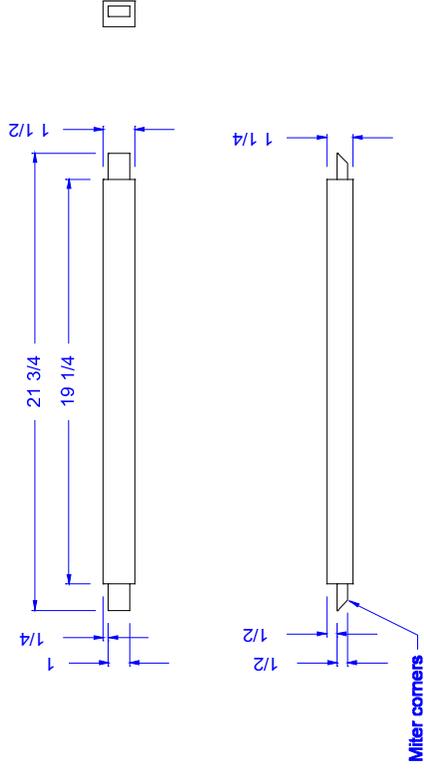


Top Rails - Sides

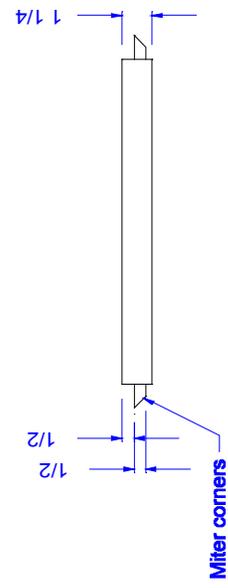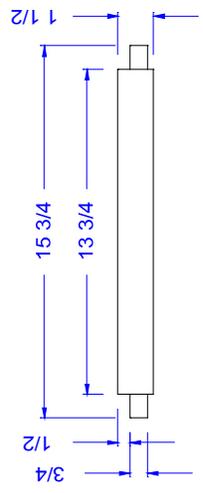


Top Rails - Front & Back

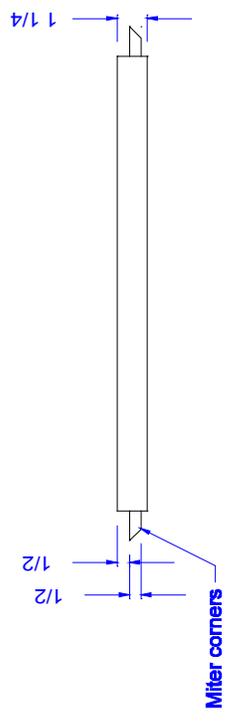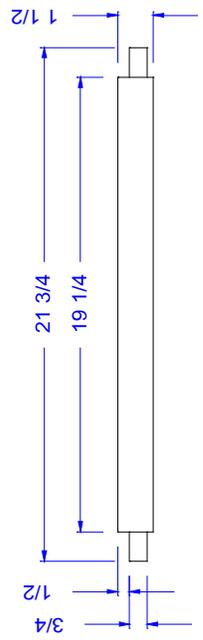






Drawer runners Cherry

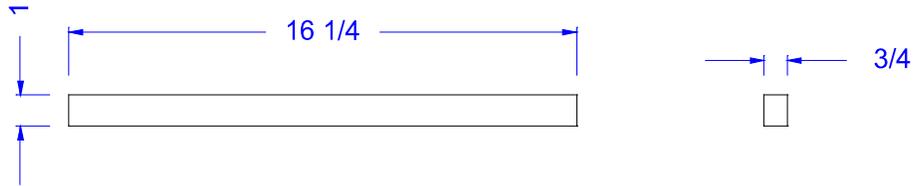

4) Corner braces Hardwood

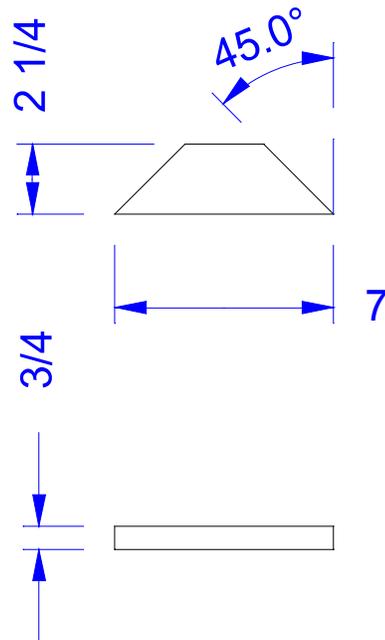


Drawer Construction Maple

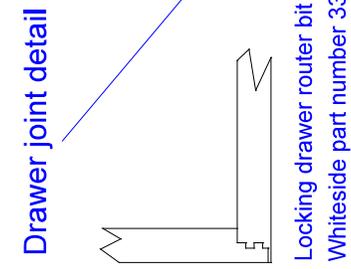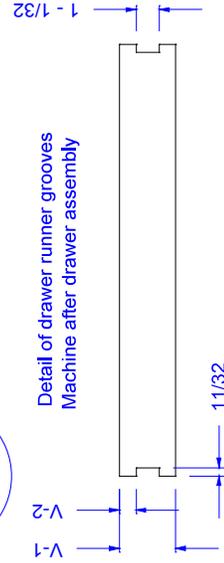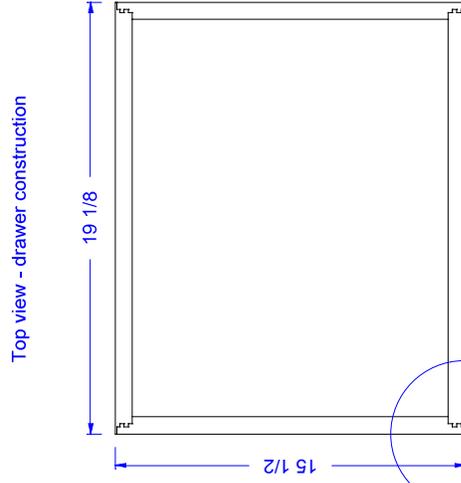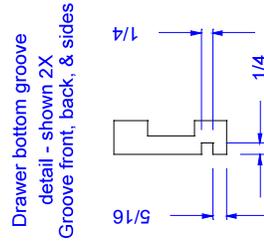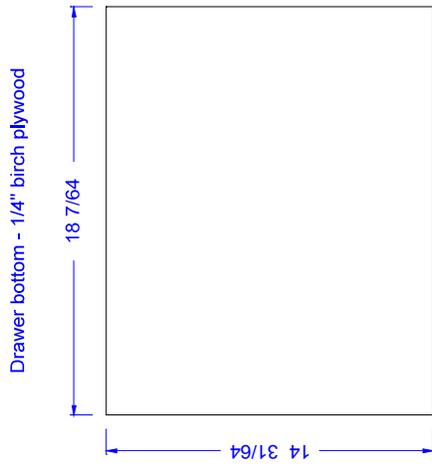

Drawer widths	
V1	V-2
2 1/2	3/4
3 1/2	1 1/4
4 1/2	1 3/4
5 1/2	2 1/4
6 1/2	2 3/4

Drawer pull detail Cherry

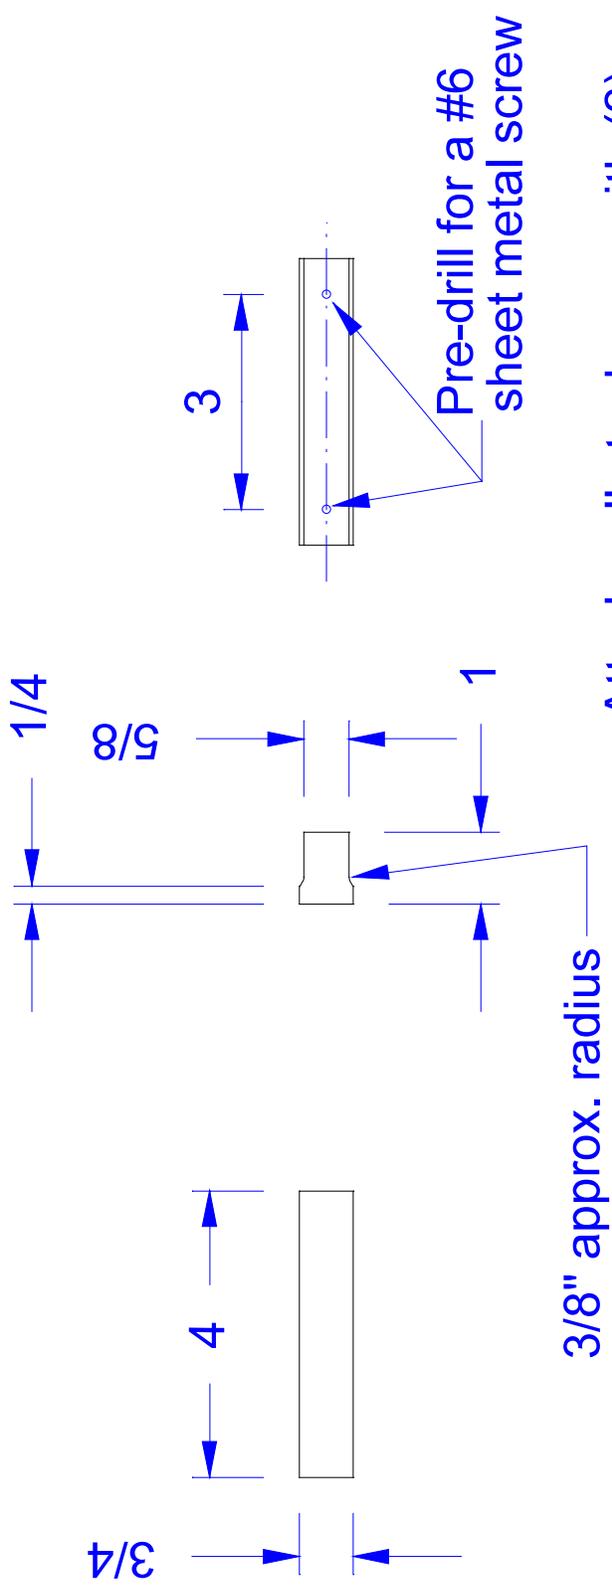


Attach pulls to drawer with (2)
#6 x 1 1/4" sheet metal screws.

Top panel may be able to be constructed from these ends


You will also need to purchase a sheet of 1/4" X 48" X 48" Birch plywood for the drawer bottoms.

3/4" x 7" x 96" Birds Eye Maple	Drawer Side	Drawer Side	Drawer Back	Drawer Front
3/4" x 6" x 96" Birds Eye Maple	Drawer Side	Drawer Side	Drawer Back	Drawer Front
3/4" x 5" x 96" Birds Eye Maple	Drawer Side	Drawer Side	Drawer Back	Drawer Front
3/4" x 6 3/4" x 96" Birds Eye Maple	Drawer Side	Drawer Side	Drawer Back	Drawer Front
	Drawer Side	Drawer Side	Drawer Back	Drawer Front

1 1/4" x 5 1/2" x 96" Cherry



1 1/4" x 4" x 96" Cherry



3/4" x 4 1/2" x 96" Cherry

