

Woodworking *at home*

The DVD Magazine  for Craftsmen

A Turn For the Better with Dick Sing


Project: Pocket watch with a Buckthorn body and a Madrone burl inlay



This document, and all other documents and materials are copyrighted materials. Distribution of these materials either in part or whole is a violation of Federal copyright law.


Copyright 2003, by SoftWerks International Inc. All rights reserved.

Watch Insert

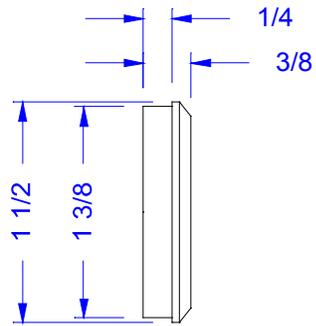


Inlay insert

Step 1 - turn inlay to this basic shape

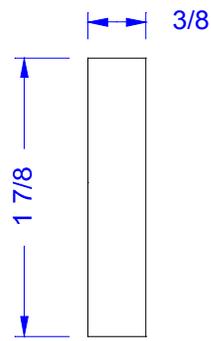

Watch body


Step 2 - turn body to this basic shape

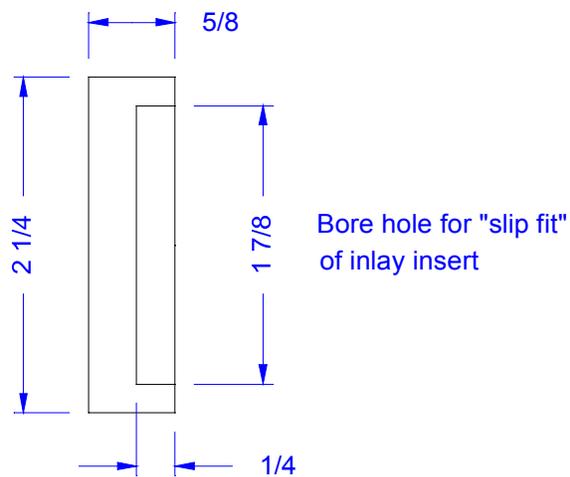


Step 3 - glue inlay into body




Step 4 - Drill 1 3/8 hole for watch

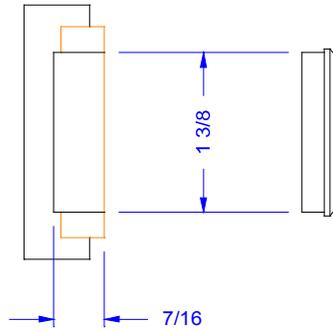


Step 5 - Fit the watch

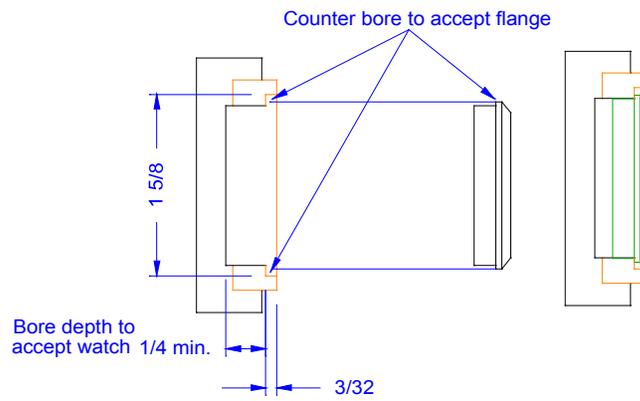

Step 6 - Turn front shape

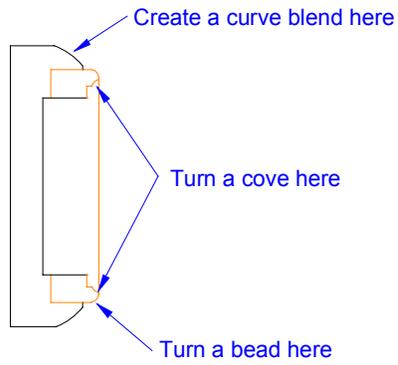

Step 7 - Turn back shape

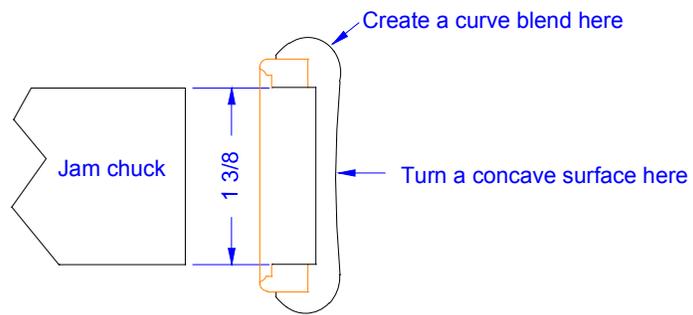

Step 8 - Detail back with 2 shallow grooves

