


Heel Guard 1610R Installation Instructions for 2015 CVO RoadGlide H-D

- 1) With the footboard removed from the bike, first remove the rubber pad by using needle nosed pliers to pinch and push the rubber darts through the metal base plate. Then, place the footboard top side up.
- 2) Align the Heel Guard as shown in the pictures below and then mark holes. Note that the holes should fall in line with the raised portion of the footboard outlined in the picture. Drill two 1/4 inch holes where marked:

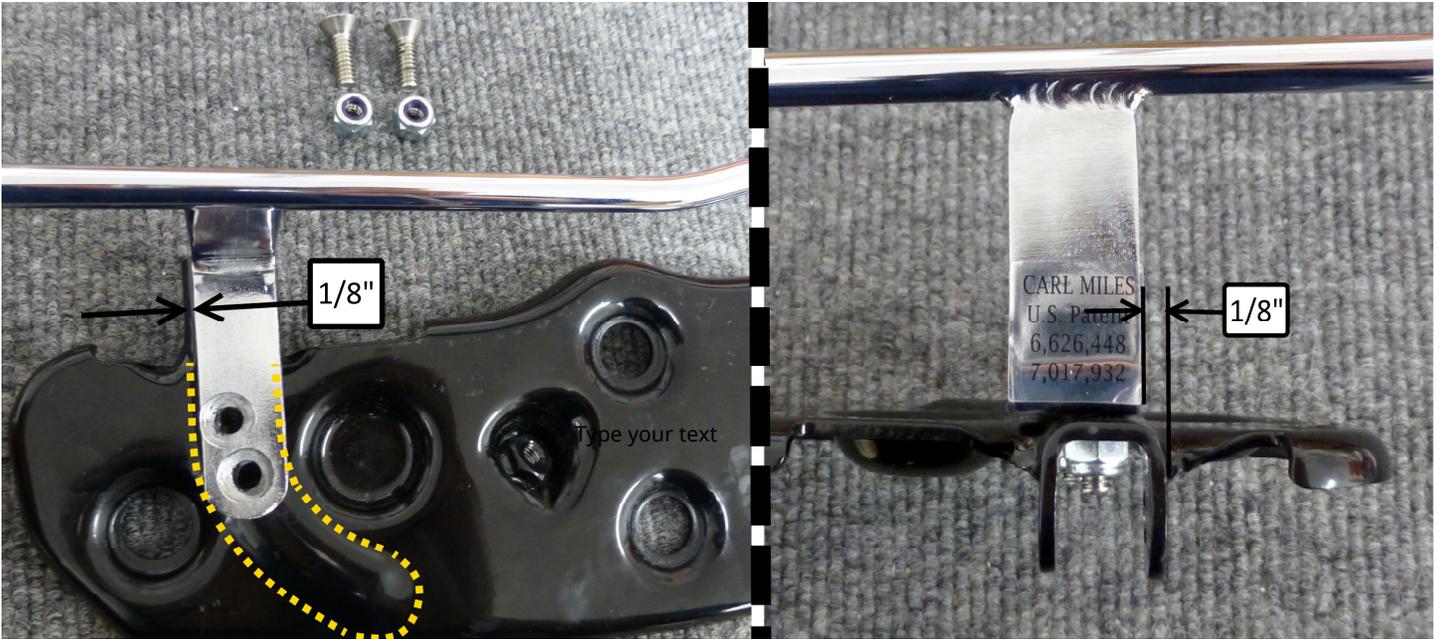

- 3) With the supplied 1/4" bolts arranged as shown below, attach the Heel Guard to the footboard and secure with the provide nuts and tighten the hardware using the supplied 5/32" hex wrench and a 7/16" wrench.



- 4) Re-assemble the footboard and rubber pad and re-attach assembly to bike.

Type your text



Manufactured by:
Heel Guard, Inc.
www.heelguard.com

PO BOX 1
Wisdom, MT 59761
406-925-9251