

Hollow Metal Frame Door Dimpler Instructions

TOOLS:

1. Impact Door Dimpler
2. Cordless Drill or Cordless Impact Driver
3. 3/8" Drill Bit
4. 1/4" Allen Wrench or 1/4" Hex Driver bit or 5/8" Socket or Impact Socket
5. White Lithium Grease
6. Safety Glasses
7. Gloves



IMPACT DOOR DIMPLER


*Worlds Fastest, Strongest, Toughest
Hollow Metal Frame Door Dimpler*

www.impactdoordimpler.com

1. DRILL 3/8" HOLE



2. GREASE IMPACT DOOR DIMPLER

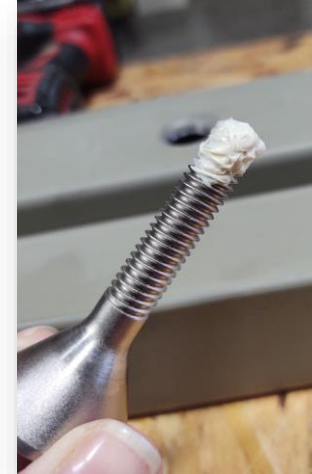

3. SCREW IMPACT DOOR DIMPLER BY HAND 1-2 TURNS



4. TIGHTEN DIMPLER WITH CORDLESS TOOL OR ALLEN WRENCH UNTIL DESIRED DIMPLE IS ACHIEVED

