


Product: Can Am High beam/Light Harness

Disclaimer: This is intended for LED Light bars. To many lights ran off this harness may blow a fuse.

Instructions:

- Unplug your stock high beam headlight on either the passenger side or driver side depending on your preference of where you want to run your wires.
- Plug the ends together as labeled in the picture below. Be sure positive wires go to red and negative to black. Positive on the machine will generally be a colored wire. If reversed it will most likely blow the fuse.

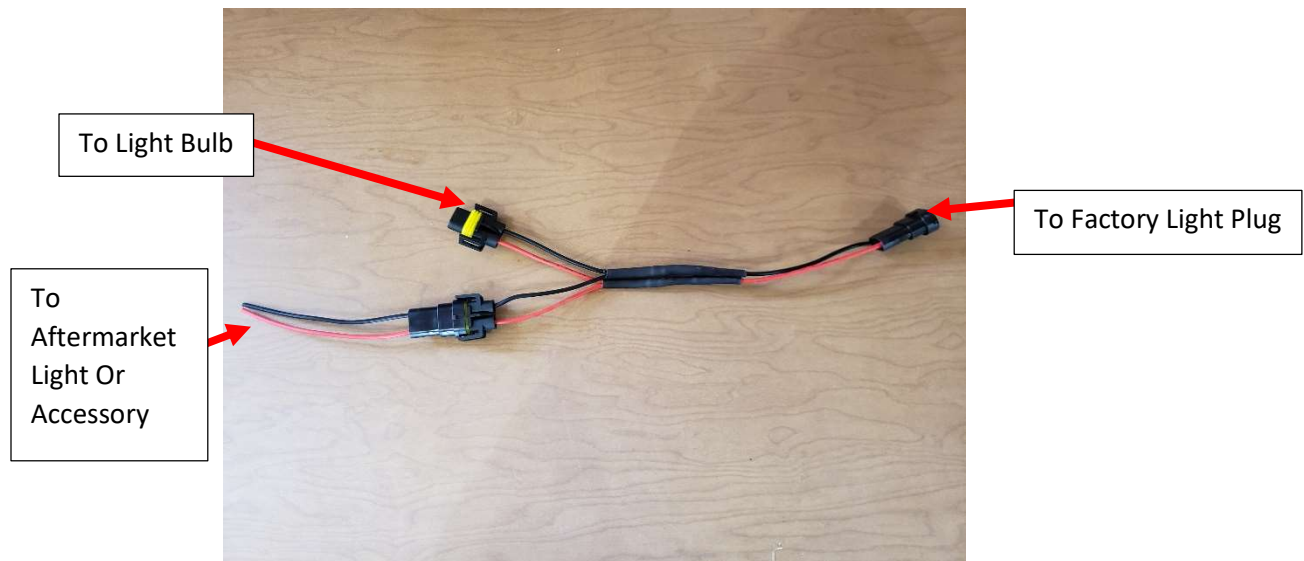

- Unplug the accessory light plug, the one with the blank wires and nothing attached.
- Connect your light or accessory to the wires of the plug removed in the last step.
- Once your wires are connected and sealed then plug in the light or accessory. To test turn on your high beam lights and the light or accessory should turn on as well.

Thank you for your purchase.

For a list of more products we offer please visit [marqcadeng.com](http://marqcadeng.com) or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.