



# BKT-SPocket-3x8 & 3x6 Quick Installation Diagram

Drawing by: RE Post, N7EMW  
 Date: 4/6/2011

- Installation Guide:**
1. Decide where to mount, be sure there is enough room in the stake pocket for the backing plate and bolts/nuts
  2. Using the "L" bracket as a template, mark the location of the three mounting holes.
  3. Drill three (3) 3/8 inch holes in the sheet metal where the bracket will be mounted.
  4. It's best to use caulk or sealer where you drilled the holes to help prevent the sheet metal from rusting.

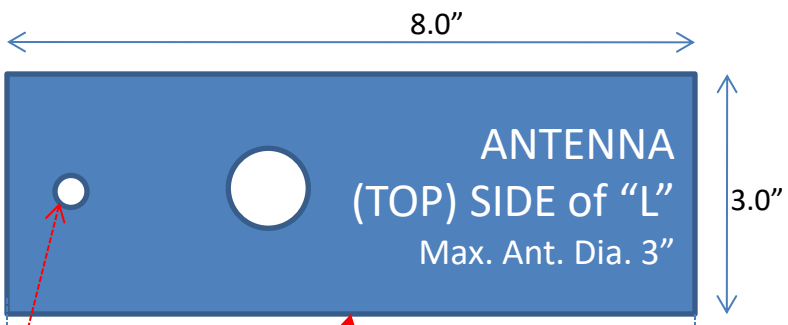

**Rubber backing on "L" bracket and "backing plate" to protect vehicle paint: 1/16" thick EDPM rubber FITS AGAINST SHEETMETAL**

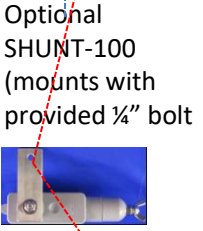

Optional SHUNT-100 (mounts with provided 1/4" bolt)

**"L" BRACKET:**  
 6061 Al angle  
 1/2" x 8x8 x 3.0" wide

**FLAT BACKING PLATE:**  
 (fits INSIDE stake pocket)  
 3x6: 2 wide x 8" long  
 3x8: 2x6"

1/4" ground bolt and/or for mounting optional SHUNT-100

"L" mount


Backing plate

Stake Pocket

Three 3/8 inch Stainless steel Mounting bolts/hardware

Truck Bed Wall

Antenna Mounting hole shown with optional 2" dia. insulating wafers (shows "Mast" version which has two ground bolts)

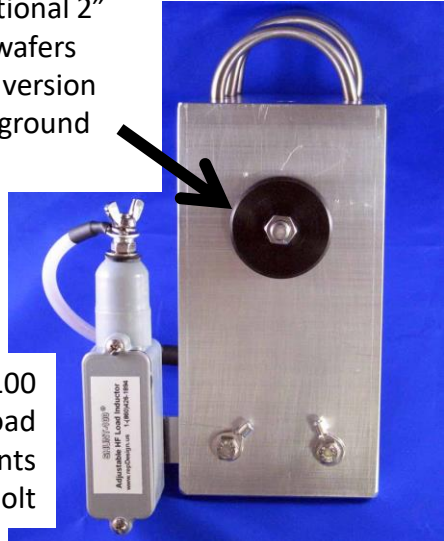

SHUNT-100 optional HF load inductor mounts with one 1/4" bolt