

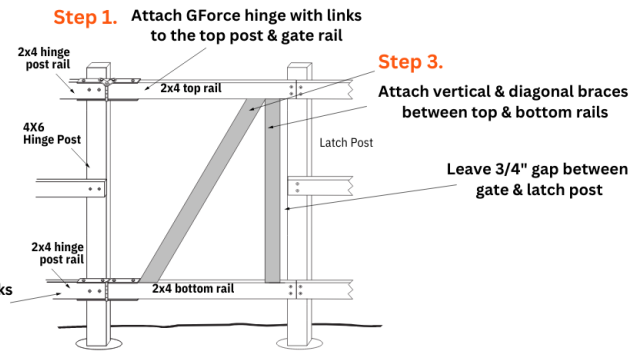


Step 2. Attach GForce hinge without links to the bottom post & gate rail

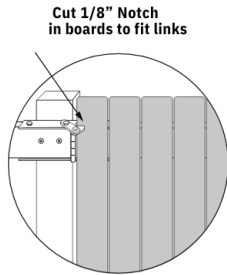

Step 4.

Attach fence boards to gate frame


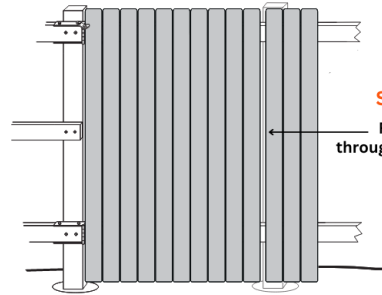


Step 5.


Free gate by cutting through the 2x4 gate rails in the 3/4" gap

Double Gate

Attach vertical & diagonal braces both sides between top & bottom gate rails

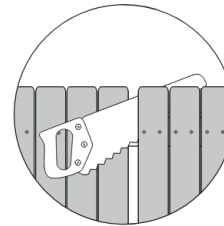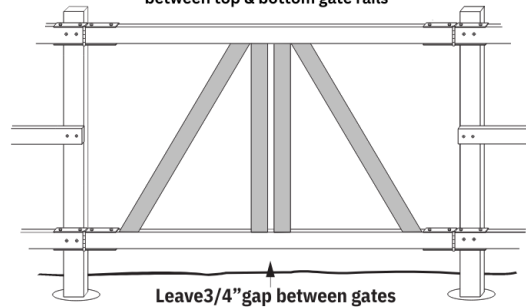

Add fence boards to both sides

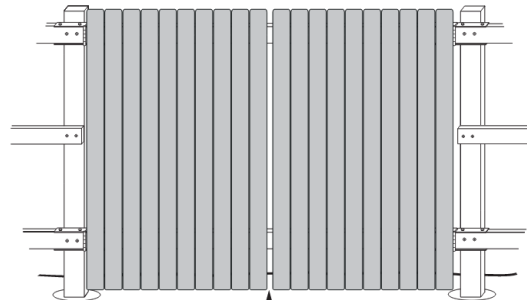

Free gate by cutting through the 2x4 gate rails in the 3/4" gap

Please note:

GForce hinge with links is the top hinge & without links is the bottom hinge

For more detailed information & instructional videos please visit gforcehinge.com