
POSTFORM FABRICATION CENTER

#1




3"

Allow Proper Overhang


1", 2", 3", 4", 6" (MAX)

#6



* 4" or 6" Standard Size Larger Cause A Dark Line

#2



*All Manufacturers Vary **Supply Cabinet Dimensions**


#7 33" x 22"

*Sink **Cut Outs** 25" x 22"

* Stainless Single or Double All Others Provide Template or Cut Out Size **Including Radius Corner Cuts**

#3





* = 1 %" for 27" Bar Tops

60"


PF Butt Joint Assembly


*Best Location if Applicable -Keep Joint Away from Sink Area *60" Max Suggested on Assembly Returns

Oversized Returns 61" - 72" (see extra cost)

144" '


#4



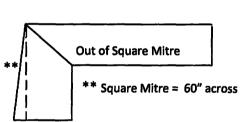


#9

#8

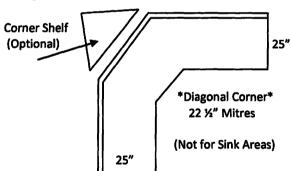


#5

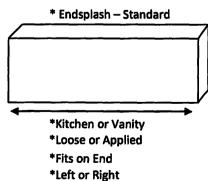

*Can Add Radius

10 * Endsplash – Profile



- *Fits on Top *Left or Right
 - *Can Add Radius




Counter Pro Inc.

POSTFORM MITRES & BUTT JOINTS INFORMATION

BUTT JOINT STANDARD MITRE Recommended (1) Loose or Assembled if over 168" (2) Maximum Assembly is 60" Return (1) Best location at mitre, when top measures 144" to 168" Standard 45 Degree Mitre (2) Maximum Assembly is 60" x 168" **PENINSULA MITRE OUT OF SQUARE MITRE** (1) *= No Backsplash (1) Provide * 3'-4'-5' 27" Peninsula = 1 34" Standard Kitchen Top 25 1/4" Wall Measurement 36" Peninsula = 10 %" - 36"**→** 60" = Square

(with 25 ½" Kitchen) Peninsula 27" or 36" (2) Maximum Assembly is 48" (3) 45 Degree Mitres Only REVERSE MITRE



-/60" = Wall In


+/60" = Wall Out

- (1) Never place sink in or near corner
 (2) Corner shelf butts back of
- backsplash, sold separately
 (3) Always Supply Template

OFFSET MITRES (FOR FLAT DECK POSTFORM OR CUSTOM TOPS)

(2) Loose or Assembled

(1) * = Provide these Measurements

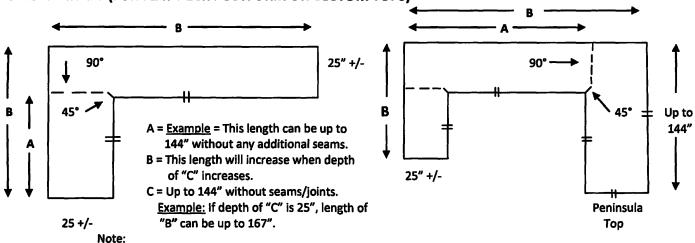

- * Always provide back wall counter top measurements and specify "Offset Mitre"
- * Cannot be used with integral backsplash counter tops or bar top to bar top

GUIDELINES

- Always keep mitres and butt joints away from sink areas. (Water/Moisture Damage is NOT covered under warranty).
- Always use water resistant wood glue in addition to bolts when assembling mitres and butt joints.
- Remember that postform tops have their limitations and may not be suitable for all kitchen layouts.