



Image #1

Installation Instructions



- 1-Extend awning
- 2-Tilt awning (Per owners desire)
- 3-Lock awning into place (As required by awning mfg)
- 4-Attach strap to awning per image #1
- 5-Apply protector cone per image #2
- 6-Lift protector cone up (sliding strap thru cones center hole)
- 7-Attach strap plate to ground per image #3 or #4 or #5
- 7a-Image #3 (attach using supplied spike)(used in most grounds)
- 7b-Image #4 (attach using twist in spike and/or carbiner)
- 7c-Image #5 (attach using carbiner, mainly for decks/wood)
- 8-Silde protector cone down to ground
- 9-Pull strap until strap is tight and pressure is applied to awning tube.

(*Caution* Do Not Over Pull)

- *Take notice to the hold down connection points. Over pulling of the strap may cause ground connection point to release.
- *Every unit will different on the amount of pulling needed for the strap.
- *Common Sense will need to be used, if it seem to tight it may be.
- *Please contact us with any questions. (bigfoot-precision-components@outlook.com)
- *Installation Instructions can be found at www.bigfoot-precision-components.com



Image #2



Image #3



Image #4

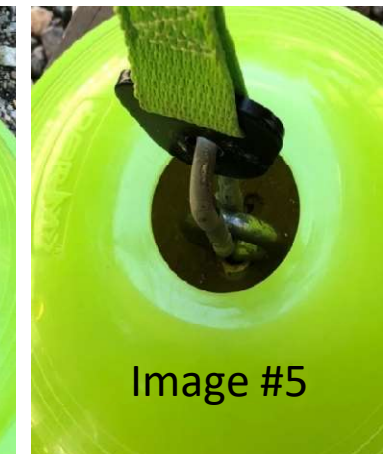


Image #5

***Caution* Over pulling on the strap can cause damage to the Awning arms or tube.**