



BlindBucks.com

**BowHouse Bow Stand
ASSEMBLY INSTRUCTIONS**

BlindBucks Hunting Products, Inc. assumes no liability for injury or damage to persons or property resulting from the use of the BowHouse Blind. The Blind must be assembled, installed, anchored, and used with care, caution, and common sense. Anchoring the BowHouse Blind is the **owner's responsibility**.

Note: It will take **two (2) people** to assemble this blind.
You must read all instructions before starting assembly!

TOOLS REQUIRED FOR ASSEMBLY:

Cordless Drill	Phillips Head Screw Bit	9mm Socket and Wrench or Adjustable Wrench	Awl
3/16" Drill Bit	Circular or Miter Saw	Measuring Tape	

PARTS LIST:

Roof	Hardware Package with extra screws	9 Windows
3 walls with bow window openings (A)	1 wall with door cutout (B)	

LUMBER FOR BLIND WITH FULL DOOR:

(2) 2x4x8 plank	(1) 4x4x1/2" plywood	(1) 2x3x10 plank
-----------------	----------------------	------------------

LUMBER FOR BLIND WITH HALF DOOR (STANDARD DOOR)

(2) 2x4x8 plank	(1) 4x4x1/2" plywood	(1) 2x4x10 plank
-----------------	----------------------	------------------

****if using 3/4" plywood for flooring you will need to drill a clearance hole 1/4" higher than the existing lowest hole in each panel.
See floor insertion.**

INSTRUCTIONS:

With 2 wall panels A vertical, one person stands on the inside with nuts & the other on the outside with the screws (8-32 x 3/4). Overlap the offset corner of the panels. Using the predrilled holes starting at the second hole from the top insert screws (8-32 x 3/4) one at a time down the edge of the panels. You will use 3 screws. **DO NOT PUT A SCREW IN THE BOTTOM HOLE OF EACH PANEL UNTIL FLOORING IS PLACED.** Make sure panels are tight against each other before you insert each screw. Using an awl to line up the holes may be helpful. Repeat above steps on the last panel A, making a U shape. Now attach panel B (door panel) to the U shaped structure. If using the standard door you need to clip the bottom half free at this point. Set aside for later.

Place roof over the top of the panels. With one person inside and one out drill one 3/16" hole through both the roof hole into the blind in the right corner. The roof holes are all pre-drilled. Insert one screw (8-32 x 3/4) from the outside into the drilled hole you just made and tighten against nut. Again make sure roof panel is tight against the wall panel and drill the right back corner in the same way. Insert screw. Drill and screw the other 2 holes on the right side. Repeat in the front panel, left panel and back panel.

Floor Insertion:

When inserting flooring into your box blind, lay it on top of lip on inside of box blind bottom. Drop in place. Sometimes the last corner needs to be lifted and fitted. Insert 8-32 x 3/4" screws into the bottom predrilled hole on each panel corner. If you have 3/4" Plywood this is where you re-drill holes 1/4" higher.

Full Door Instructions:

If you did not purchase the full door option skip to **Standard door instructions**. On the inside of the bow blind back wall measure the top groove. It should be about 49". Cut one 2x4 and push it tightly into this groove. Have one person push in and the other using the stainless wood screws #10x1", screw the wall to the board through the remaining predrilled holes. Measure and repeat on right and left sides. Measure the front above the door and repeat. Attach all lumber from outside of blind using 10 x 1 inch screws to fasten. Using the **Long Black** wood screws put one in each corner diagonally into the **wood only** to tie the corners together.

Measure from the bottom of the board on the door side to the top of the plywood along each side of the doorway. They will probably be different. Cut the 2X3 boards to fit. Place the right one against the vertical groove in the panel and drill a 3/16" hole in the plastic only every 8 inches down the doorway. Use the #10 screws to attach this board and then toe in the top with a black wood screw. The bottom is not attached. Insert the left board in the

doorway. Hold up the door to make sure it clears. Using the pre-drilled holes and the #10 screws attach the door. Drill holes above and below each raised groove on the left side and insert screws there also. Toe in the top of the left 2x3 with a black wood screw.

Standard Door Instructions:

On the inside of the bow blind back wall measure the top groove. It should be about 49". Cut one 2x4 from the 8' plank and push it tightly into this groove. Have one person push in and the other using the stainless wood screws #10x1", screw the wall to the board through the remaining predrilled holes. Measure and repeat on right and left sides. Measure the front above the door and repeat. Using the **Long Black** wood screws put one in each corner diagonally into the **wood only** to tie the corners together.

Next go to the inside of the blind and measure the front groove that is over the door cutout. Cut and insert a 2 x 4 from the 10' plank in that groove using the #10 screws. Measure from the bottom of the board you just installed to the top of the plywood along each side of the doorway. They will probably be different. Cut the 2X4 boards to fit. Place the right one against the vertical groove in the panel and drill a 3/16" hole in the plastic only every 8 inches down the doorway. Use the #10 screws to attach this board and then screw down from the top of the board over the doorway in the vertical board with a black wood screw. The bottom is not attached. Insert the left board in the doorway. Hold up the door to make sure it clears. Using the screws (8-32 x 3/4) attached the hinges to the door. Using the pre-drilled holes in the front panel and the #10 screws attach the door hinges to the left vertical board. Drill holes above and below each raised groove on the left side and insert screws there also. Screw down from the top of the board over the doorway in the vertical board with a black wood screw.


Sealing:

Use the weatherstripping around the door jam to seal it.

You need to cut it onto 3 pieces.

You may optionally use a SMALL AMOUNT of expanding foam in the corners of the roof joints and the raised edges of the door jam.

This is to keep bugs out.

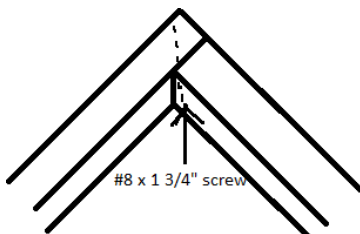


Toe in corners with black screws like this.

Windows: PLEASE READ!!!!

SLIDE THE WINDOW IN THE TRACK FIRST! There is a small hole in the (Plexi-glass) window, this is where a knob and a 8x32 screw go once the window is installed in the tracks.. Please do not over tighten because the window will crack. The knob will be on the inside of the blind. Next you will see there is a bolt or screw above the knob you just installed (on the inside of the blind). Screw another knob into this bolt. This will give you 2 knobs that you will wrap the band around to keep the window in the up position and closed. Take the band off the knob on the window to slide it down in the opened position. See window kit diagram for more info.

WINDOW KIT DIAGRAM

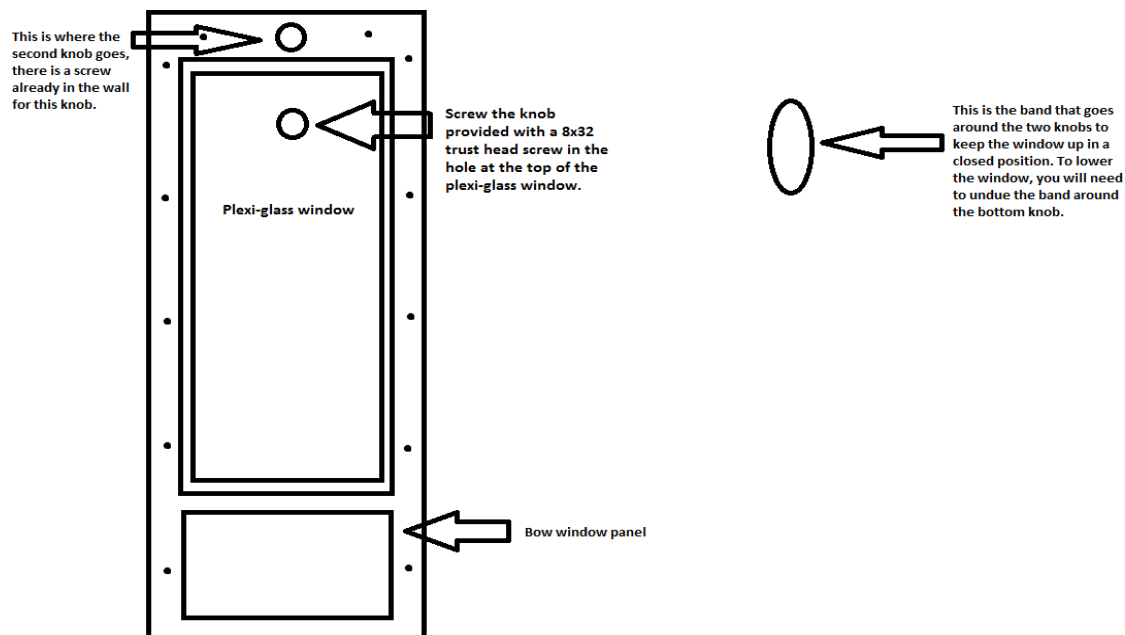


INSTRUCTIONS: FOR WINDOW ABOVE DOOR

Peel plastic film off one side of the window.

Peel off adhesive tape off the window handle and place on the bottom of the window in the center. Make sure the bottom lip of the handle is against the bottom edge of the window and press firmly. (See Figure A.)

Peel plastic film from the back side of the window.

Measure from top left edge of window 12" (See Figure B). Peel adhesive cover off the back of the 1" Velcro's adhesive pad. Place the pad to the right of the 12" mark and press firmly. The pad will be on the opposite side of the handle.

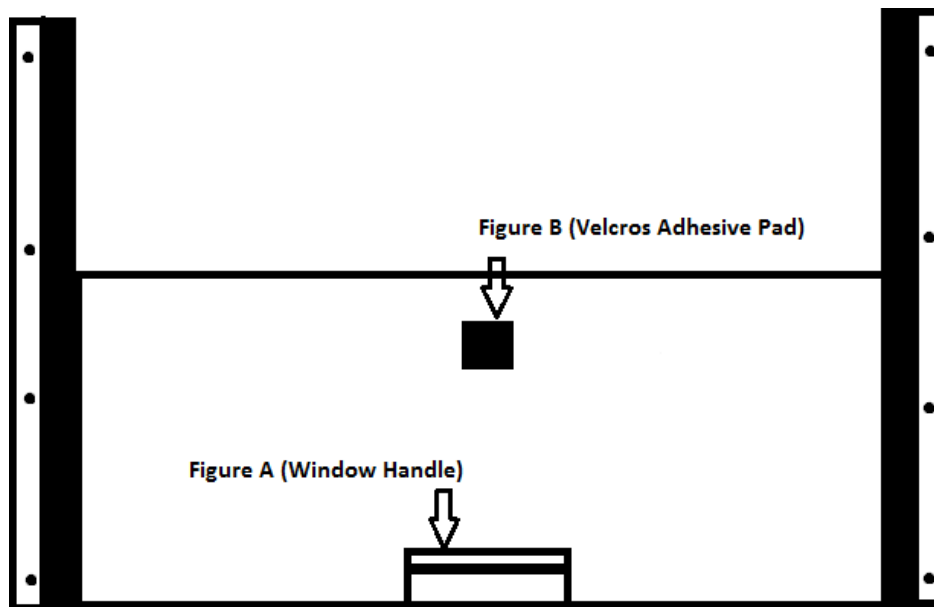

Installing window tracks:

Take one track and align the pre-drilled holes on the track with the hole detents on the blind around the opening for the window. Mark and drill the detents with the 3/16" drill. You may need to cut the track to length. Insert the screw into the hole and attach the nut. Do not tighten. Repeat this step on the other 7 window track holes. Next take a window and slide it into the tracks. It should rest on the 2x4 piece of wood that runs below the window. Once you have the window in the tracks, you can tighten all the screws. If it doesn't slide smoothly loosen the screws and reposition.

Installing Velcro Window Pads:

Take the window and slide it up into the open position. Locate where the Velcro pad that you put on the top of the window hits on the blind wall and that is where you will put the Velcro pad on the blind wall. Press the pad firmly against the wall of the blind. This will hold your window in the open position.

If you would have any problems with this product, please contact BlindBucks Hunting Products, Inc. at 845-548-3273.



BlindBucks.com

**BlindBucks Hunting Products Blindbucks.com
845-548-3273**