

Early Bronco Bezel Instructions

www.disruptiverestomods.com

Revision
Sept 21, 2021




Scan code to confirm latest revision

**** IMPORTANT-** This bezel can be used with original Bronco 1966-77 gauges and aftermarket gauges.

Instructions for **Original** Bronco Gauges

1. Lay supplied O-ring over the groove on the backside of the Bezel and press into the groove at **arrows**. Then press the remainder of O-ring into the groove

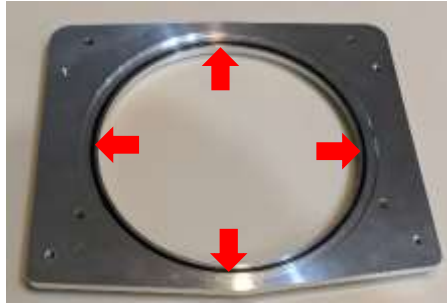

2. Assemble the Original Gauge with its glass like the picture



3. Use the (4) #10 x 3/4" long Oval Head sheet metal screw and tighten* Bezel to the Original Gauge Assembly



4. Use the (4) #10-32 x 1/2" long Pan Head screw and tighten Bezel & Gauge Assembly to the Dash



* Careful- Do not overtighten screws



Instructions for **Aftermarket** Dakota Digital Gauges

O-ring is not required when using aftermarket gauges

1. Use the (4) #8-32 x 3/4" long Flat Head screw & tighten* Bezel to the Aftermarket Gauge Assembly



2. Use the (4) #10-32 x 1/2" long Pan Head screw and tighten Bezel & Gauge Assembly to the Dash



* Careful- Do not overtighten screws



Instructions for **Aftermarket Classic Industries Gauges**

O-ring is not required when using aftermarket gauges

1. Use the (4) #8-32 x 3/4" long Truss Head screw & feed thru front of dash then thru Bezel and screw into the Classic Industries mounting bracket and tighten. *



* Careful- Do not overtighten screws