


Ford Bronco Carpet Instructions

Front and Rear Mats install


1. Identify Driver side and Passenger side mats.
2. If you have a dimmer switch located on the floor you can choose to cut out the area in the mat to accommodate it. It is best to use a sheet of paper and align the edge along the driver side (left) footboard and make sure the paper extends longer than the top of the mat. Then create an indent in the paper with your finger and then cut out the hole for the dimmer. Then place the paper over the dimmer switch and the place mat on top of paper. Then mark where the top of mat is on the paper. Remove mat and paper and trim the top of the paper which was marked at the top of the mat. Then place paper on top of mat aligning the top and the side of the paper with the mat and mark the location of Dimmer switch. (If you are installing our Disruptive Restomods Dimmer Switch Cover then proceed 2a) if not then cut out cut out hole for Dimmer switch.

2a. Instructions for install Disruptive Restomods Dimmer Switch Cover

- Using the location of the Dimmer Switch previously found above; increase the diameter of the hole to 1 1/4". Please use the diagram and cut out the center of it to act as guide.
- Mark the location of Dimmer Switch Cover on the mat
- Cut out hole in the mat and push thru the Dimmer Switch Cover

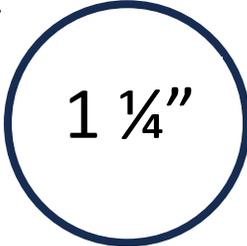


3. Cut Velcro sheets as shown.
4. If applying over existing carpet then only attach the Velcro strips with nubs/rough texture along the edges to the bottom-side of the mats then place into position.
5. If applying over steel floor then clean the areas where the Velcro will attach to it. Then attach the Velcro strips (felt side) along the edges to the bottom side of the mats. Then place the Velcro with nubs/rough texture to those Velcro strips. Then place the mats into position.

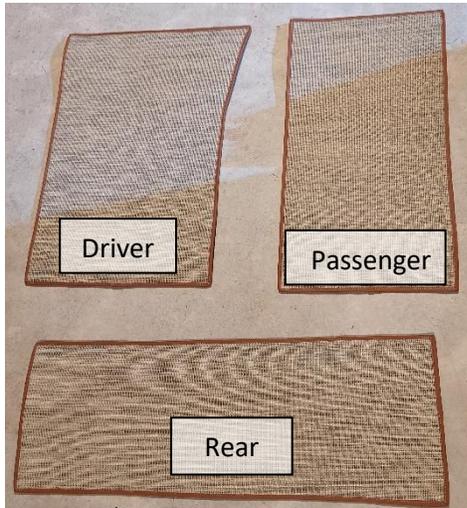

Carpet - Tunnel Section Installation

1. Follow the instructions above for the front mat installation. Rear mat will be installed after Main Floor carpet will be installed
2. Remove front and rear seats, center console, floor shifter covers and/or existing carpet.
3. For the tunnel area it is best to develop a template by using tape for the tunnel areas to be cut out. See diagrams
4. Measure the distance of the edges of the raised section of the tunnel to the flat section and then place your template on the carpet tunnel area section according to those dimensions. For instance: driver side was 6 1/2" and passenger side was 6".
5. Then cut out section. Then place Velcro strips along the edges of the Tunnel cover as shown above. Reinstall your shifter covers

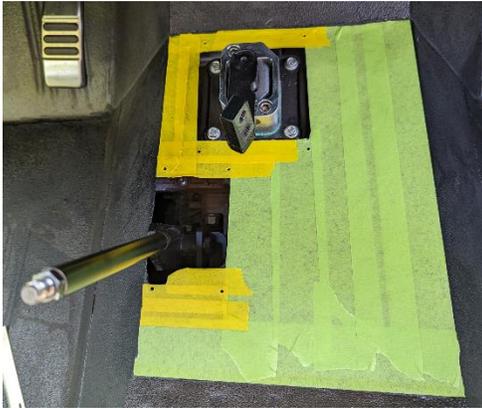

Carpet – Main Floor Section Installation

1. Remove front and rear seats, center console, floor shifter covers and/or existing carpet. Install bolts into the locations of where your seats and seat belts and console bolt to.
2. Roll out the Main Floor section of the carpet
3. Locate the bolt heads under the carpet and then mark and cut an "X" into the carpet. Once the bolt head is exposed then you can trim the 4 triangles that the X pattern made so now it is a square pattern which will be easier to insert the bolt thru later. (For the Passenger side seat make sure to lay the carpet tight to the floor so the edge aligns flush to the door sill)
4. Once all the holes are made reinstall the seats, seat belts and center console.
5. If you have a roll bar mark and trim the carpet so that the edges can be tucked under the roll bar plate approx. 1/4". After you cut the edging apply super glue to the edging and thread to keep it from pulling out.
6. For the edges of the Main Floor section the Velcro strips can be used or just allowed to lay flat as it has enough weight to not move around.
7. Position where you would like to use the Rear mat either in front of the rear seat or behind and use the Velcro strips to keep it from moving around.
8. Congratulations on your install!!!! Now please enjoy you new Disruptive Restomods Flooring.



* Please note – Disruptive Restomods LLC does not cover any claims for damage