

Steering Column Firewall Mount (2 inch) 1966-1977 Bronco

www.disruptiverestomods.com


Revision
Oct. 15, 2024



Scan code to confirm latest revision

**** WARNING** – Inspection of the firewall and the steering column threaded inserts should be performed before installation to insure firewall is not rusted out and still has structural integrity and threads for the steering column mount are not stripped or rusted out. Disruptive Restomods LLC does not cover any claims to damage during or after installation.

1. (if applicable) remove old Steering Column and Mount.
2. In the Engine bay install new **Steering Column Firewall Mount** onto the firewall and only hand tighten the supplied (3) 5/16-18 Flanged Bolts so it can be adjusted to the desired location later then tightened at that time.

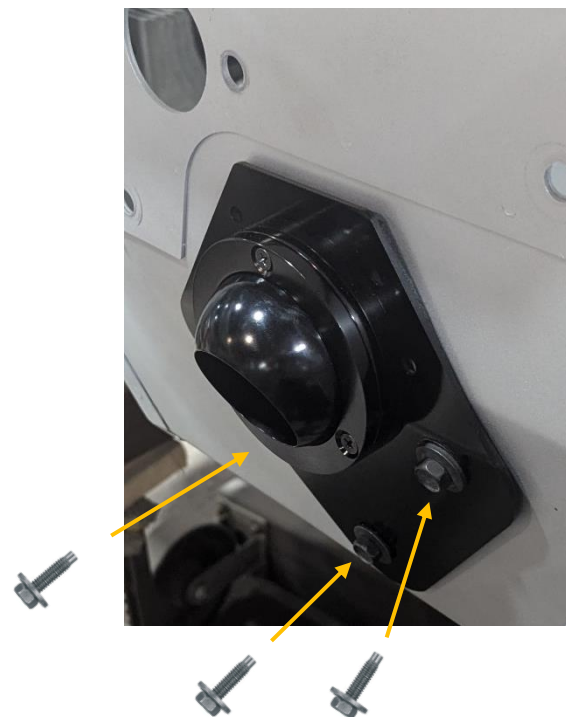

2. From inside the Bronco slide the aftermarket 2" column thru the **Steering Column Firewall Mount** and install and hand tightened the (2) bolts (not provided) that hold the Steering Column to cowl section of the Bronco. (**Note: You do not need to use a Steering Column Firewall Seal or screws as the Steering Column Firewall Mount has a gasket already applied plus the Steering Column Firewall Seal does not fit a 2" Column.**)
3. In the Engine bay the **Steering Column Firewall Mount** does provide the ability to move the Steering Column to gain more room so once the desired location is determined tighten the (3) 5/16-18 Flanged bolts.
4. From inside the Bronco tighten the (2) Steering Column bolts which were previously install in the cowl section.
5. From inside the Bronco tighten the set screw with a 1/8" Allen wrench located on the **Sphere** of the **Steering Column Firewall Mount** to secure the Steering Column within the **Steering Column Firewall Mount**.
6. Complete installation of Steering Column and accessories and confirm no interference or binding.