


## Vintage Air Bezels Instructions

[www.disruptiverestomods.com](http://www.disruptiverestomods.com)

Disruptive Restomods  
Bezel

Revision  
May 26, 2022

Rotary Pot  
Assembly

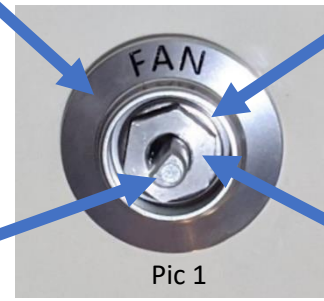

Washer

Control Pot  
Adapter Nut

Pic 1

If replacing Vintage Air Labels:

1. Rotate (1) Control knob counter-clockwise until it stops. Then remove knob.
2. Using ½" socket loosen Control Pot Adapter Nut about ½ turn until slightly loose.
3. Place a long piece of scotch tape over the rotary pot as shown in Pic 2 to keep it from falling behind the dash.



Pic 2

4. While holding the Rotary Pot Assembly and scotch tape loosen and remove the Control Pot Adapter Nut and washer.
5. Remove Vintage Air Label from dash or if your fear peeling away the paint a little heat via hairdryer can be applied to loosen the glue.
6. Place Washer over the Control Pot Adapter Nut and put them into the Disruptive Restomods Bezel



Pic 3

7. Thread the scotch tape thru the Bezel Assembly and while holding the scotch tape and Rotary Pot Assembly orient the Rotary Pot Assembly as Pic 1 and start to tighten by hand the Control Pot Adapter Nut onto the Rotary Pot Assembly. (Using a flat head screwdriver as shown can help. [Pic 3])
8. Once threading has started, tighten Control Pot Adapter Nut using ½" socket. Make sure the bezel lettering is vertical.
9. Remove scotch tape and replace Control knob and repeat for remaining bezels.

New installation:

1. Place Washer over the Control Pot Adapter Nut.
2. Put Control Pot Adapter Nut with Washer into Disruptive Restomods Bezel and while holding Rotary Pot Assembly from the back of the dash orient the Rotary Pot Assembly as Pic 1 and start to thread the Control Pot Adapter Nut onto the Rotary Pot Assembly by hand.
3. Once threading has started, tighten Control Pot Adapter Nut using ½" socket. Make sure the bezel lettering is vertical.
4. Repeat for remaining bezels in the following orientation shown.



Disruptive Restomods LLC does not cover any claims to damage