

Tailgate Rearview Camera Assembly


www.disruptiverestomods.com

Revision
April 21, 2026




Scan code to confirm latest revision

**** IMPORTANT- *** Please note – Disruptive Restomods LLC does not cover any claims for damage during and after the install of the product and it is the responsibility of the driver to confirm all areas are clear of all obstructions while driving.

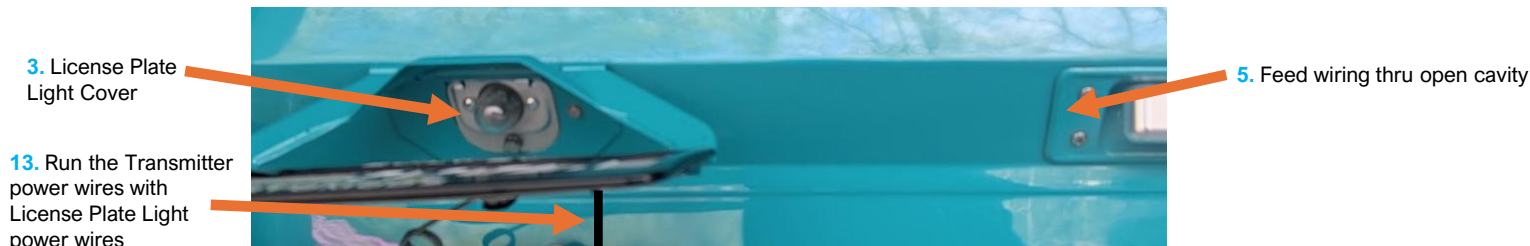

1. (if applicable) Remove old Tailgate Handle and Bucket Assembly.
2. Inspect the mounting holes for damage and if no damage then test fit the supplied ¼-20 screws by screwing them into the threaded holes in the vehicle. If damage or have paint inhibiting them then tap holes with a ¼-20 tap.
3. Remove the License Plate Light Cover to gain access to the open section in the Tailgate.
4. Install Gasket behind the Billet Tailgate Bucket while feeding the wiring of the camera thru the Gasket.
5. Feed the wiring thru the driver side of the Tailgate in the open section of the Tailgate to the hole where the License Plate Cover was removed and dangle the red and yellow connectors camera outside of the hole.
6. Connect the Passenger Side Tailgate Latch Release Rod to the Tailgate Pivot Plate. Passenger side uses the back hole. Then put cotter pin (not included) in bottom of the Latch Release Rod.
7. Connect the Driver Side Tailgate Latch Release Rod to the Tailgate Pivot Plate. Driver side uses the front hole. Then put cotter pin (not included) in bottom of the Latch Release Rod.
8. Insert the Billet Tailgate Camera/Handle Assembly into the Tailgate while using a slight twisting motion to insert the top section into the opening first. Align the Gasket and lightly install the (4) ¼-20 x 1" Flat Head Screws into the Tailgate. Once Gasket is aligned behind the Assembly then tighten.
9. From the inside the vehicle/Tailgate insert the (2) ¼-20 x ½" Screws thru the ¼" Flat washers & install into Tailgate Bucket.
10. Test the Tailgate Handle function by opening and closing the Tailgate.
11. Connect the Wireless Camera Transmitter yellow and red connectors to the Camera's connectors. (See Page 2)
12. Disconnect Battery before performing the next steps.
13. Run and connect the Transmitter wires per the instructions on the Wiring Diagram on Page 2.
14. Run and connect the Receiver wires per the instructions on the Wiring Diagram on Page 2.
15. Ziptie (not included) the Transmitter to the Driver side Tailgate Latch Release Rod so that it does not move around.
16. Connect the Battery and test the system by turning the Ignition to the "ON" position and then placing the Shifter into Reverse. There will be a slight delay of a couple of seconds & the Display should show the view from the Rearview camera.
 - a. If there is no change on the Display check wiring connections and ensure your Backup Lights are illuminated.
17. Once everything is working. Reinstall your License Plate Light Cover and enjoy your Disruptive Restomods Rear View Camera System.

WIRING FOR INSIDE THE VEHICLE

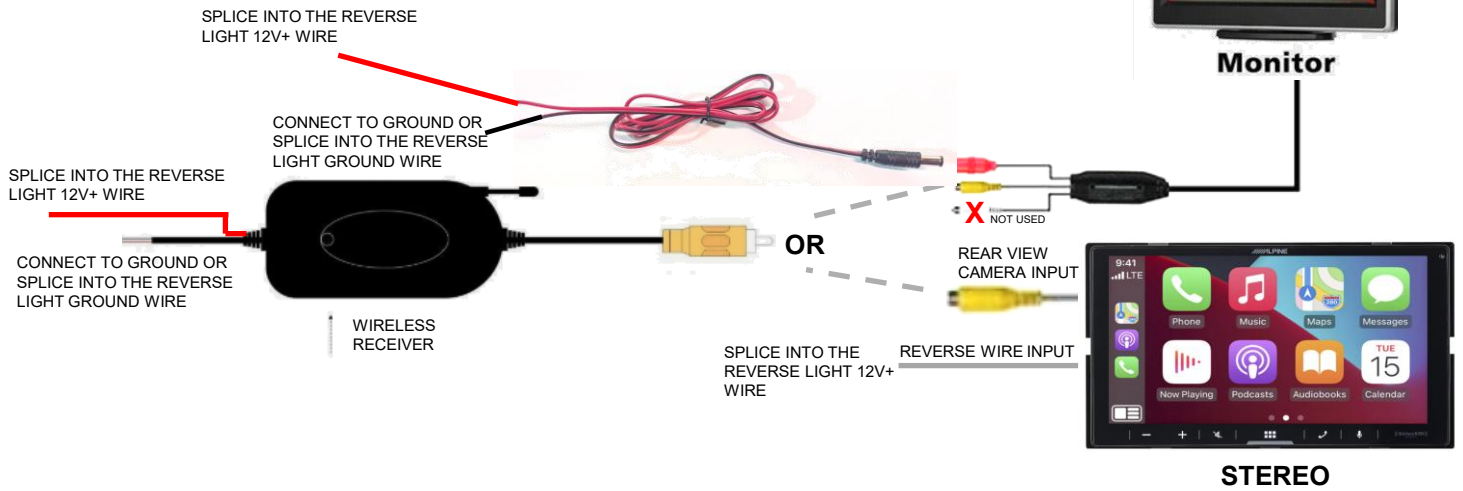

WIRING FOR REAR OF THE VEHICLE

