

Cable Shifter Bushing Installation Instructions.

These instructions are for replacing the black end of the cable shifter cable at the shifter mechanism.

This is what your shifter looks like with the broken bushing removed.




The first step is to measure the distance from the center of black plastic end to a reference point so can install the new end in the same location.



Remove the black plastic end the best way you can. Use a knife. Use a lighter to soften it (don't set your car on fire). Do not cut the metal rod; just remove the plastic. Here is how the shift cable looks without the plastic end.



Slide the new cable end over the cable and measure to make sure you place the center of the hole in same location and rotation as the old black end. Once you are satisfied with the location, tighten down the set screw to lock it in place.

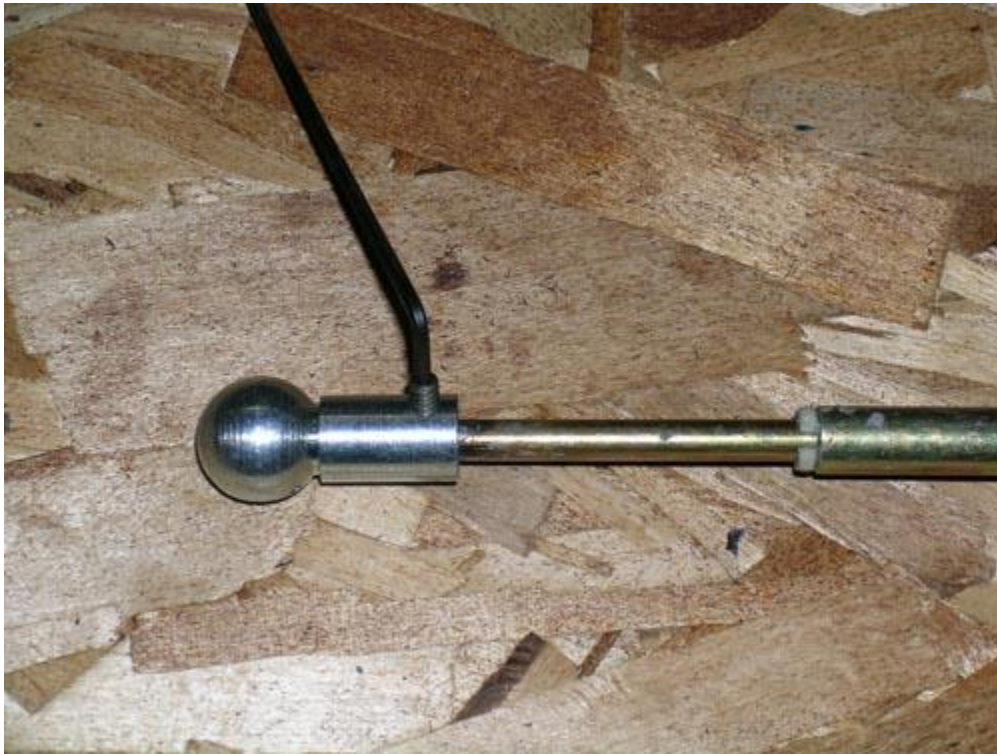

Here is what your new shifter cable looks like installed. (make sure you slide the wire clip through the holes and lock the clip around the ball.)



Enjoy your shifter