


## MIP (Replica) Mono Shock for RC10 Front Ends

*The MIP mono shock was developed to give you the maximum suspension and handling for your RC10. Good luck in your racing.*

1. Mark and drill a 3/32 hole in the arm for mounting shock arm. Screw will self thread but use nut on inner side.
2. Bolt shock arm to suspension arm using 3/8 Allen screw with nut and 2-56 ball end for sway bar.
3. Bolt shock and upper control brace using stock hardware.
4. Bend sway bar to desired shape and mount.
5. Use a stock rear shock with silver spring and 10wt oil for mono shock.
6. Trim body to fit low in order to clear shock

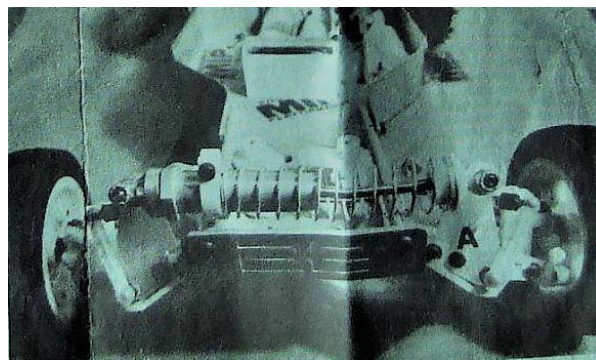


*Text copied from original instruction sheet  
Pictures are from the internet*

## MIP (Replica) Mono Shock for RC10 Front Ends

*The MIP mono shock was developed to give you the maximum suspension and handling for your RC10. Good luck in your racing.*

1. Mark and drill a 3/32 hole in the arm for mounting shock arm. Screw will self thread but use nut on inner side.
2. Bolt shock arm to suspension arm using 3/8 Allen screw with nut and 2-56 ball end for sway bar.
3. Bolt shock and upper control brace using stock hardware.
4. Bend sway bar to desired shape and mount.
5. Use a stock rear shock with silver spring and 10wt oil for mono shock.
6. Trim body to fit low in order to clear shock

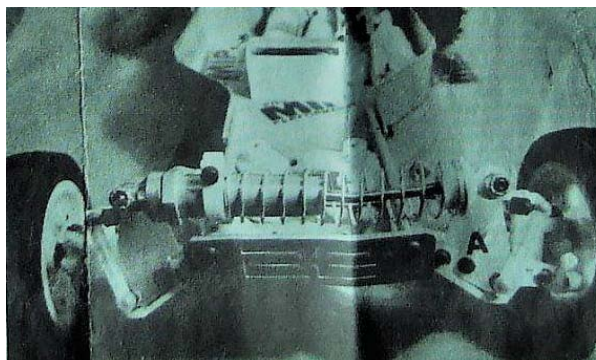


*Text copied from original instruction sheet  
Pictures are from the internet*

## MIP (Replica) Mono Shock for RC10 Front Ends

*The MIP mono shock was developed to give you the maximum suspension and handling for your RC10. Good luck in your racing.*

1. Mark and drill a 3/32 hole in the arm for mounting shock arm. Screw will self thread but use nut on inner side.
2. Bolt shock arm to suspension arm using 3/8 Allen screw with nut and 2-56 ball end for sway bar.
3. Bolt shock and upper control brace using stock hardware.
4. Bend sway bar to desired shape and mount.
5. Use a stock rear shock with silver spring and 10wt oil for mono shock.
6. Trim body to fit low in order to clear shock

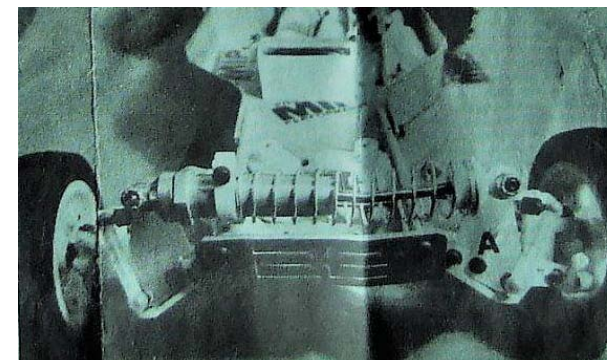

*Text copied from original instruction sheet  
Pictures are from the internet*