

Losi Motor Centering for XX

NOT FOR USE WITH HYDRADRIVE

- 1) Remove motor and slipper
- 2) Remove motor plate
- 3) Reinstall motor plate using included spacers and longer screws
- 4) Mark the motor plate through the chassis hole that was previously used to attach the motor plate.
- 5) Remove motor plate. Drill the new locations with a 7/64 drill bit. Do not try to drill without removing the plate.
- 6) Reinstall motor plate again, this time also reattach the plate to the lower chassis using the stock screws.
- 7) Slide the slipper spacer on the topshaft with the beveled portion facing the bearing. Reinstall the remainder of the slipper, using the shorter spring made for the Hydradrive.

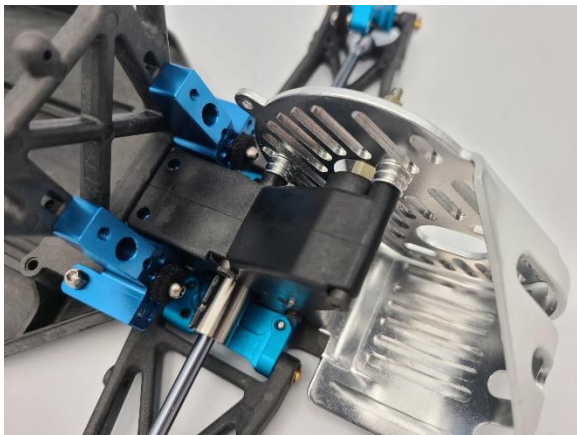


Photo courtesy of Lavigna on RC10Talk

