
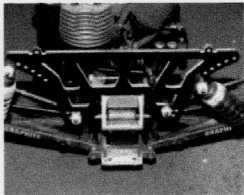
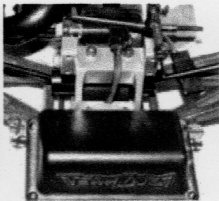


XXXNT REAR Aluminum Bulkhead For Mounting Factory Works XXXNT Rear Shock Towers PT# 2161

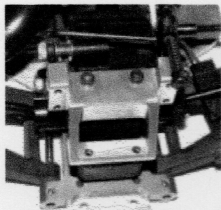

Factory WORKS XXXNT Aluminum rear bulkhead mounts to the tranny case in the stock position and using the stock screws as the stock molded shock tower. Our oval towers PT#'s 2193 and 2194 both mount to the rear of the bulkhead after it has been installed to the tranny case. The shock towers come with 4/40 flat head screws for mounting them to the rear bulkhead.

REVISED 8/10/04