


TOOLGRID BOARD SET UP INSTRUCTIONS


- 1** Measure the inside width and depth of the drawer.

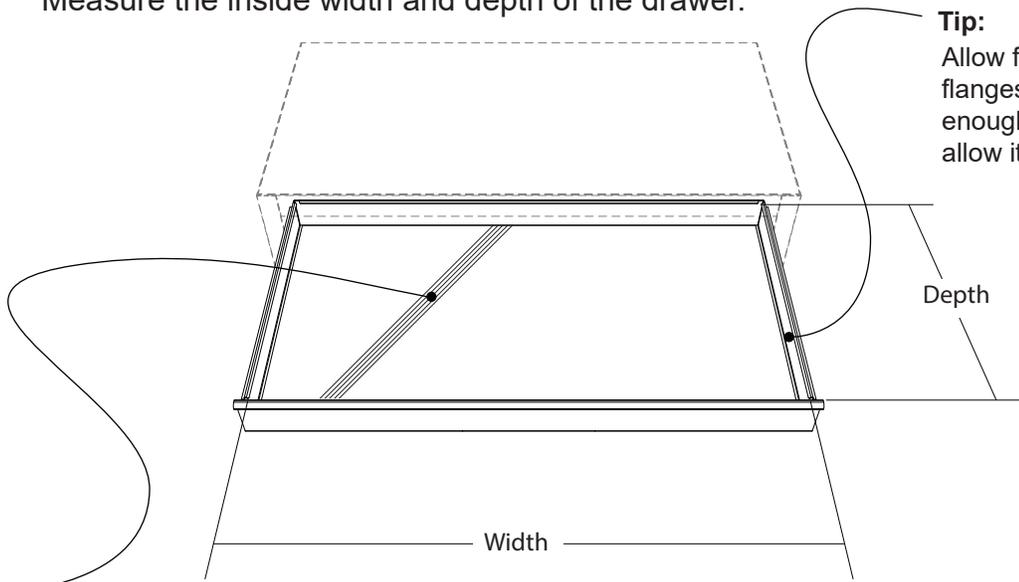


Tip:
Allow for protruding features such as flanges and fasteners. There must be enough clearance around the board to allow it to easily slide in place and lay flat.

Tip:
Be sure to keep the non-slip liner supplied with your toolchest in place. This will prevent the toolgrid board from sliding around.


- 2** Determine which Toolgrid board(s) are closest to the drawer dimensions. Extra wide drawers will require two Toolgrid boards.

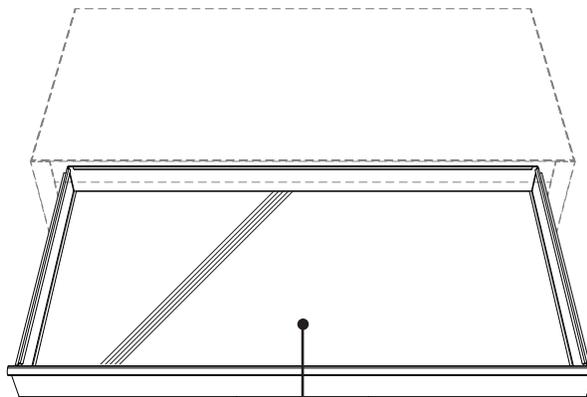

Tip:
It is best to select Toolgrid boards that are slightly larger than the drawer dimensions. This way you can trim them down for an exact fit.

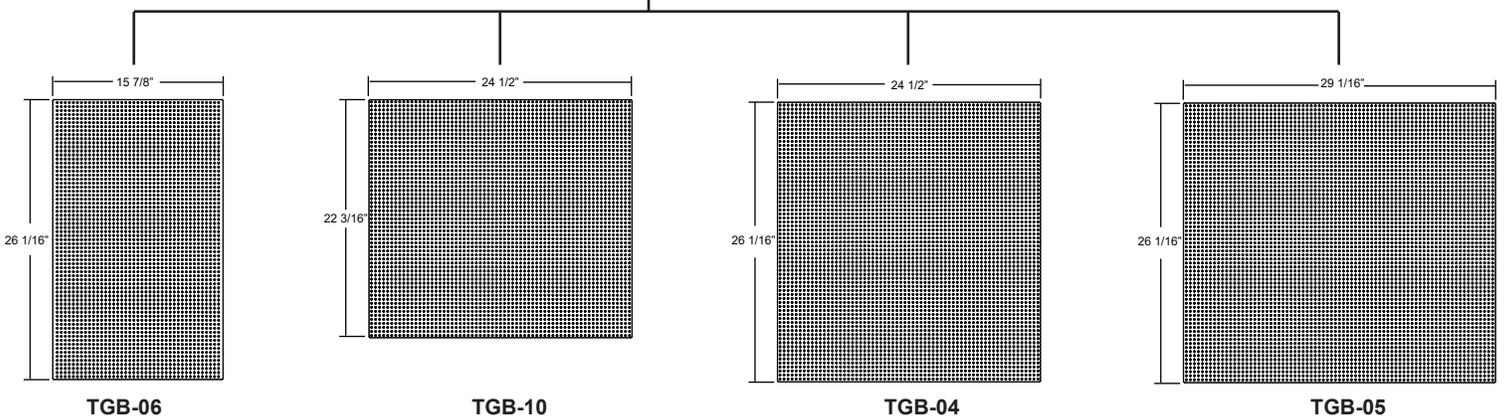

- 3** Determine the final “cut down” board size and mark the cut lines on the Toolgrid board. To cut away the excess material it is recommended that you use a jig saw with a fresh cutting blade.

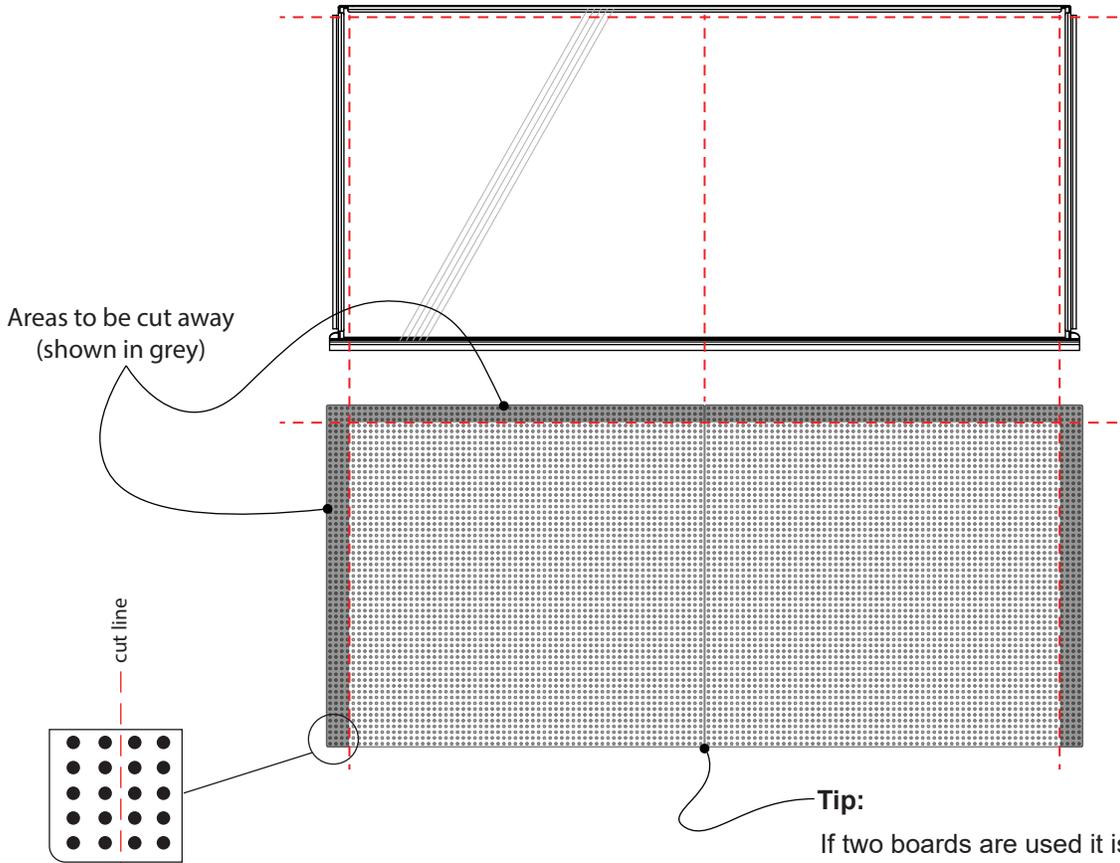

Tip:
If two boards are used it is best to cut them so the seam between the two boards meet in the middle of the drawer.

Tip:
For the best results, it is recommended that the board be cut between two rows of holes. If needed, cut the board slightly smaller than your measurement.

- 4** Place the Toolgrid board(s) into the drawer. You are now ready to organize your tools.

