


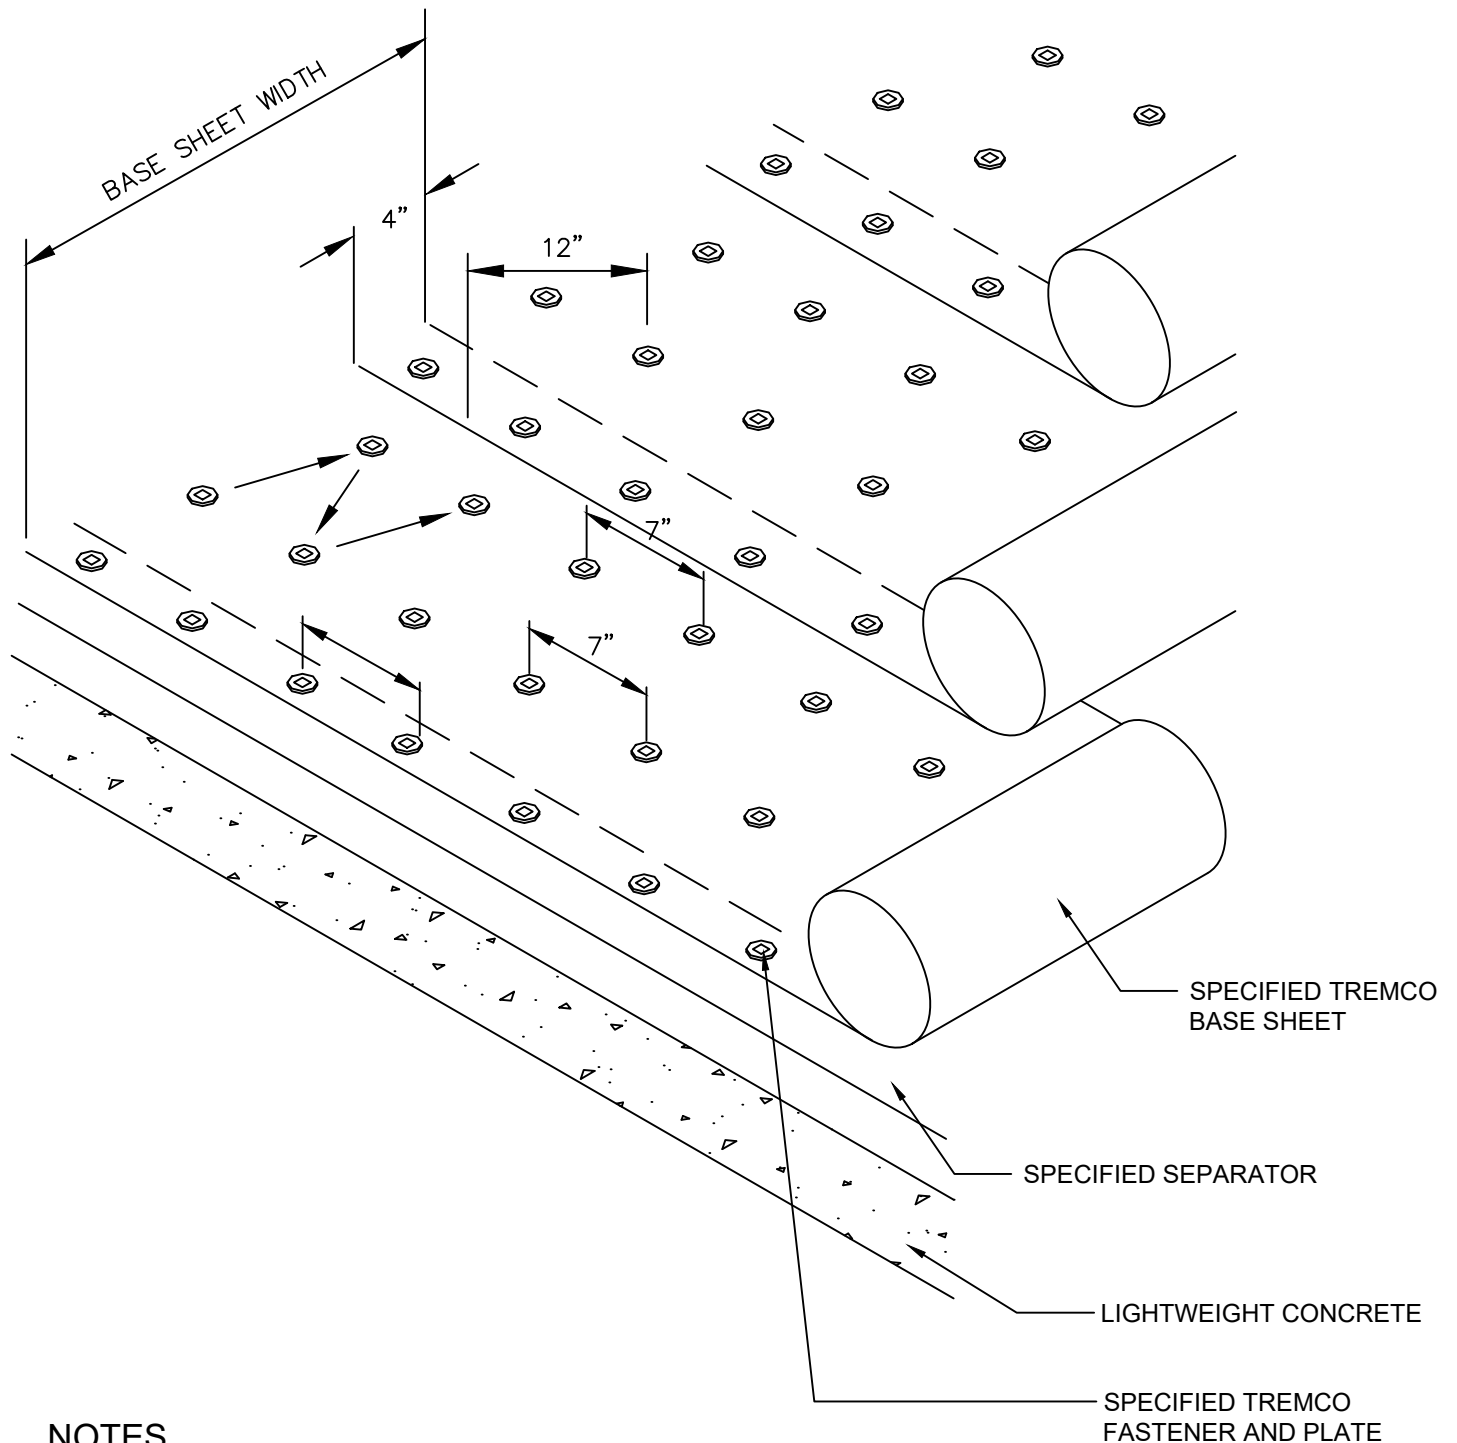

NOTES

1. ATTACH BASE SHEET TO THE ROOF DECKING WITH APPROVED FASTENERS AND DISCS.
2. SPACE FASTENERS 7 INCHES ON CENTER ALONG SIDELAP AND 7 INCHES ON CENTER IN TWO ROWS EQUALLY STAGGERED DOWN THE LONGITUDINAL CENTER OF THE SHEET (12 INCHES FROM EACH EDGE).
3. INCREASE PERIMETER EDGE FASTENING BY 70% AND CORNER FASTENING BY 160% PER FM GLOBAL LOSS PREVENTION DATA SHEETS 1-28 AND 1-29.
4. DETERMINE FASTENER DENSITY ON A UNIT AREA PER FASTENER BASIS. ADD ADDITIONAL ROWS AND INCREASE FASTENERS PER ROW. DO NOT SPACE FASTENERS CLOSER THAN 4 INCHES ON CENTER.