


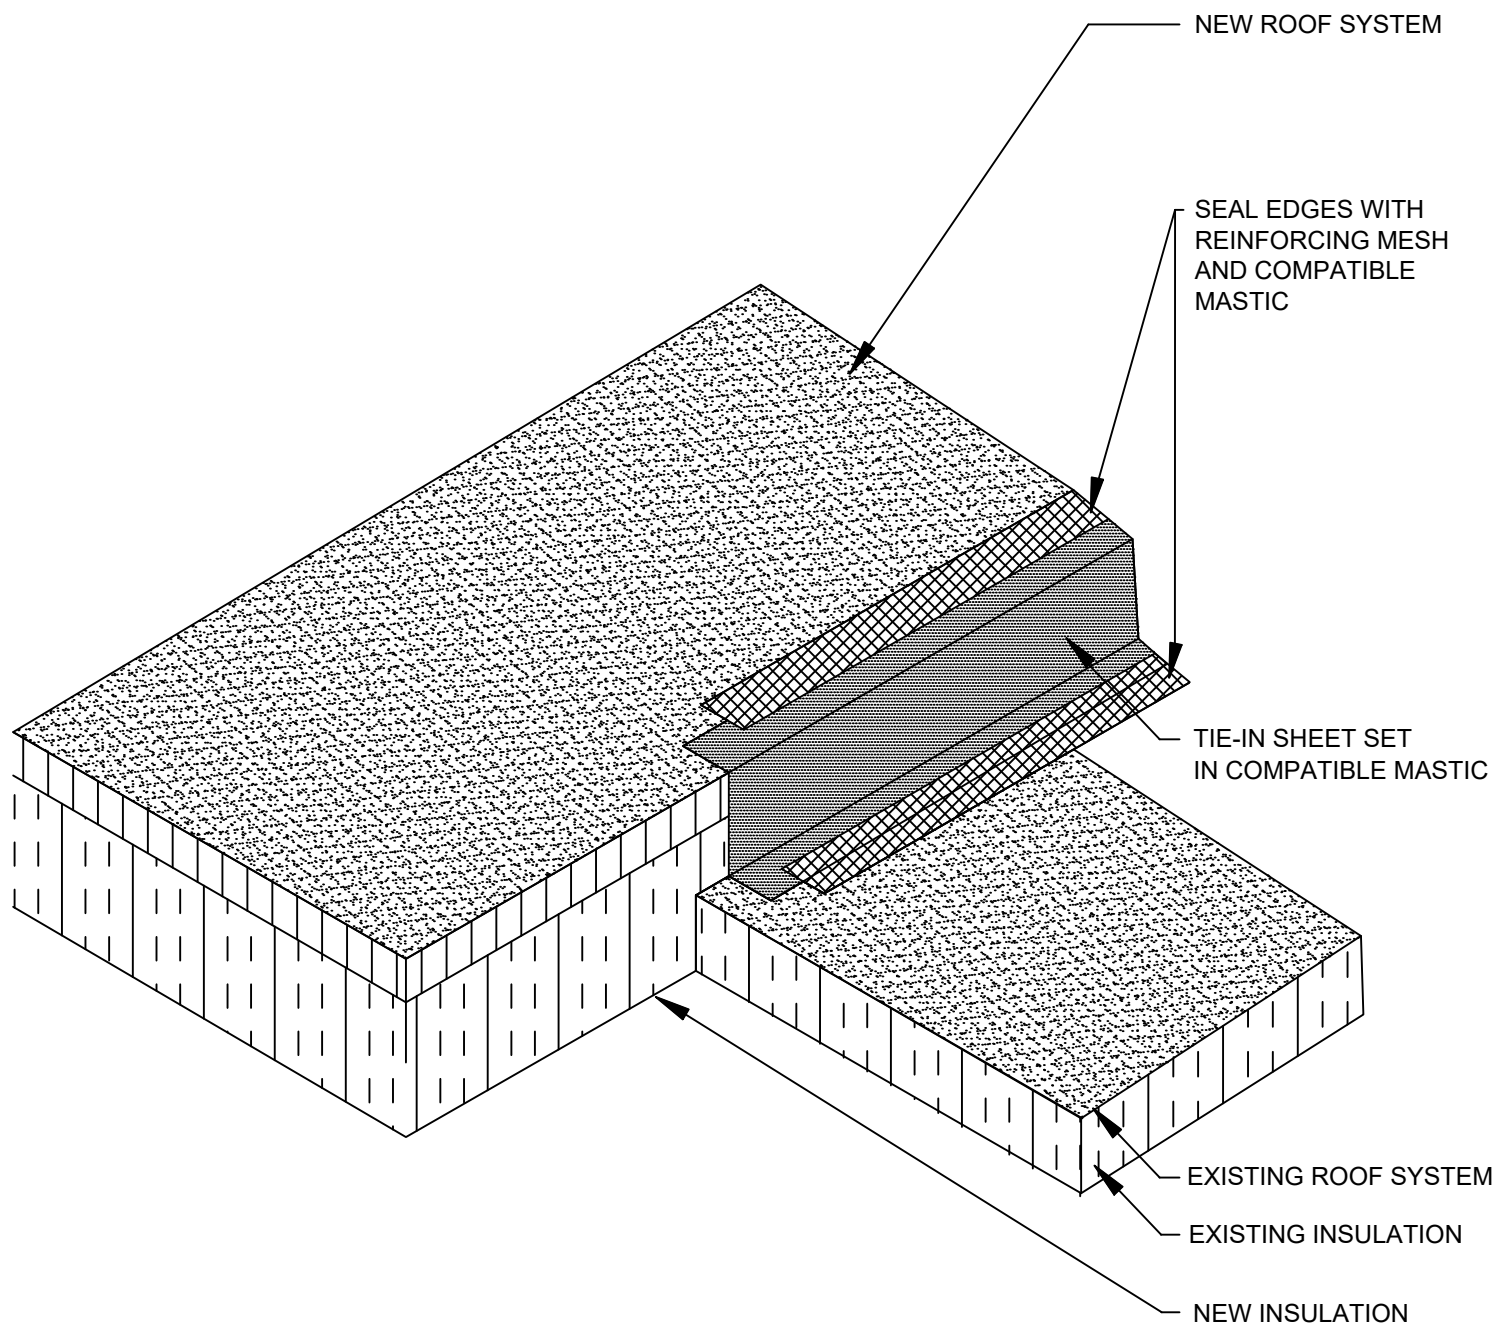

NOTES

1. BEFORE NEXT DAY'S WORK, REMOVE TEMPORARY TIE-IN AND INSULATION FILLERS
2. EXTEND TIE-IN SHEET MINIMUM OF 6-INCHES ONTO BOTH SURFACES