



Fold here for outward swing door in non-flush mount applications.

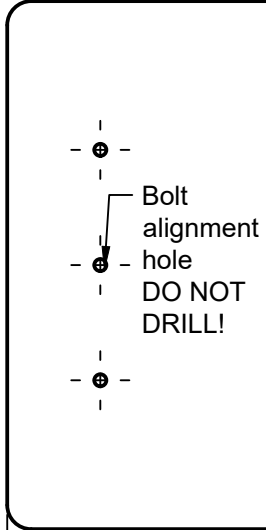

Flush mount inward swing applications. Align this edge with door frame.

Drill  $\frac{1}{16}$  pilot holes for wood frame installations.

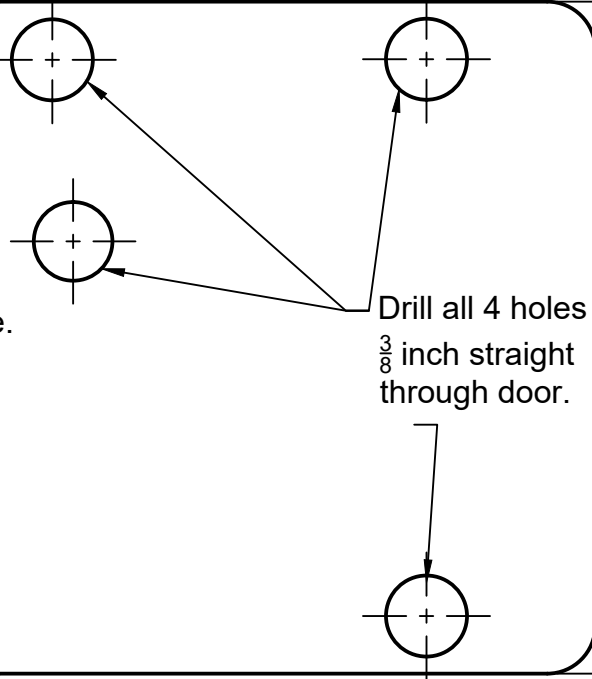

Left hand door swing cut out template along this line

3.5

6.36


Fold here for outward swing door in non-flush mount applications.

Right hand door swing, cut out template along this line.

TEACHERLOCK  
INSTALLATION TEMPLATE  
6.5.4

PLEASE PRINT USING  
NO PRINTER SCALING.

All measurements and  
indications are from  
occupancy side of room.

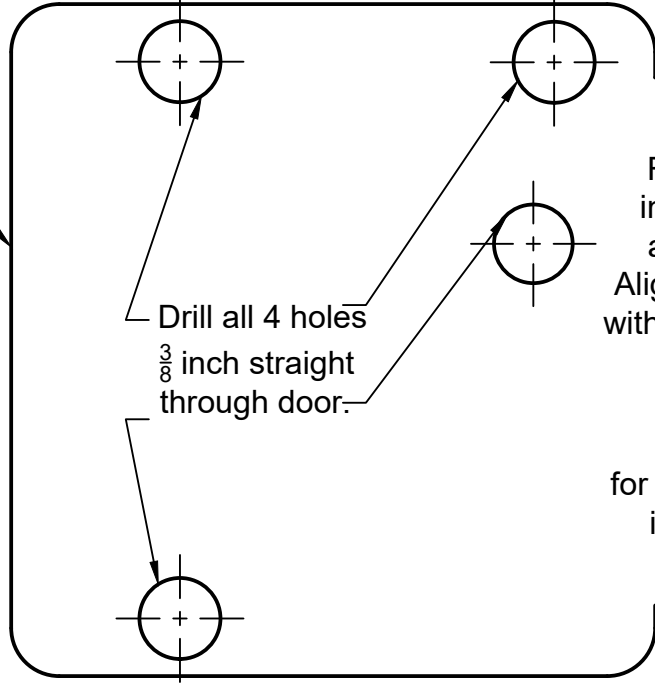

Flush mount inward swing applications. Align this edge with door frame

Drill  $\frac{1}{16}$  pilot holes for wood frame installations.

