





HANDLING INSTRUCTIONS FOR YOUR NEW VANITY TOP

CAUTION!



The backsplash is extremely fragile and may break if not handled properly. Read carefully before handling your new vanity top.

Only turn the vanity top or backsplash to a horizontal position when you are preparing to install it on the vanity cabinet.

CORRECT:

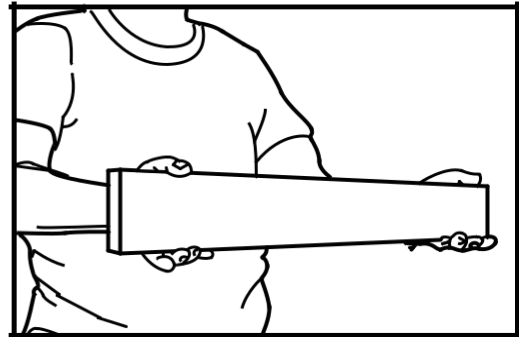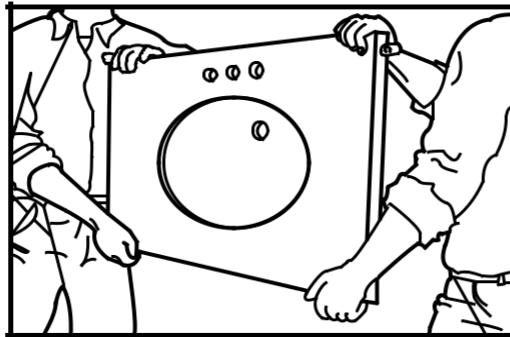

NOT CORRECT:

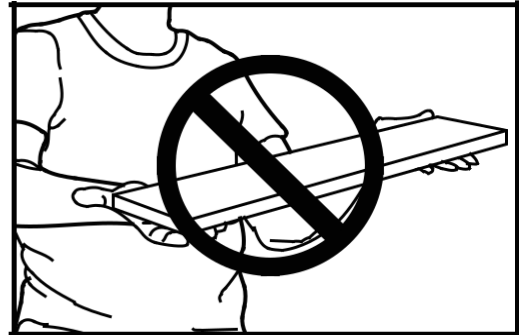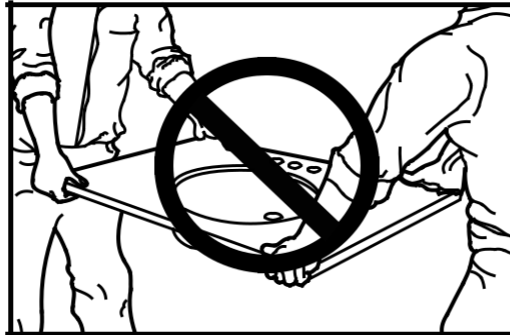

BEFORE INSTALLATION: Please inspect your vanity top thoroughly to ensure there are no damages or defects PRIOR to installation. Warranty DOES NOT cover removal, installation or labor costs.

INSTALLATION INSTRUCTIONS FOR GRANITE AND MARBLE VANITY TOPS

STEP 1: Vanity Preparation

Ensure that the vanity base cabinet on which the vanity top is to be placed is level and properly secured to the wall. Your 3S Stone® vanity top is made from heavy stone material and requires solid support. If the vanity is of a “frameless” design, it is recommended that additional support be added. Additional wood support should be 1-inch x 1-inch wood sections that run along the top inside edge of the sides and front of the vanity. The wood sections should be affixed to the vanity using construction adhesive and wood screws that do not protrude through any exposed sides. Please refer to your cabinet manufacturer’s instructions for installation and additional support details. Next, place the vanity top onto the base cabinet to ensure proper fitment. Some cabinets may have tight clearances that may prevent the top from laying level and flush, especially near the sink area. The sink is securely bonded to the top with a strong adhesive and four (4) metal mounting clips. If additional clearance is needed, removing the obstructing mounting clip(s) may resolve fitment issues.

STEP 2: Top Installation

Apply a thin bead of 100% silicone sealant on the cabinet-top edges. Place the vanity top on the vanity with an overhang of ½-inch on the left and right edges. Allow the sealant to dry per the manufacturer’s instructions.

STEP 3: Backsplash and Side Splash Installation

Be sure the wall is clean, dry and smooth. Repair any holes or uneven sections using a patching compound. Remove loose paint, any wallpaper or decorative material. Apply two (2) beads of caulking or construction adhesive to the rear of the backsplash (and side splash if required) and attach the backsplash by pushing it firmly onto the wall.

STEP 4: Faucet and Drain Assembly Installation

Install the faucet and drain assembly per the manufacturer’s instructions. DO NOT tighten the drainpipe connection to the bottom of the bowl with a wrench as it may result in damage to the bowl. Tighten ONLY by hand.

INSTALLATION INSTRUCTIONS FOR VANITY TOPS WITH VESSEL SINKS

STEP 1: Vanity Preparation

Ensure that the vanity base cabinet on which the vanity top & vessel sink are to be placed are level and properly secured to the wall. Your vanity top is made from heavy stone material and requires solid support. If the vanity is a “frameless” design, it is recommended that additional support be added. Additional wood support should be 1-inch x 1-inch wood sections that run along the top inside edge of the sides and front of the vanity. The wood sections should be affixed to the vanity using construction-grade adhesive and wood screws that do not protrude through any exposed sides.

STEP 2: Pre-Drilled Holes

Your 3S Stone vanity top has three pre-drilled faucet holes on the underside of the top. These partially pre-drilled faucet holes are labeled on the topside of the vessel top with YELLOW DOTS as #1 (left faucet placement), #2 (center faucet placement) & #3 (right faucet placement). Determine the location you would like your faucet to be located and proceed to knock out the hole as follows:

- Place a flat head screwdriver or a 3/4-inch or smaller chisel directly on the center “X” on the yellow dot and tap with a hammer to remove the granite section,
- Clean away any rough edges with the chisel or screwdriver and verify that your faucet supply lines easily fit through the opening (NOTE: If you are using a wall mount faucet, you will not need to knock out any of the faucet holes and may simply remove the yellow dots).

STEP 3: Top Installation

Apply a thin bead of 100% silicone sealant on the cabinet-top edges. Place the vanity top on the vanity with an overhang of 1/2-inch on the left and right edges. Allow the sealant to dry per the manufacturer’s instructions.

STEP 4: Faucet and Drain Assembly Installation

Install the faucet and drain assembly per the manufacturer’s instructions.

Note: Side splash, faucet and drain assembly are NOT included.

CARE AND MAINTENANCE FOR GRANITE & MARBLE VANITY TOPS AND SINKS

Your new natural granite or marble vanity top has been factory polished to a smooth finish and has had the initial protective sealant applied. To properly maintain the surface, the following procedures are recommended:

- Reseal your vanity top no less than one time per year. Before applying the sealant, all exposed areas should be completely clean and dry. A high-quality stone sealant is available for purchase at your local home improvement store. Follow the instructions on the sealant container;
- For routine maintenance and cleaning, you may wipe off and clean your vanity top with soap and water. Once per week, or as needed with a heavier use, use a stone spray cleaner or polish, either of which are available from your local home improvement store. Follow the instructions on the stone cleaner or polish container;
- Place protective pads on the bottoms of any heavy objects such as pottery, vases or other objects that may scratch the stone surface;
- Liquid spills, such as alcohol, medications, etc., should be cleaned promptly. Some liquids with high-acid content can etch stone surfaces if left for any length of time. Common products that should be promptly cleaned are shaving cream, toothpaste, perfume, cologne, nail polish, nail polish remover, hair coloring or perm products, shampoo, drain opener and toilet bowl cleaner;
- Avoid using abrasive cleaners or rough cleaning pads. If necessary, a soft buffing pad can be used to remove stubborn materials that may have become affixed to the top;
- Do not stand or place extremely heavy objects on the top.

Your vitreous china sink is incredibly durable and resistant to stains. Here are tips for keeping your sink clean.

- Clean the topside and outer surface areas of the sink with mild soap and warm water
- Wipe the entire surface completely with a clean, soft cloth
- You may use soft abrasive cleaners when necessary to clean the sink
- Do not use strong abrasive cleaners or solvents as they will scratch and dull the surface
- If the surface becomes excessively dirty, use a general-purpose cleaner
- A method to remove hard water mark, grease or soap scum deposits is with a non-abrasive bathroom cleaner found at most home improvement stores

If you have any questions, please contact our Customer Service Department at: Splendid International USA Corporation; 8647 South 212th Street, Kent, Washington 98031; Phone: 253-813-5692; Email: customerservice2@3ssplendidintl.com; www.3ssplendidintl.com