


Freeform / Kidney Measurement Instructions

If original manufacturer's pool drawings are not available, an A-B plot of the pool perimeter must be given. Liner A-B points must be measured as follows:

- 1) In your drawing, the deep end of the pool must be on the left side with your A and B points shown **underneath** the pool.

Make A-B line at least 12' wide. It cannot cross the pool, if extended.

- 2) Specify A & B Points at hopper transitions. You must have the pool drawn from directions shown with (A) on the left and (B) on the right.

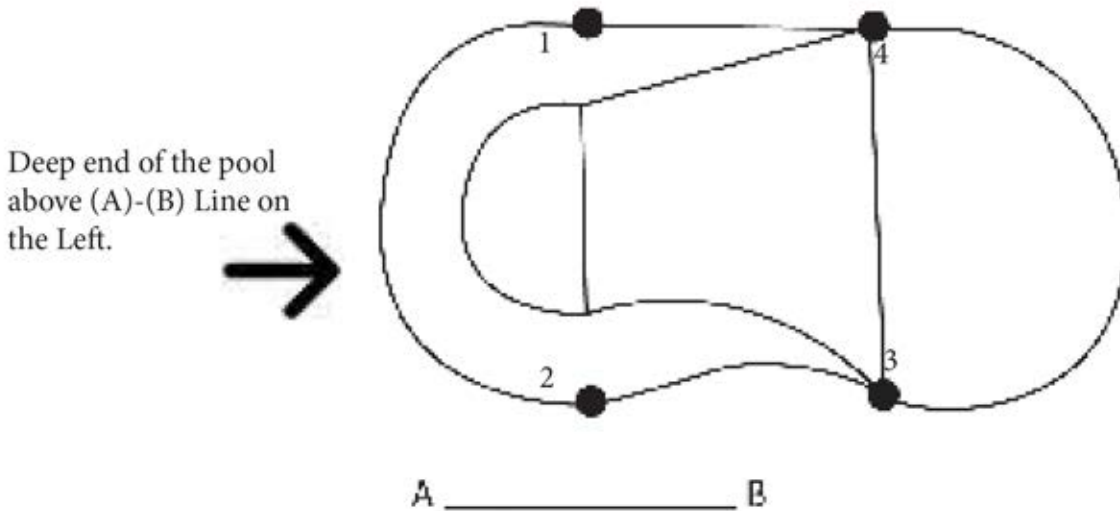

- 3) Keep measurements to 1/2" increments. They do not have to be evenly spaced around the pool. (Every 1 1/2 feet around the large radius—sharp turns or inside turns every 6 inches.)
- 4) If the pool has cut out type step, include points at the front of the step where pool panel would be if there were not a step.
- 5) With A-B plot, please give a detailed drawing of the pool. Show all interior dimensions and detail the hopper contour.

(Include whether the slope of the hopper follows the curve or is straight.) Fill out standard custom liner order form with pattern, dimensions A, B, C & D.

- 6) Measure the pool perimeter around the bead track. List the total perimeter distance.