



WEIGH ME RV

Caravan Loading Visual Guide

Your quick-reference guide for safe caravan loading. Use this to understand weight distribution and avoid common mistakes. Travel smart, travel safe!

THE 60/40 RULE


60% OF WEIGHT
TO THE FRONT

40% OF WEIGHT
TO THE REAR




Packing your caravan properly is essential for safe towing. Aim to place about 60% of your load forward of the axle, keeping heavy items low and close to the axle or slightly forward. Avoid placing heavy gear at the rear, as this increases sway risk. Use the 60/40 rule as a guide, and remember lighter items can be placed higher if required. Maintain a balanced setup for a smoother, safer towing experience.

Good vs Bad Load Distribution

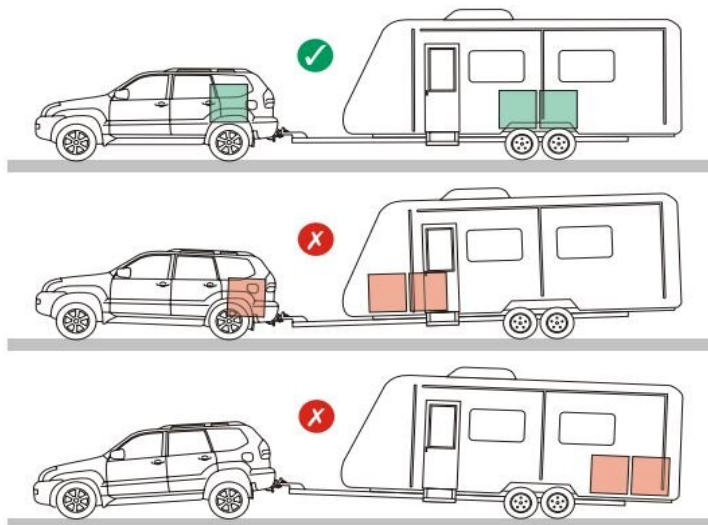

Weight Placement by Item Type

How to distribute loading weight

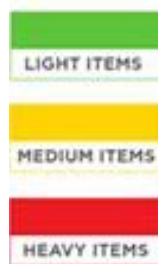

For more information, visit www.weighmerv.com.au