







3RD BRAKE LIGHT EXTENSION BRACKET FOR 2021+ FORD BRONCO

INSTALLATION INSTRUCTIONS

1. Remove the spare tire from your truck and proceed to remove the four (4) M6 Torx Screws that secure the 3rd brake light to the spare tire carrier. (Figure A)

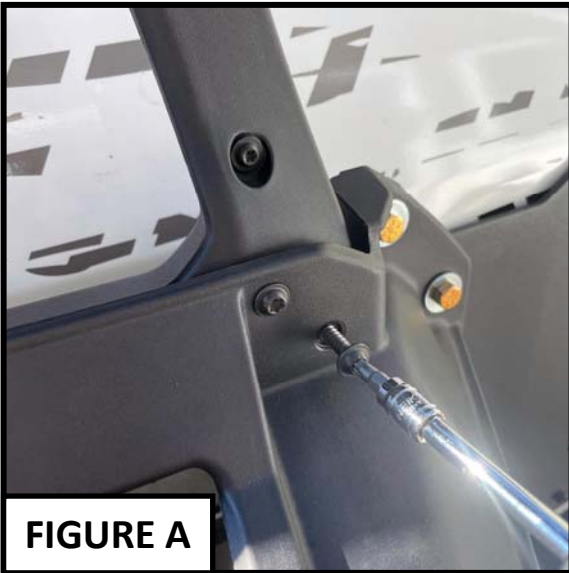

2. Mount the KR Off-Road Extension Bracket behind the tire carrier as shown. Install the two (2) M6 Button Head Torx Screws in the bottom 2 holes (Figure B). Use the provided washer and lock nut on the back-side of the bracket as shown. (Figure C)

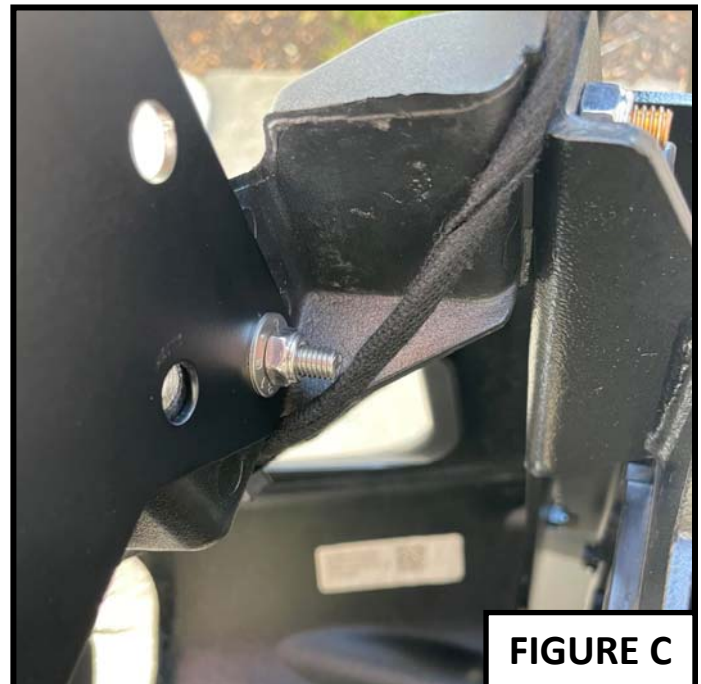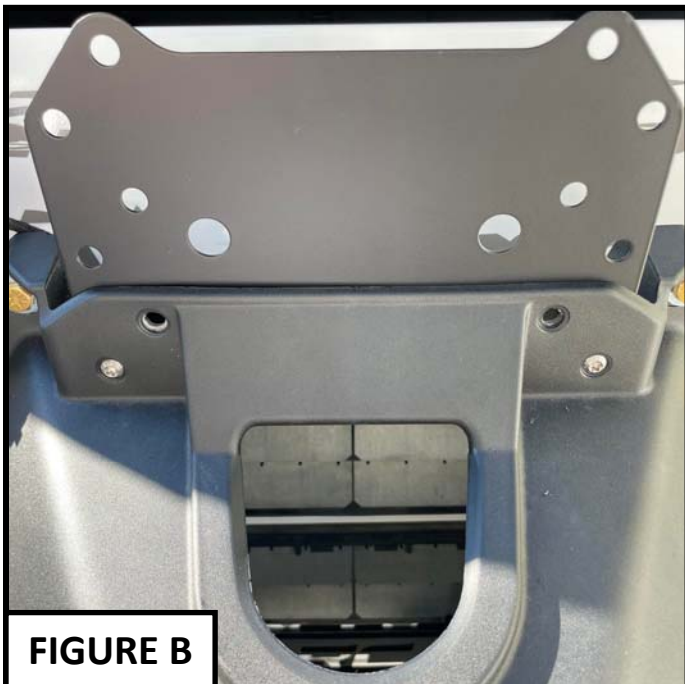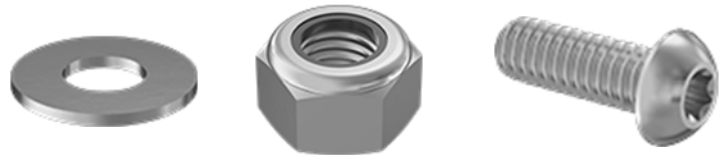



3RD BRAKE LIGHT EXTENSION BRACKET FOR 2021+ FORD BRONCO

3. Mount the factory 3rd brake light behind the KR Off-Road bracket as shown using the two (2) provided M6 Thread-Forming Screws. For 35"-37" tires, use the lower 2 holes. For 39"-41" tires, use the top 2 holes. (Figure D)



FIGURE D

4. Screw the four (4) factory M6 Torx Screws you removed in Step 1 back through the KR Off-Road bracket and into the 3rd brake light. (Figures E & F)

5. Re-mount your spare tire and verify your 3rd brake light clears the spare tire.

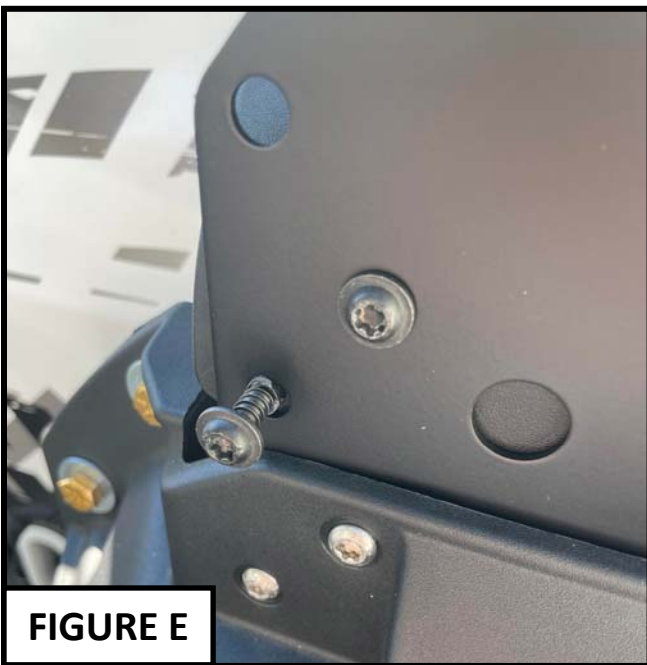


FIGURE E

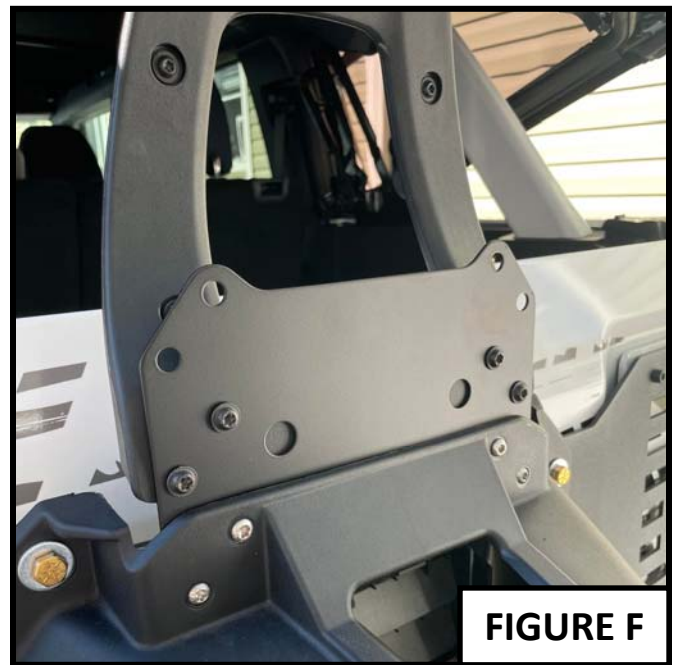


FIGURE F