

Installation

1.Remove 2x2 or 2x4 or 1x4 the from celling

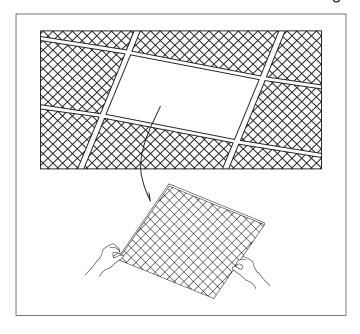

2.Put on the LED panel.

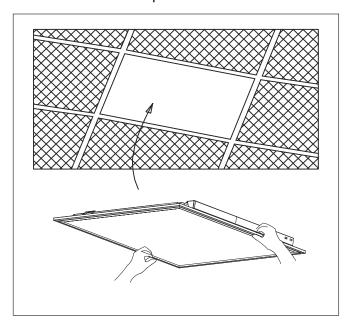

- 3. Connecting wire: PIs connectAC wire of driver at L(Black), N(White) and G(Green) for normal working; if dimming function needed, it also needs be connected for the both dimma-
- ble wires in grey and purple.
- dim-(Pink) dim+(purple) AC-L (black) AC-N (white) ground wire (green)
- 4. Fixed wire hose on the panel, Then installation is completed. (0-10V CCT&Watts adjustable isolated-driver)

