
# **LED WALL MOUNT**

## Installation Guide

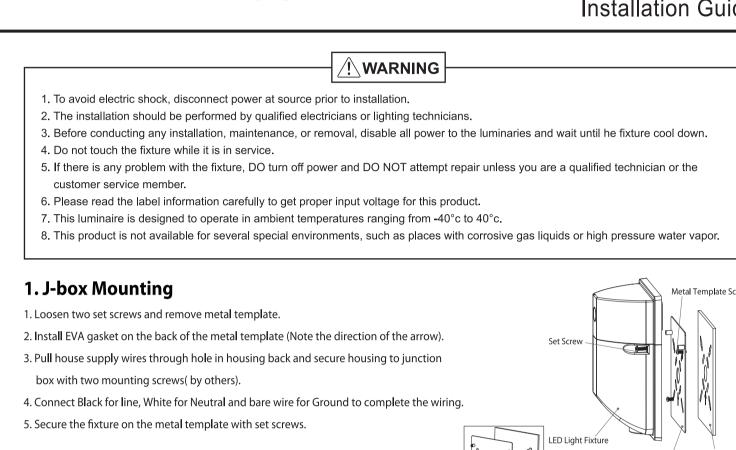

### 2. 1/2" Conduit Mounting

1. Loosen two set screws and remove metal template.

2. Install EVA gasket on the back of the metal template (Note the direction of the arrow).

3. Pull house supply wires through hole in housing back and secure housing to junction box with two mounting screws( by others).

4. Thread 1/2" conduit into the 1/2" hole.

5. Connect Black for line, White for Neutral and bare wire for Ground to complete the wiring.

6. Secure the fixture on the metal template with set screws.

Note: To ensure waterproof seal, apply weatherproof silicone sealantaround the edge of the wall mounting box and /or junction box.

This is especially important with an uneven wall surface. Silicone all plugs and unused conduit entries.

PHOTOCELL INSTALLATION

1. Install photocell and wire as per diagram.

#### **TROUBLESHOOTING**

- 1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly.
- 3. Be sure the photocell, if used, is functioning properly.

