

EZ35 and EZ35-IR Assembly from Pallet

Step 1

Break down sides and remove all parts from pallet



Step 2



Install Trailer Pivot Arm (#5 & #6) as shown in diagram. A rubber mallet can be used to assist. Install Part #7, but do not tighten yet.

Step 3

Install Tongue Lock Pin and Clip (#8)




Step 4

Team Lift - With more than one person, lower the trailer to the ground. Remove all packing.



Step 5

Jack up the trailer and flip the rotors.

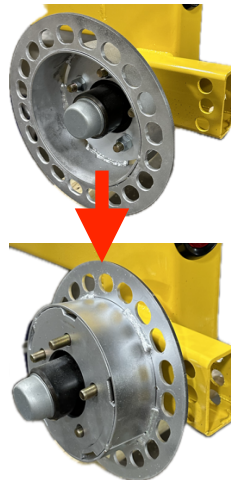

Step 6

*If purchased fenders, see Fender Installation Instructions prior to this step.

Insert wheels. Lock the wheel in place using the bar lock pin. Tighten lug nuts in a star pattern. Torque lug nuts to 90lbs. Repeat step on other side.



Step 7

Install safety chains using the bottom holes of the lunette bracket.

