

Begin by recognizing the parts included in your new 5-step
“Ultra Protect” Egress Escape Ladder kit:

Top Side Rail (includes 2)

Bottom Side Rail (includes 2)

Ladder Rung (includes 5)

Ladder Rung Safety Tape (includes 5)

Carriage Bolt $\frac{1}{4}$ -20 x 1 $\frac{1}{4}$ (Includes 10)

$\frac{1}{4}$ -20 Wing Nut (Includes 10)

#10 x 1" Self-Tapping Sheet Metal Screw (Includes 2)

No tools required for assembly

Installation tools:

Power Drill

$\frac{3}{8}$ Hex Driver Bit


$\frac{1}{8}$ " Drill Bit (sheet metal screw pilot hole) optional

Assembly and Installation Instructions:


Begin by selecting one of each of the Top Side Rail and Bottom Side Rail. Slide the two pieces together lining up the thru holes keeping the top and bottom bends facing the same direction. Repeat this with the remaining set of rails. Next, select a ladder rung and a carriage bolt. Put the carriage bolt thru the rung holding the bolt head into the square hole. Push the bolt thru the side rail connection and install a wing nut onto the carriage bolt and tighten securely. Repeat this step with the remaining side rail assembly. Install the remaining Ladder Rungs using the remaining carriage bolts and wing nuts and tighten securely. Install the rung anti-slip safety tape to the top of the rung stepping surface being careful to center the tape on the rung both vertically and horizontally. The ladder is now fully assembled. To install your new “Ultra Protect” Egress Escape Ladder simply hook the ladder onto the top rim of the window well. Using a drill with a hex driver bit, attach the ladder to the window well thru the holes in the bottom rails using the two #10 x 1" Self-Tapping Sheet Metal Screw.

Thank you for choosing our product.

For support, e-mail customerservice@dyneproducts.com

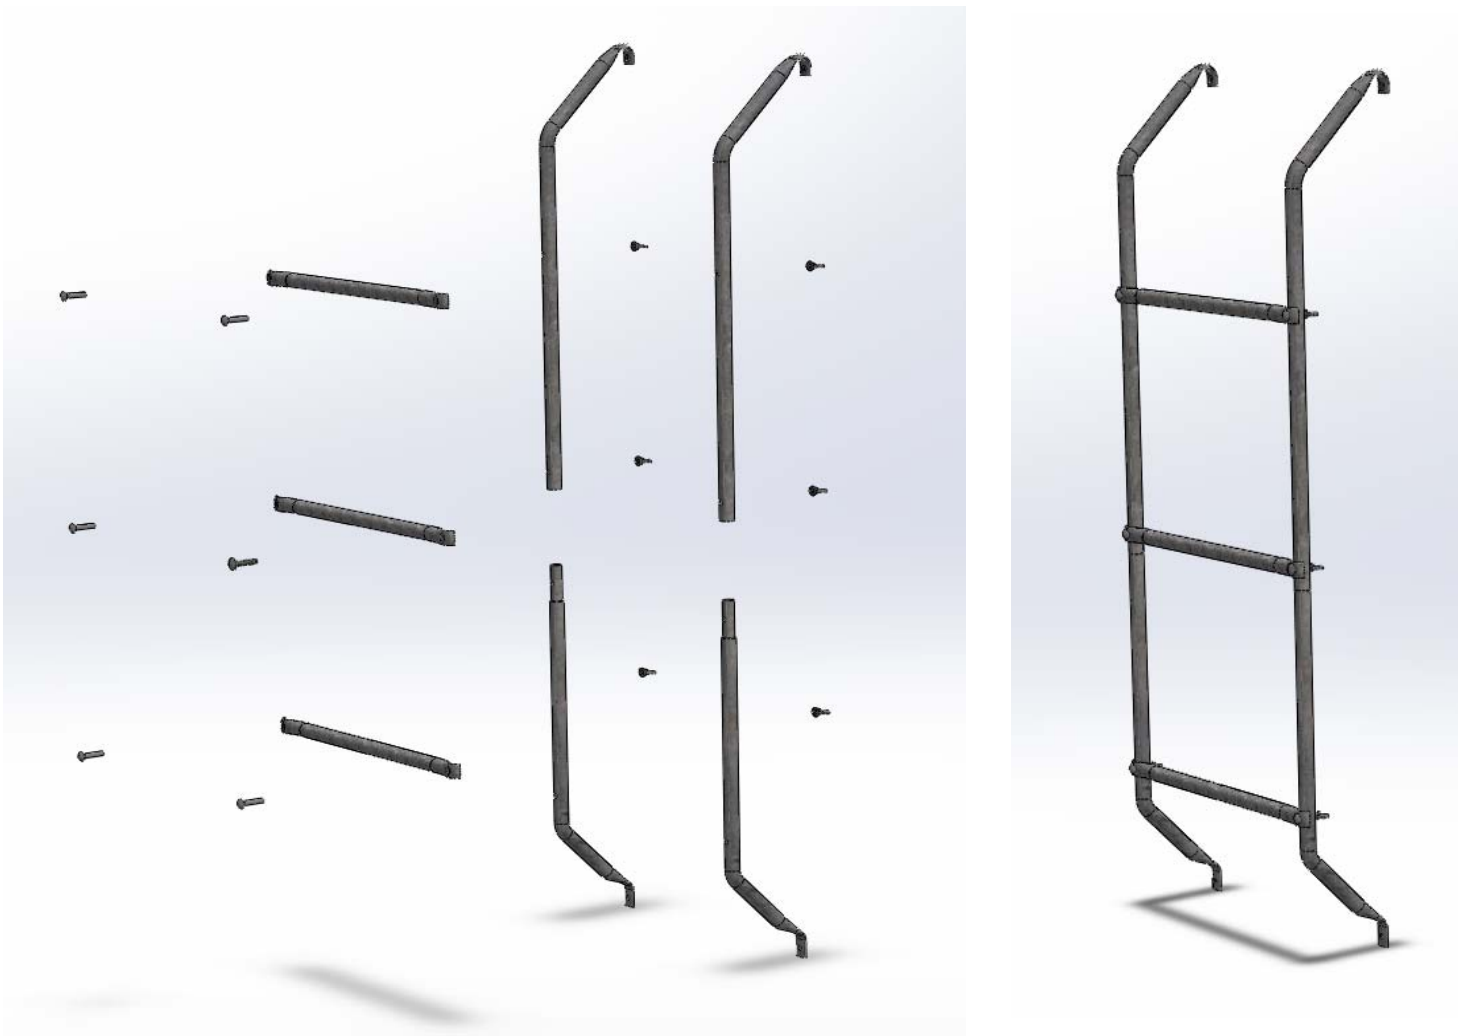

Exploded / Assembled View (typical for all sizes)

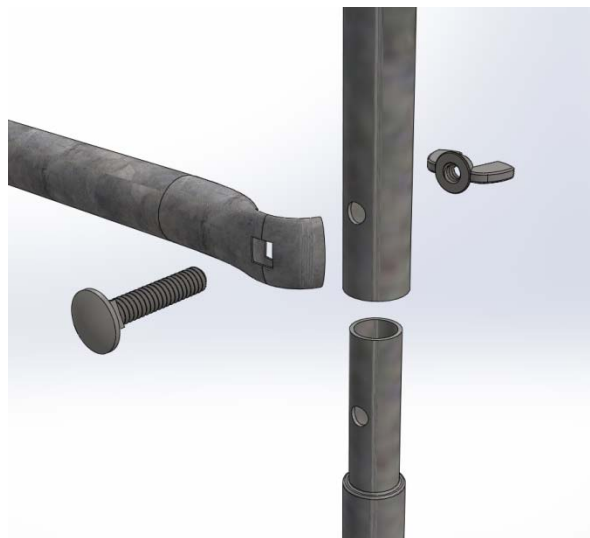

Modular Rail Assembly View

(This is where the top and bottom rail slide together and the step lines up and the bolt goes through all 3 pieces.)