

"Well Clip" Hardware Mounting Instructions & Window Well Cover Installation

Step : 1

Center the window well cover over the window well.
Note: the cover is packaged with a protective film, we recommend to leave this film on top during installation and trimming (see step 5 for trimming)



Step : 2

Using a measuring tape evenly space and mark the desired clip locations over the center of the well rim.
note: different model covers may come with different quantities of hardware




Step : 3

Drill a 3/16" hole through the plastic cover material at each well clip location



Step : 4

Mount the well clip up through the bottom with the nut on the top. note: as the nut gets tightened the spring clip draws tighter together then holding more securely to the well

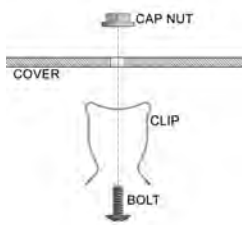

Step : 5

With the clips installed and the cover securely in place and you choose to trim the cover to the profile of the window well, mask the profile of the well and trim using a jigsaw with an aluminum cutting blade



note: when masking the profile of the well we recommend keeping the tape to the outside of the well creating an overhang much like the drip edge on a roof. This will allow the water to drip outside the well

Finished Custom Fit Installation



Remove any remaining protective film from both sides of the cover.

Model SR 400 contains a 3-pack of wind clip hardware
Model SR 500 contains a 4-pack of wind clip hardware