

Dumb Stick Xtreme Installation Instructions



Items included (1) dumb stick xtreme bar 36 inch long, (1) Clamp bracket (1) L allen key (1) silver clip

Step 1 Unscrew the 4 bolts on the clamp bracket using the L shaped allen key

Step 2 Install the Clamp Bracket onto your seat post MAKING SURE THE INSET PIECE IS FACING STRAIGHT OUT AND NOT DOWNWARD.

Step 3 With the clamp bracket facing straight back, secure and tighten the 4 bolts in a cross cross pattern to ensure the bolts are tightened evenly.




Step 4 Unbolt and Remove the quick release pin from the Clamp Bracket.

Step 5 Slide the 36 inch long Bar into the Clamp Bracket making sure the Dumb Stick label faces up and align the holes.

Step 6 Slide the quick release pin into the Clamp Bracket and the Dumb Stick Bar.

Step 7 Reinstall the quick release pin into the Clamp Bracket and tighten until your can sinch down the secure handle on the front of the Quick release pin.

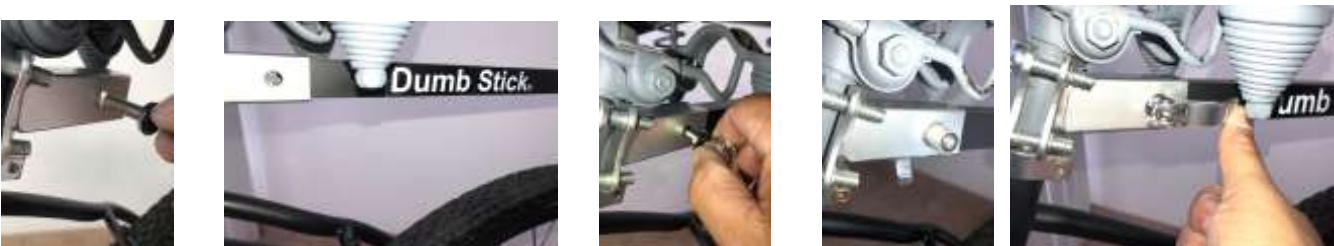

Step 8 Attach the silver clip to the eye hook at the end of the Dumb Stick Bar.

Step 9 Attach your kayak handle to the Silver Clip.

