



Custom Fit, Privacy & Protection

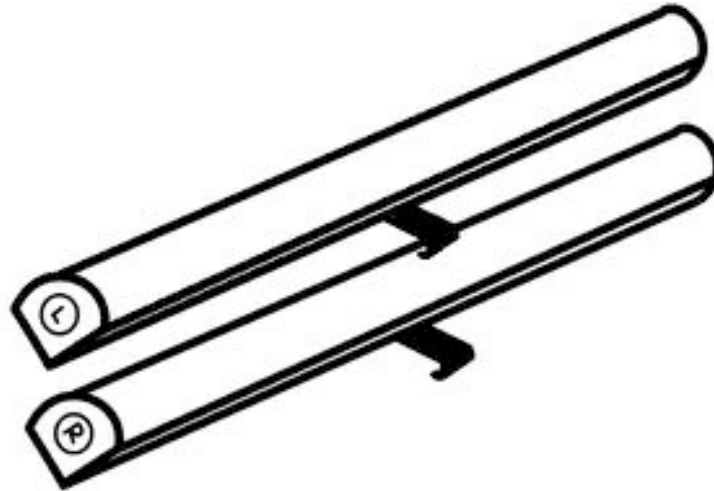


Table of Contents

Table of Contents.....	Page 1
Parts.....	Page 1
Supplies.....	Page 1
Step 1 - Locate the R and L sticker on each shade.....	Page 2
Step 2 - Test fit each shade.....	Page 3
Step 3 - Clean top of door panel with alcohol swab.....	Page 4
Step 4 - Attaching the block shade to the door panel.....	Page 5
Step 5 - Testing your new Block Shades.....	Page 6
Troubleshooting.....	Page 7

Parts

- 1 left block shade for left rear passenger window.
- 1 right block shade for right rear passenger window.

Supplies

- 2 alcohol pads

***Disclaimer: This item may or may not be legal within your state or country. We are not liable for any damages that may occur from the use of this product. Professional installation is recommended. If you do not agree to these terms, please return the item.**

STEP 1

Locate the R and L sticker on each shade.

1. Look on the end of each shade for a sticker that shows R or L on the **Block Shades**.
FIGURE 1.1
2. They are specific to each side and are not interchangeable.
3. R is for the right rear side window when sitting in the driver seat facing the front windshield.
L is for the left rear side window when sitting in the driver seat facing the front windshield.

FIGURE 1.1



STEP 2

Test fit each shade

1. Test each **Block Shades** to make sure the hook that is attached to the **Block Shades** is on the correct side and can hook onto your window correctly. FIGURE 2.1
2. Lower the rear side windows approximately 2" down.
3. Hook the shade onto the window and pull the **Block Shades** body down flat against the top of your door interior door panel.
4. Make sure you leave at least a 1/4" gap from the **Block Shades** to the window to avoid the shade touching the window when the shade is not in use.

FIGURE 2.1



Step 3

Clean top of door panel with alcohol swab.

1. Clean the top of the door panel with the alcohol cleaning wipe where you will install the **Block Shades** FIGURE 3.1
2. This will remove any chemicals that are on the door panel. Oils and dirt that are not completely removed may cause the double sided tape on the block shade not to adhere correctly. Wait until the cleaned area is completely dry for 1 minute.

FIGURE 3.1



Step 4

Attaching the block shade to the door panel.

1. Remove the double sided tape protective liner from the **Block Shades** that is located on the bottom of the **Block Shades**. FIGURE 4.1
2. Once the protective liner is removed, carefully line up the **Block Shades** to your door panel.
3. Press firmly onto your door panel and hold constant pressure for 30 seconds.

*Repeat Step 4 for the other side.

FIGURE 4.1



Step 5

Testing your new Block Shades.

1. Roll your rear side windows up and down to make sure the **Block Shades** does not touch your window.
2. After you confirm the **Block Shades** do not touch the window, hook the block shade hook onto your rear window.
3. Roll your rear window up and down with the **Block Shades** to make sure the **Block Shades** roll up and down with your rear passenger windows.

FIGURE 6.1



Troubleshooting

1. If the **Block Shades** does not go up and down with your rear passenger windows, the **Block Shades** may be installed incorrectly.
2. The double sided tape on the bottom of the **Block Shades** is semi permanent. Once the item is pressed down onto your door panel, the double sided tape cannot be pulled up and reused again. You will need to replace the double sided tape if you need to move the **Block Shades** (Replacement Double sided tape sold separately).
3. If the item no longer rolls back into the housing, the spring may be damaged. The **Block Shades** will need to be replaced.
4. Removing the **Block Shades** requires the use of a heat gun or hair dryer. Carefully heat up the double sided tape until warm while pulling up on the **Block Shades** until adhesive releases from door panel.
5. If you have further issues, contact us at www.blockshades.com