


Wiring Guidelines:

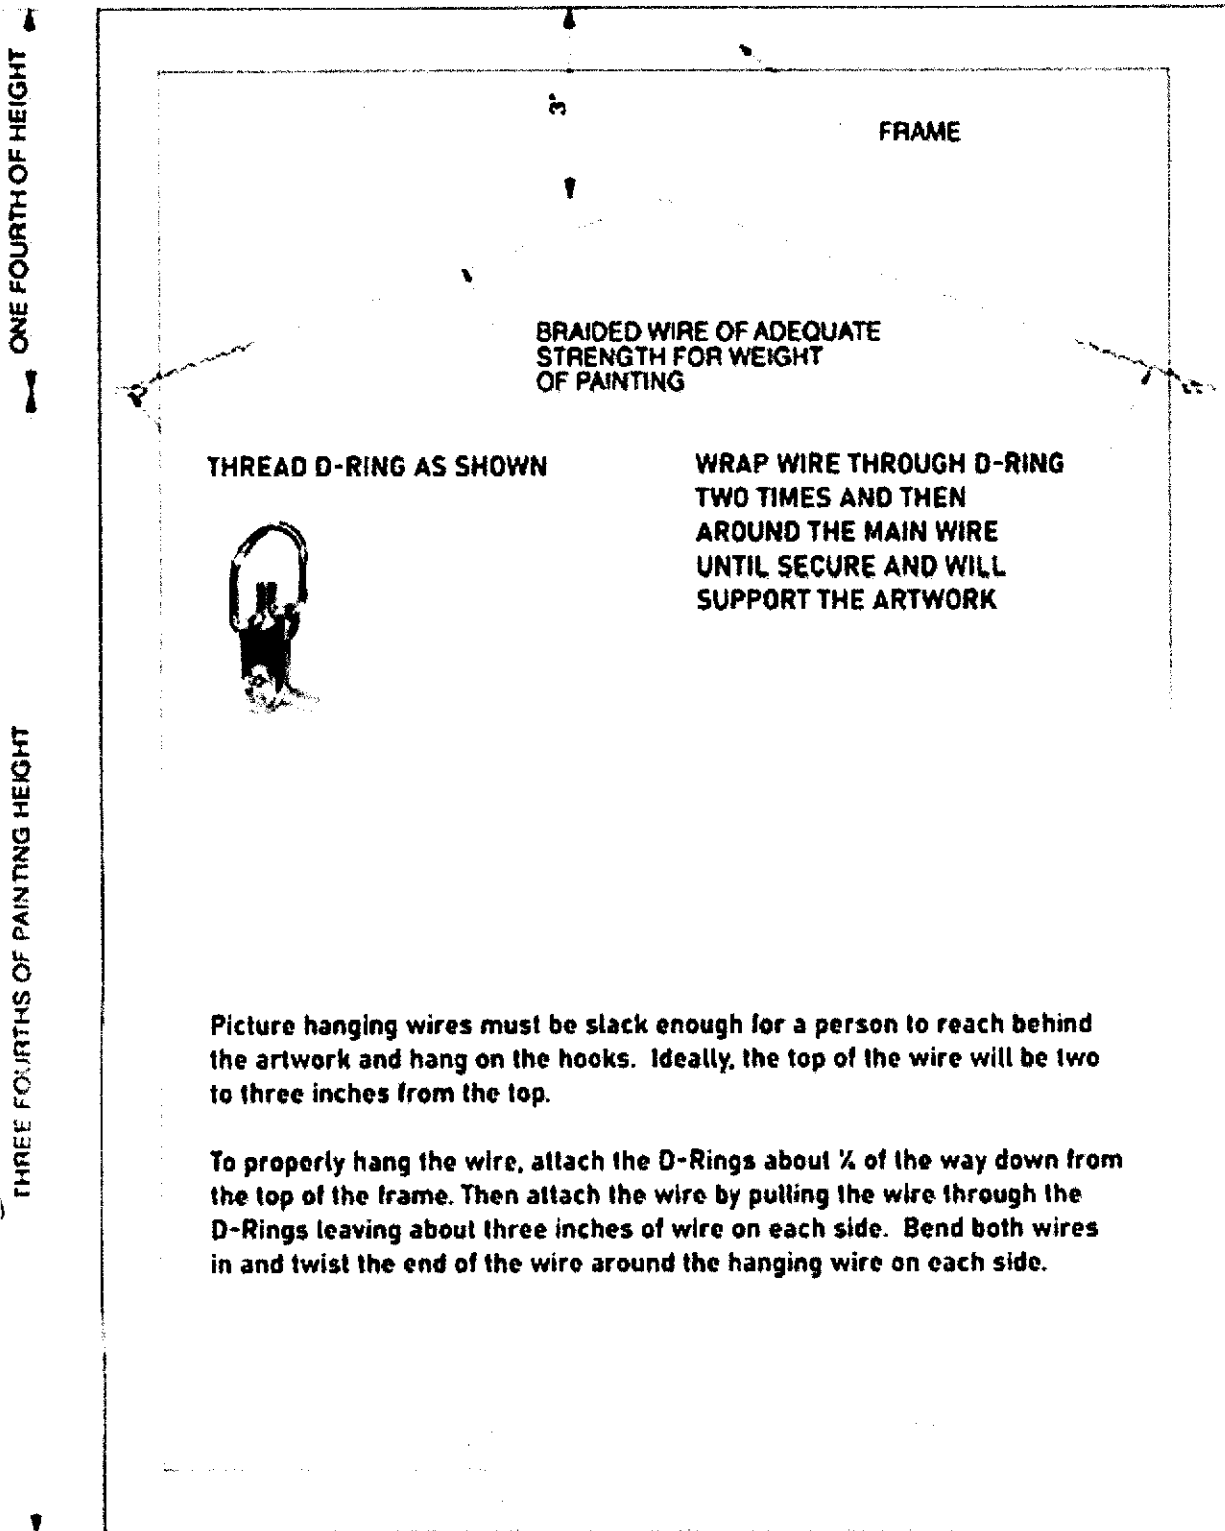

Picture hanging wires must be slack enough for a person to reach behind the artwork and hang on the hooks. Ideally, the top of the wire will be two to three inches from the top.

To properly hang the wire, attach the D-Rings about $\frac{1}{4}$ of the way down from the top of the frame. Then attach the wire by pulling the wire through the D-Rings leaving about three inches of wire on each side. Bend both wires in and twist the end of the wire around the hanging wire on each side.

View From Back