



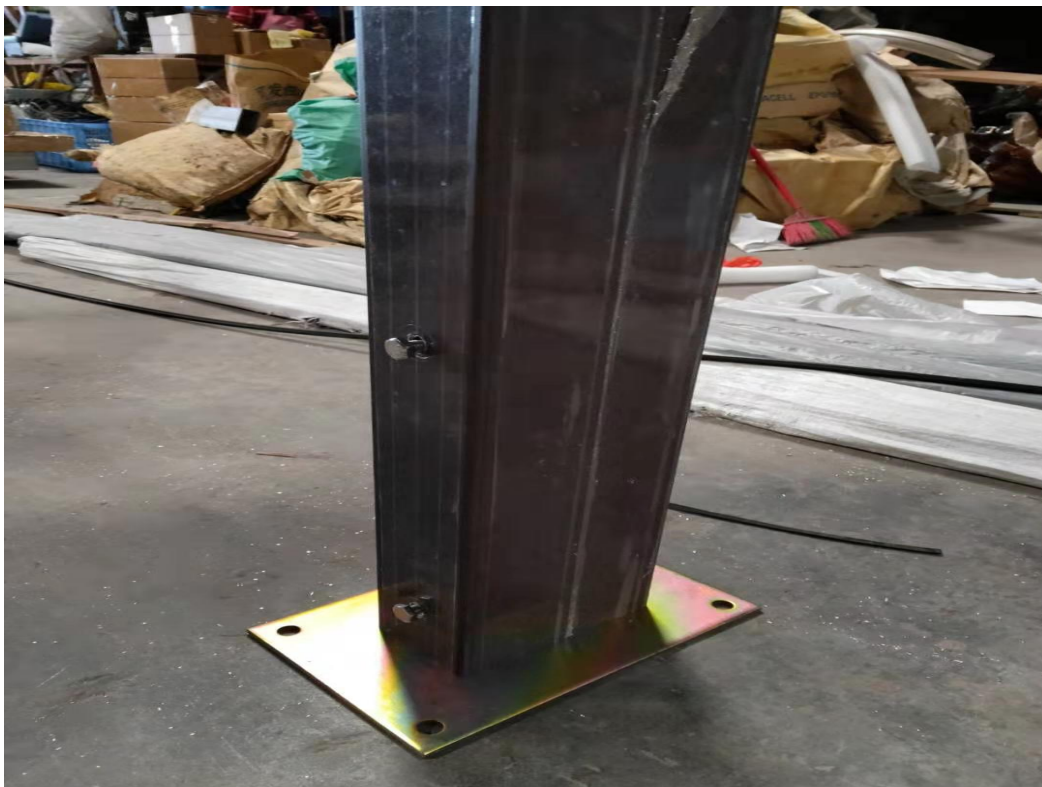

Hebei Unique Plastics Manufacturer Co., Ltd

Single carport Installation Manual

Step1:Put the post base on the ground and fix, then put post on the base, and lock with screws

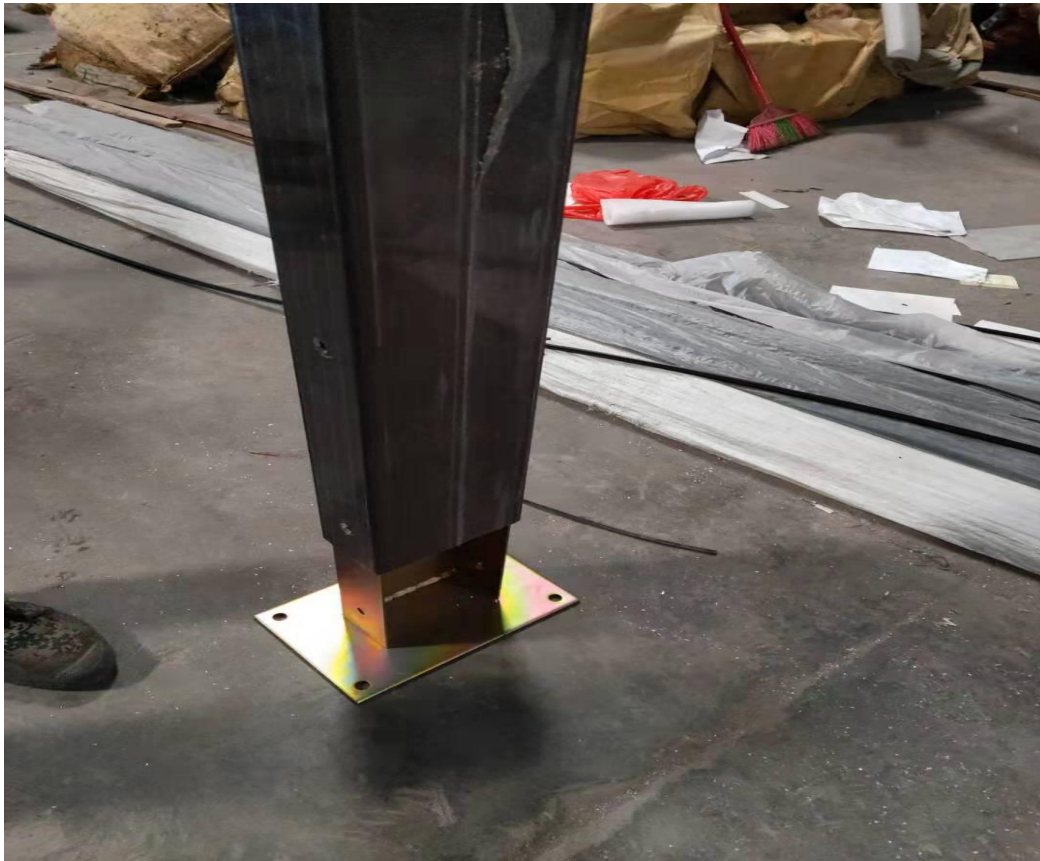

Remark: Post install has two ways, one is buried way, the other is base way.


(Buried way has more strength, base way is easy to install, you can choose yourself)

Post fixing: Install The Stand Column and Bracket


Install the column bracket according to the ground requirements, divided into the base method two installation methods.

A. Base Method: as shown in Figure 1 below, make hole according to the expansion bolt size, then insert the bolt and fix the column bracket.

B. Buried method: as shown in Figure 2 below, make groove underground 50cm~60cm, insert and fix the column bracket with bolt, then cover concrete.

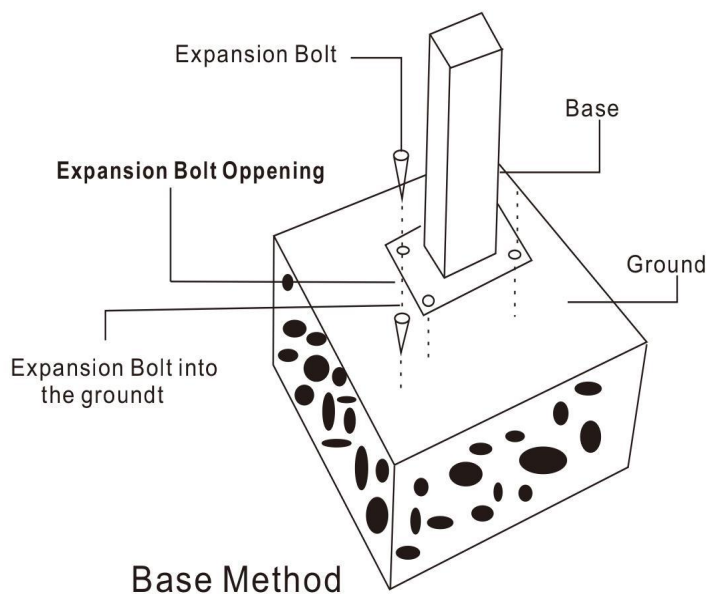

(Figure 1)

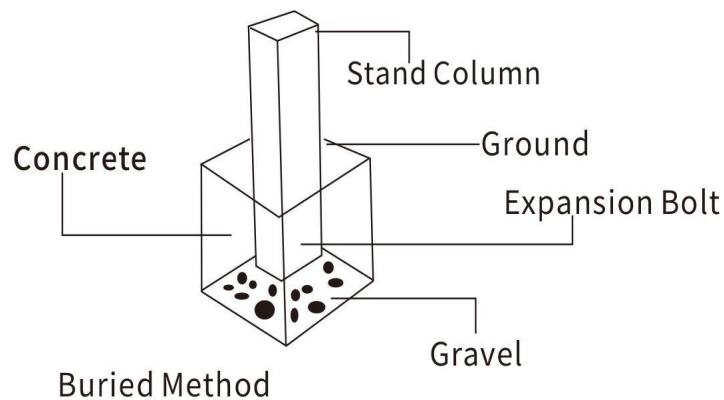



(Figure 2)

Step2:Put L-type steel part in the post, lock with screws.




Step3:put main beam on the other side of the L-type steel,lock. Then put the beam cap.(Remark:the beam side L-type steel we don't drill holes for you, because when install the beam,every site situation is different, so customer need to drill locally based on reality.

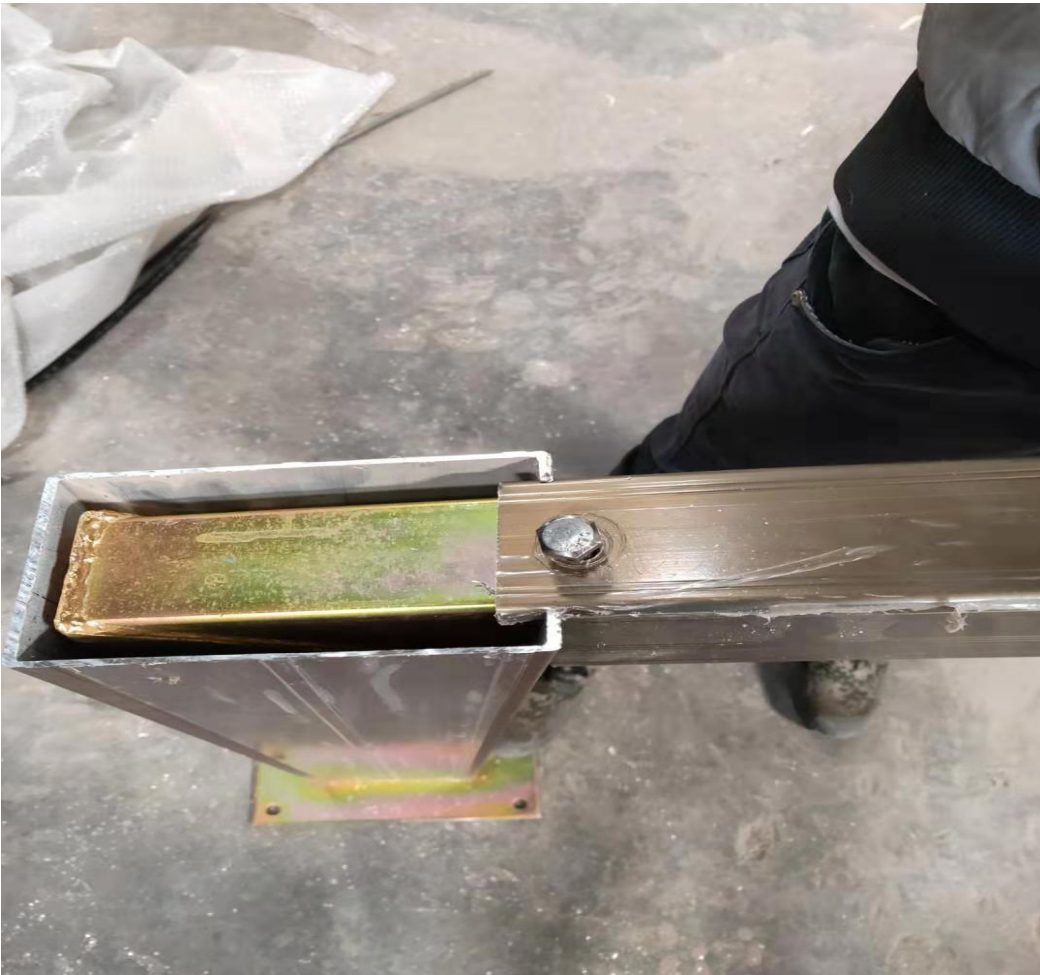


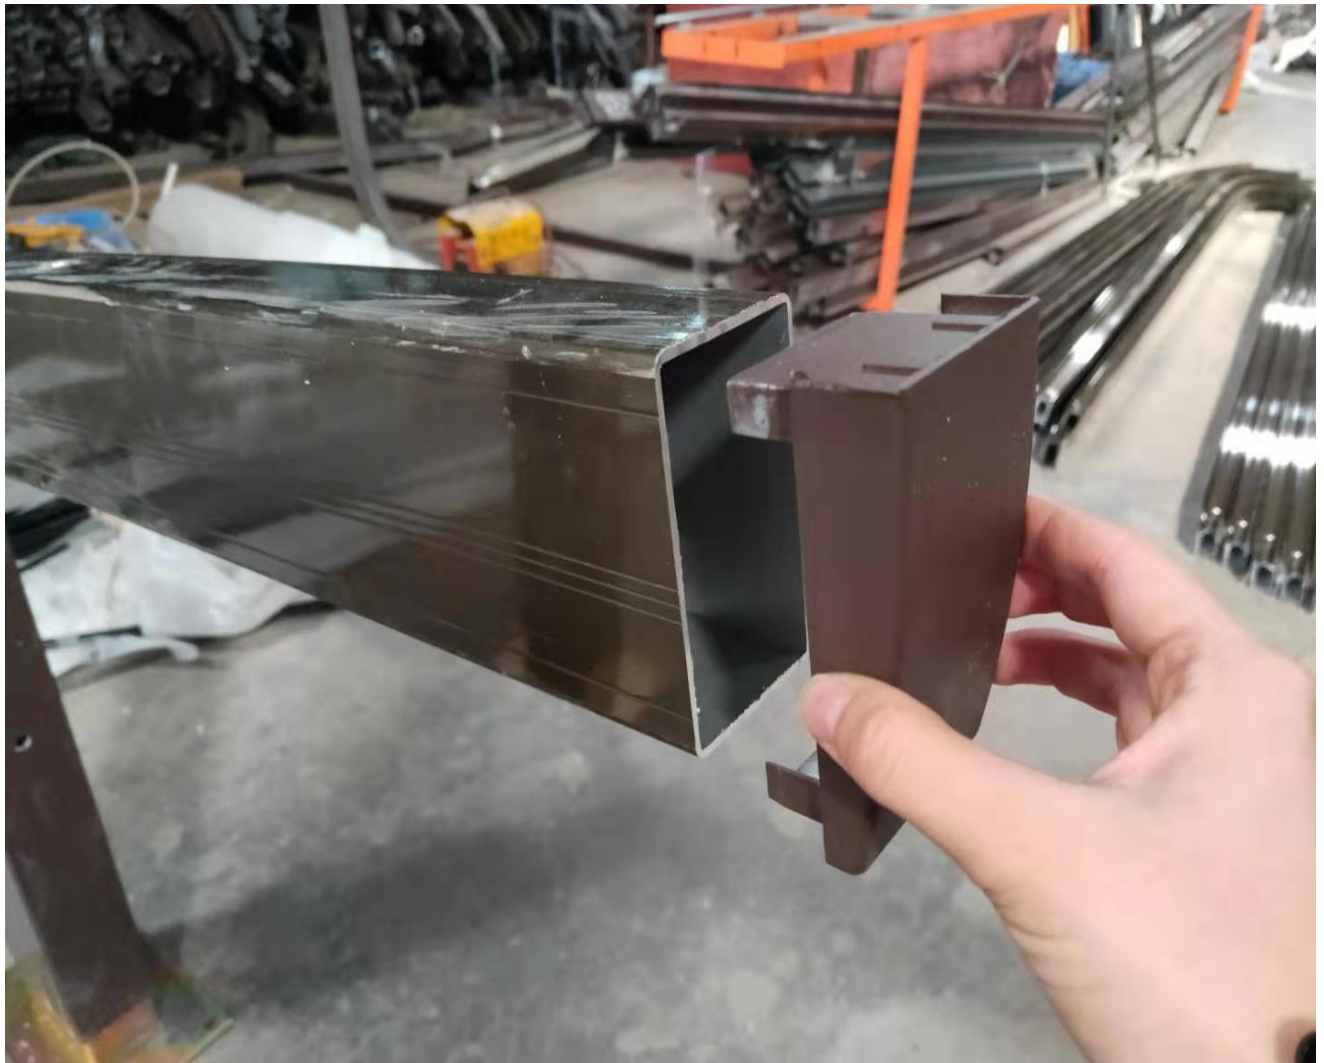

Step 4:install the gutter, use corner connector to fix gutter and L-type steel together.

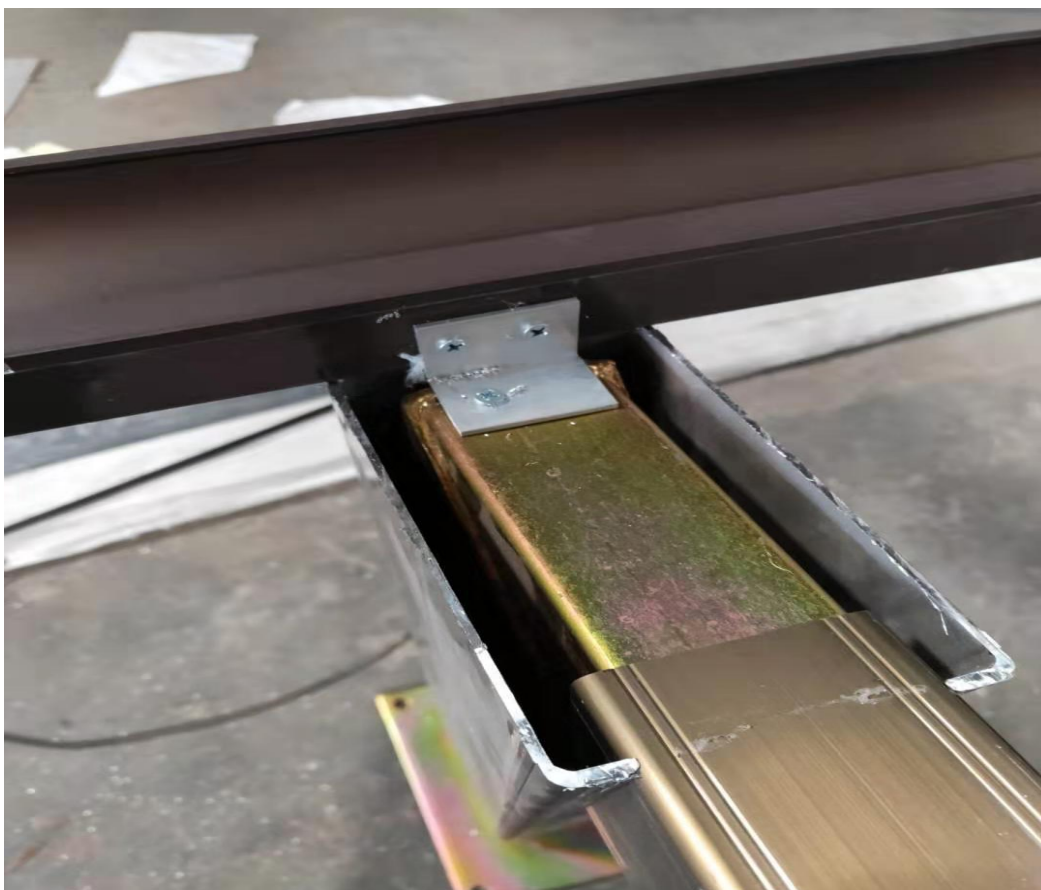

Step 5: Install front eave, after put front eave on, fix front eave and main beam with screws

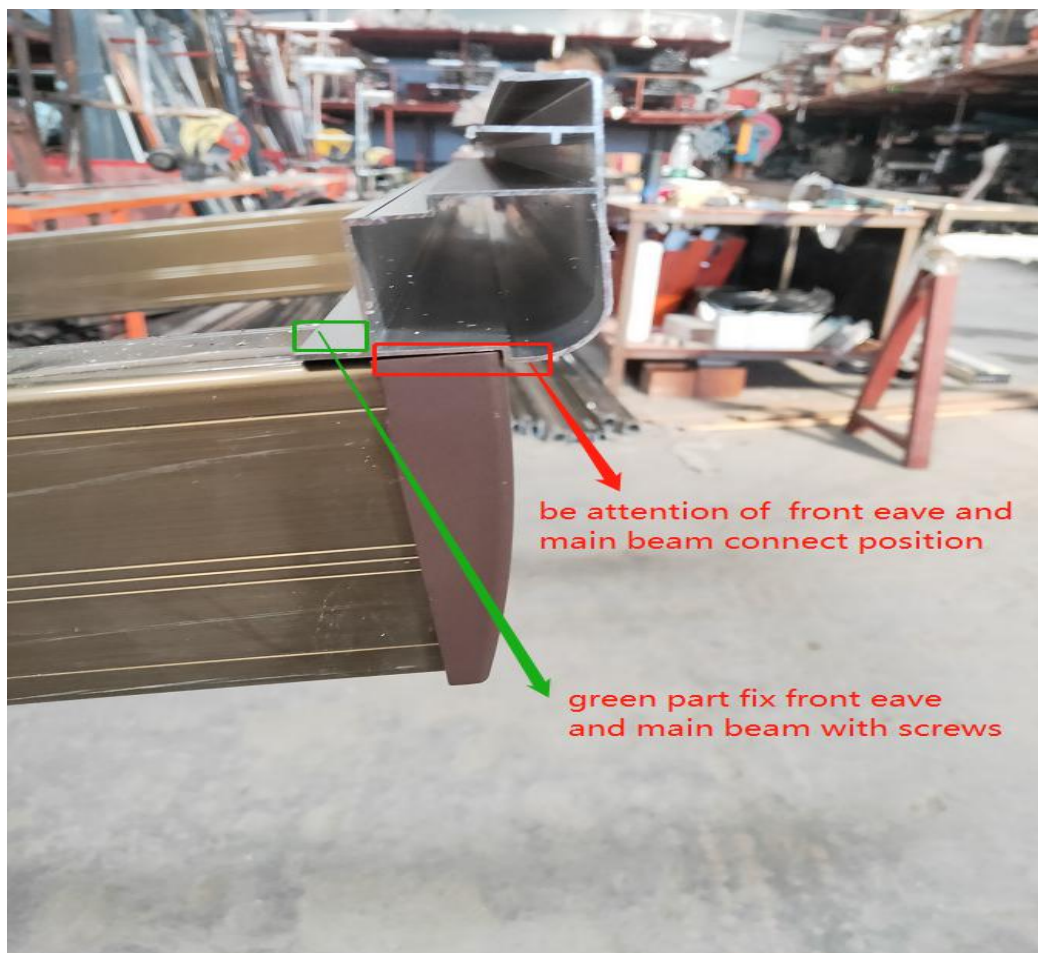


Step 6: put gutter connector and side frame connector on both sides of side frame, and fit in the gutter and front eave, fix gutter, front eave with screws.








Step 7: put all deputy frames on proper positions, lock the connection part of deputy frame and main beam with screws.

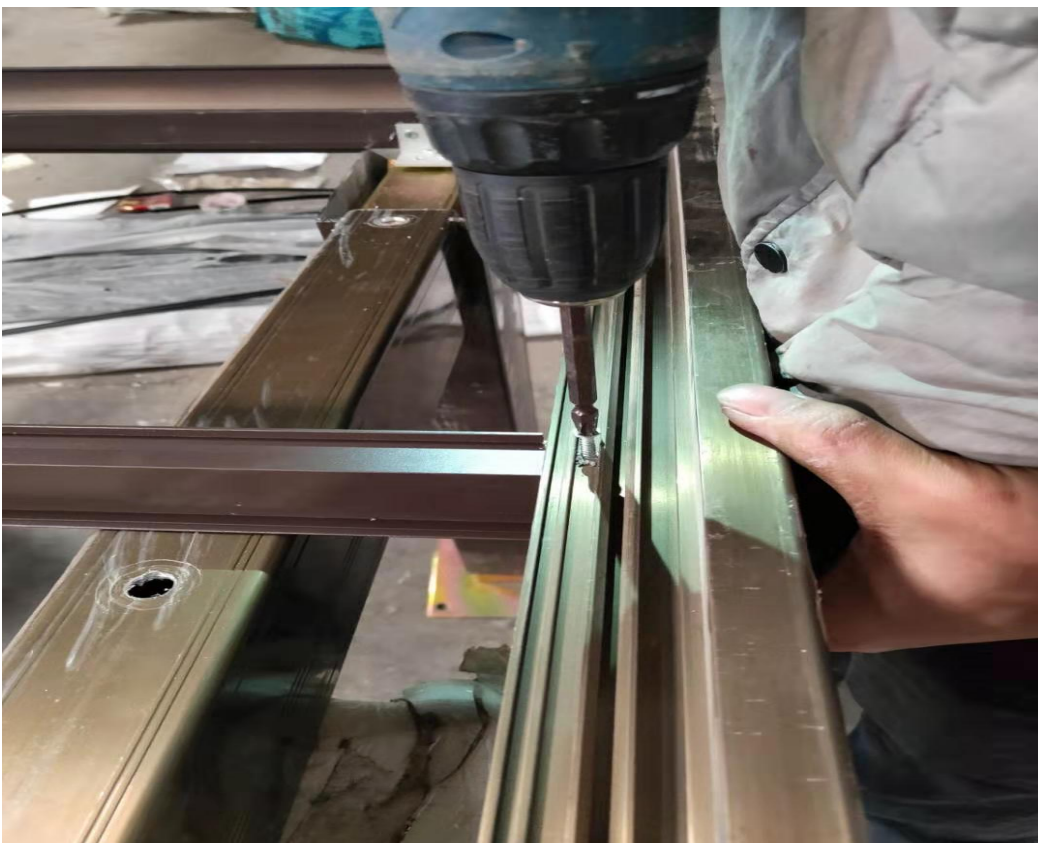



Step 8: put down strips on the precut deputy frame gaps, fix with screws at deputy frame, gutter and front eave

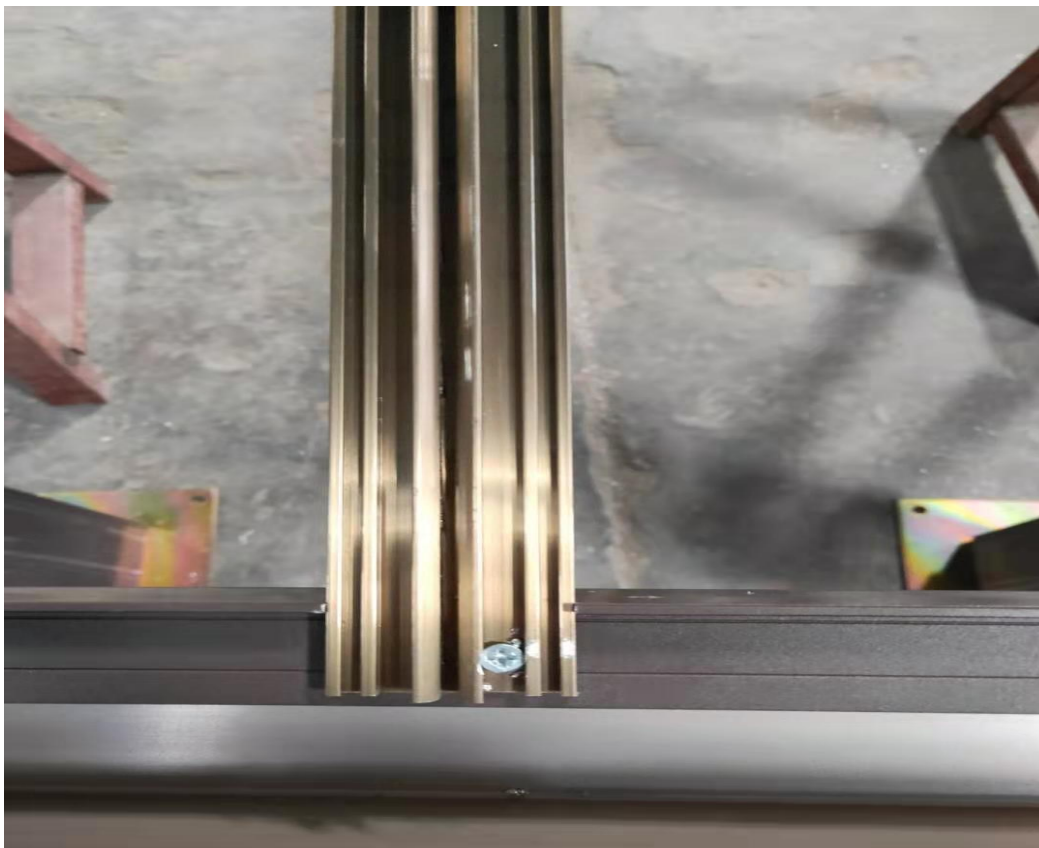





Step 9: fix PC sheet holder on the gutter, and put PC sheet in.



Step 10: after put all PC sheets,put upper strips on and lock with screws.



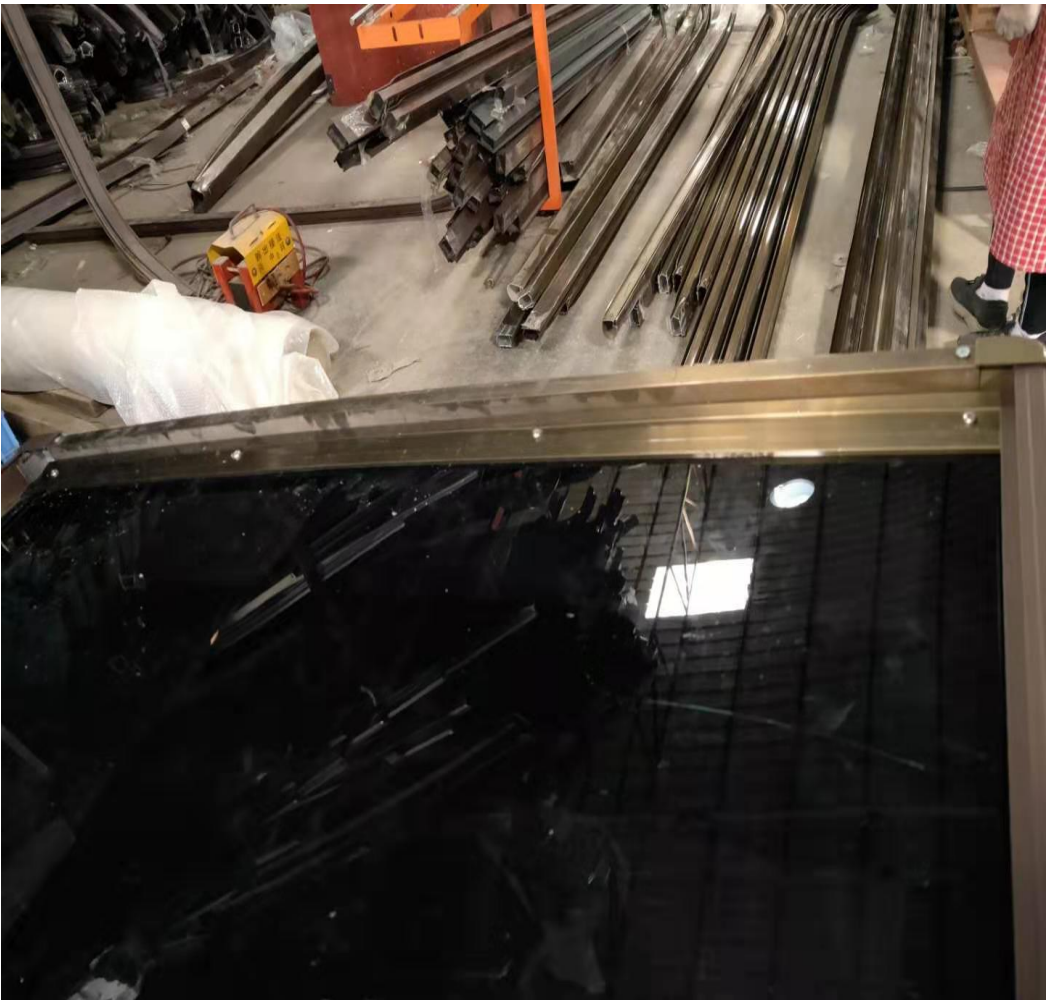

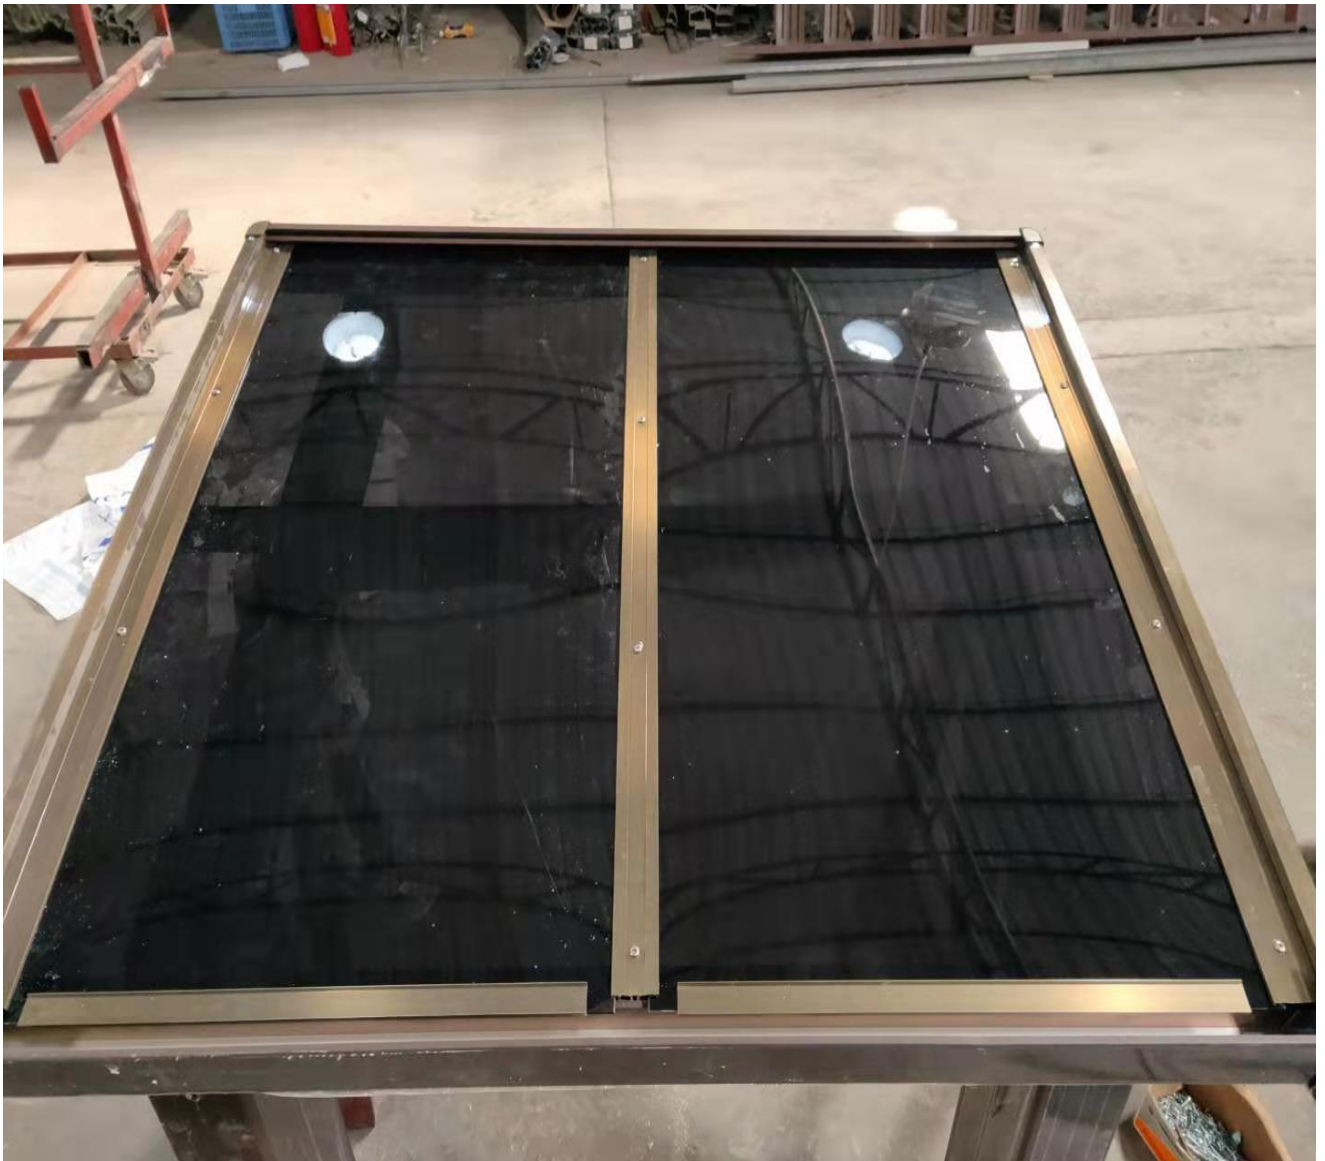

Step 11: open a drainage hole, install the down pipe connector, then install down pipe, then fix it on the post with screws.





