
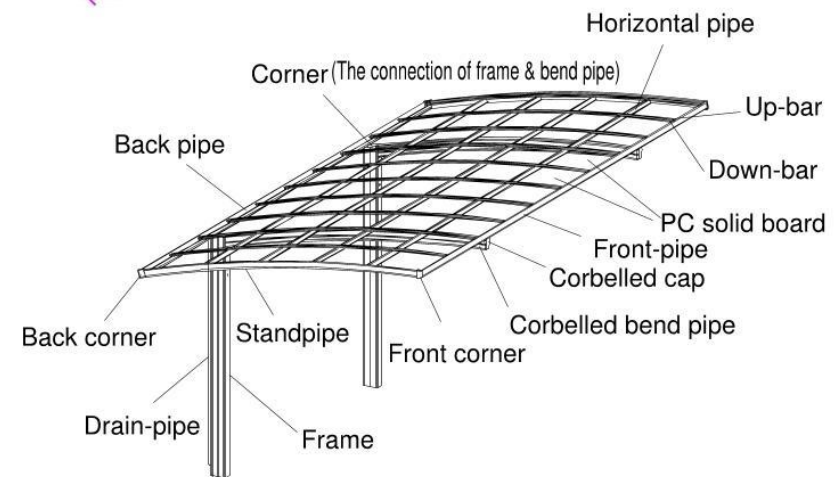
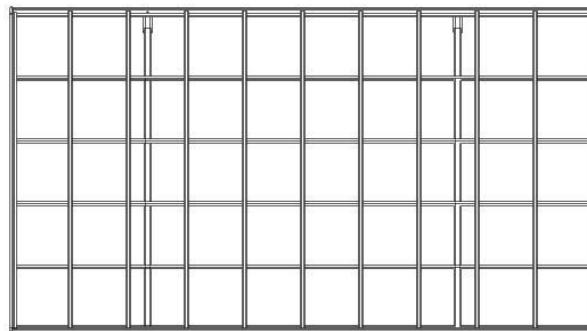
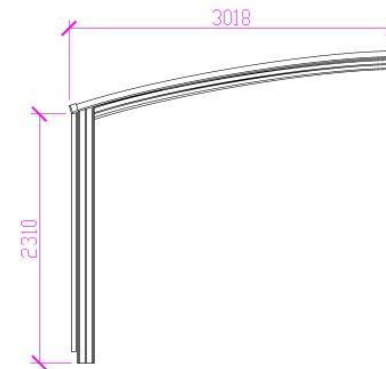



Outdoor leisure carport products series

The product structure

- 1.General layout
- 2.The connection of frame & bend pipe
- 3.The structure chart of the head
- 4.Installation direction
- 5.The carport's installation of Single type

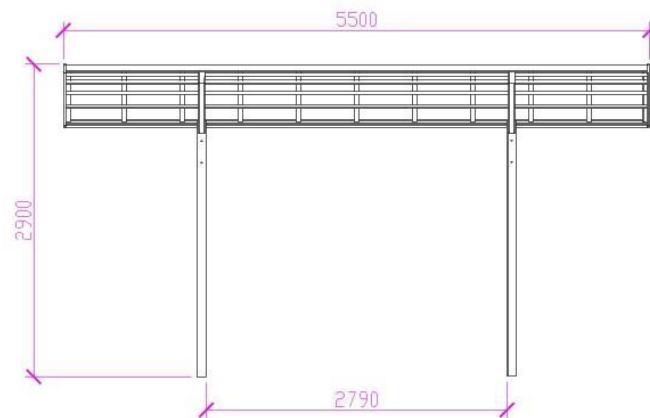


General layout

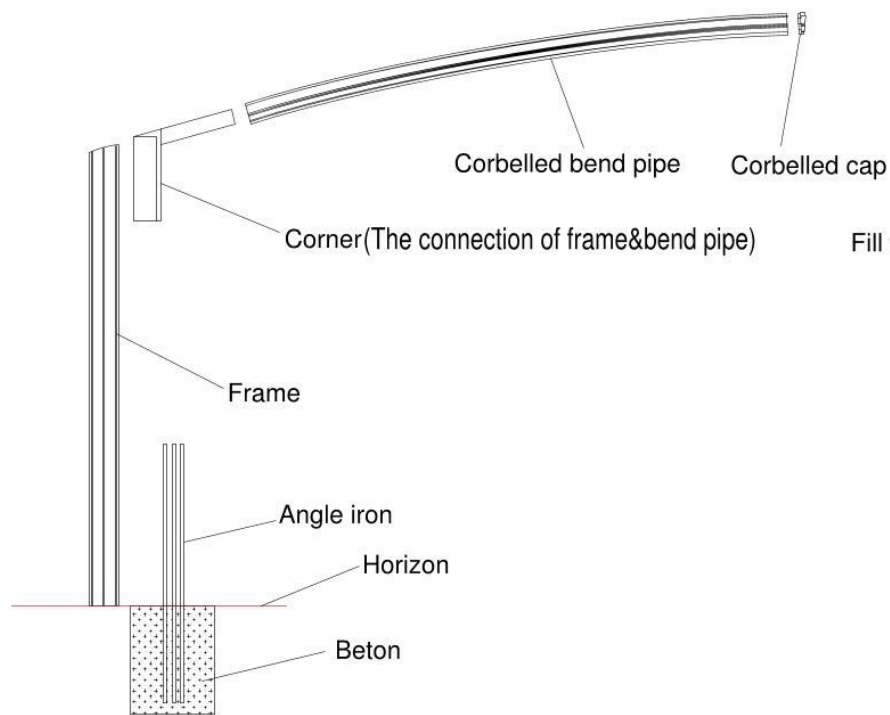

The structure analysis chart



The connection of frame & bend pipe

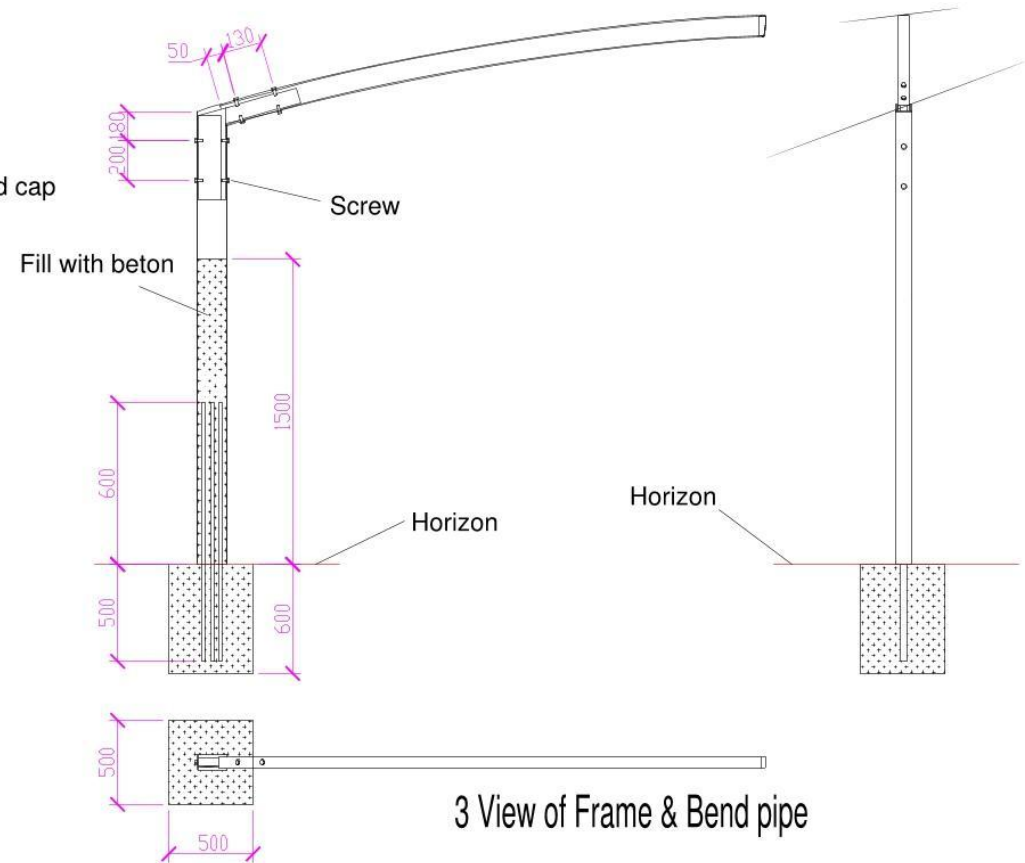


3 View of Frame & Bend pipe

Installation instructions:


1. Dig a hole (50*50*60cm) on the ground, Buried three Angle irons inside the frame. And fill with the beton until it is dry.
2. Connect bend corner and corbelled bend pipe, tighten up with two screws respectively, then cover the corbelled cap;
3. Put the corner inside the frame with two screw.

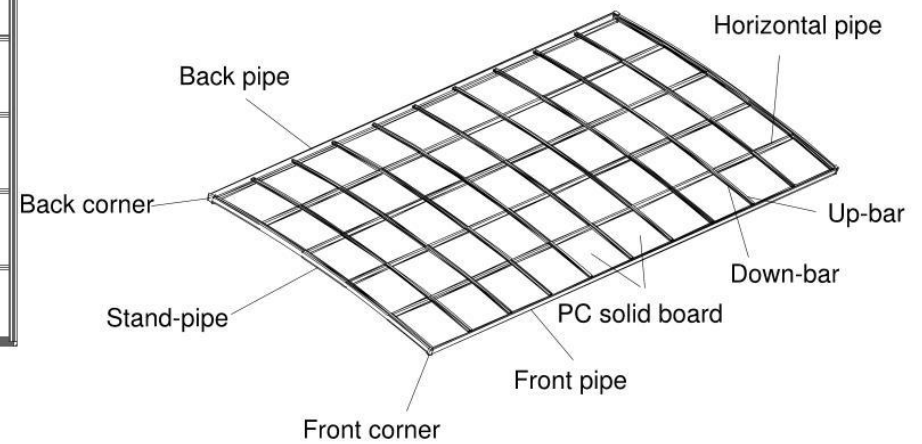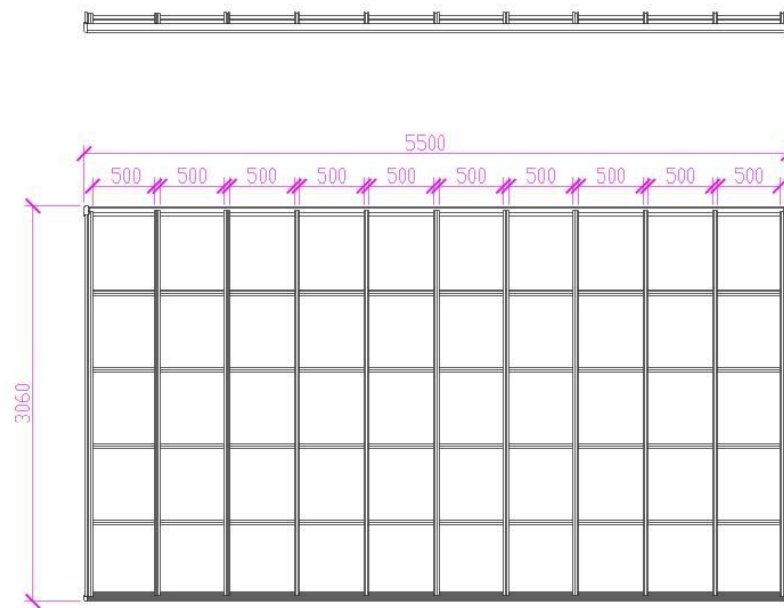


The structure chart of the head

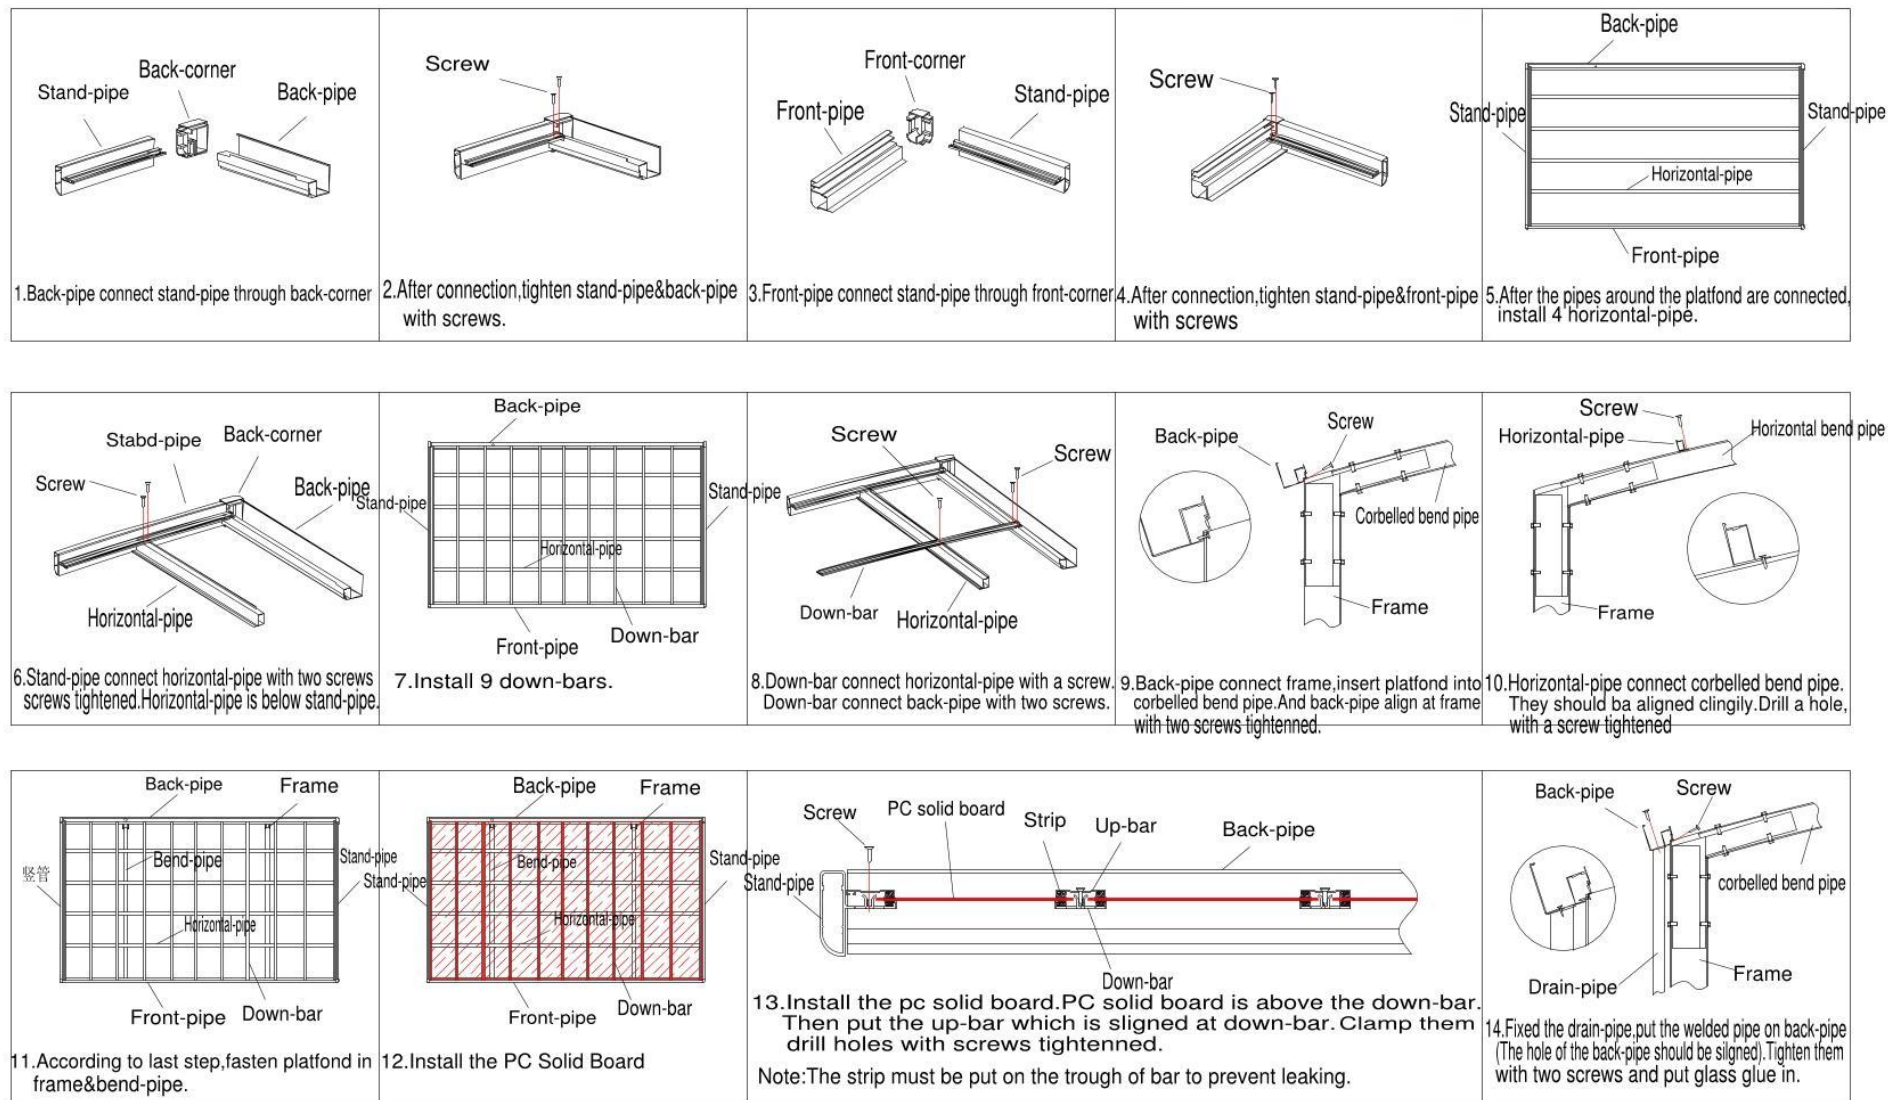


Installation instructions

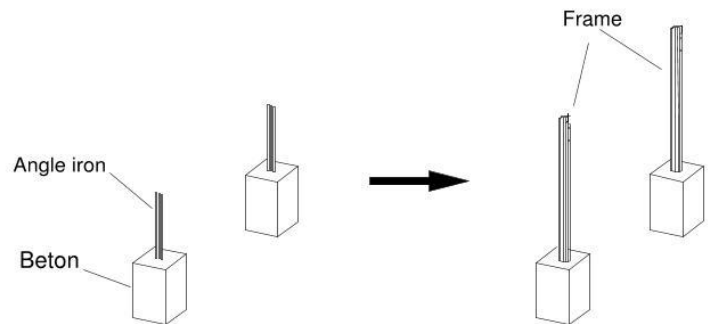


Step 1: First dig two holes on the installation position. The spacing of two frames is 2790mm. Bury three Angle irons in the holes filled with beton.

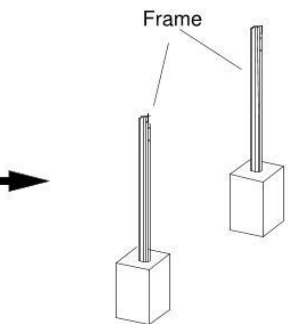


Step 2: Insert the frame, put the beton in it, about 1500mm height. Wait it dry in 1 day.

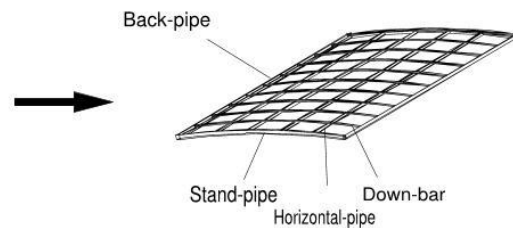


Step 3: Install the platform. First install the connection of back-pipe and stand-pipe. Front-pipe connect stand-pipe, install 4 horizontal-pipe, then install the bars.

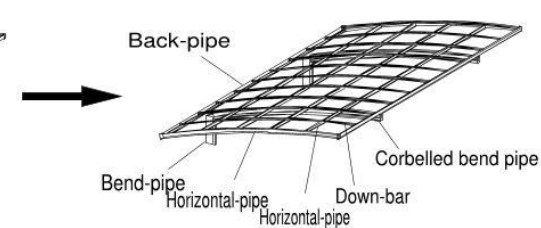


Step 4: Install corbelled bend pipe. First install corner in the corbelled bend pipe. Then install the corbelled bend pipe on the platform which have installed. (Note: 4 horizontal-pipe must be fixed with one screw.)

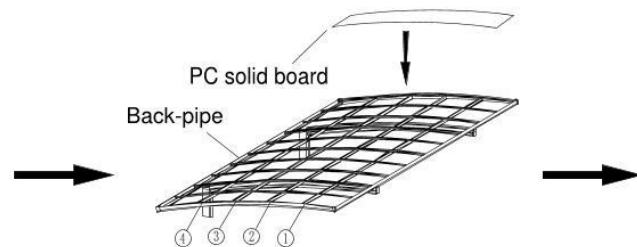

Step 5: Install PC solid board. Place the board between stand-pipe and down-bar. Then install up-bar with 2 screws tightened. (Remark: The board in which the corbelled bend pipe locate (the 3rd and the 8th line) don't be tightenned. First tighten the first 3 horizontal pipe. In order to the next installation, the 4th horizontal pipe and back pipe don't tighten screws temporarily.)

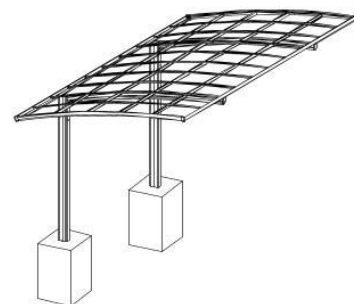

Step 6: Install the platform on the frame which is installed. Tighten the connection of back-pipe and frame with 2 screws. The both side of bend pipe and frame should be tightenned with 2 screws, then fix them.

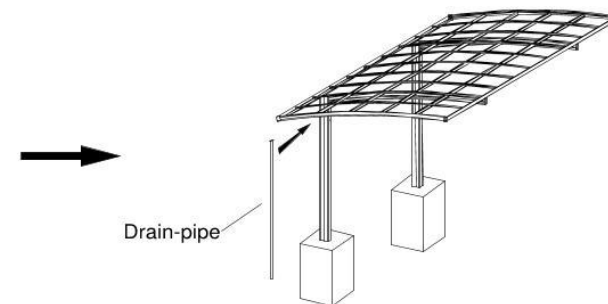

Step 7: Install the drain-pipe. Align the drain-pipe at the drainhole. Then tighten it with screw. (Remark: The connection between drain-pipe and back-pipe should be coated with glass glue. In case of leaking.)

The carport's installation of Single type