

Colors and sizes of products in this catalog are for reference only.
Please see actual products for standard colors and sizes.



High-End
Metal Partitions
Custom Manufacturer

ADDRESS: Zone E, Liyuan Stainless Steel Logistics City, Chencun Town, Shunde District,
Foshan City, Guangdong Province
TEL: +86-13702487076 / +86-13690600843 / +853-63573193(Macau)
EMAIL: jimmy@wonderoysmetal.com / vincent@wonderoysmetal.com





COMPANY PROFILE

Foshan Wonteroy's Metal Co., Ltd. is a premier metal manufacturer specializing in high-end architectural and interior metal solutions. Our 5,000 square meters smart factory features advanced German CNC machinery and robotic systems, enabling us to produce precision-crafted stainless steel decorative lines, architectural screens, and custom metal products including table legs, bars, and wine cabinets.

We serve prestigious projects worldwide, from luxury hotels to corporate headquarters, offering comprehensive one-stop solutions from design to delivery. Our skilled craftsmen with 13+ years' expertise ensure meticulous attention to detail, while our rigorous 17-point quality control system guarantees exceptional standards.

Committed to quality and innovation, we combine cutting-edge technology with artisanal craftsmanship to transform premium stainless steel into exceptional architectural elements. Let us bring your vision to life with our unparalleled metalworking expertise.



80
44
20
54
21
33
16
220


658
2662
120
10

GOLD FINISH

FLUTED LIGHT
3mm METAL TRIM LIGHTED GOLD
PLYWOOD BACKING DARK GOLD FINISH

DESIGN SET
METAL FRAMED PATTERN
SCALE 1:20

-
1. DRILL HOLES IN THE CEILING
2. FIXED BY SCREWS ON THE TOP
3. APPLY A BEAD OF SEALANT AROUND THE BOTTOM
- The diagram shows a 3D perspective of a rectangular box. A vertical panel with a black and white checkerboard pattern is being installed on the back wall. Three numbered steps are indicated with leader lines: 1. DRILL HOLES IN THE CEILING (pointing to the top edge of the panel), 2. FIXED BY SCREWS ON THE TOP (pointing to the top edge of the panel), and 3. APPLY A BEAD OF SEALANT AROUND THE BOTTOM (pointing to the bottom edge of the panel).

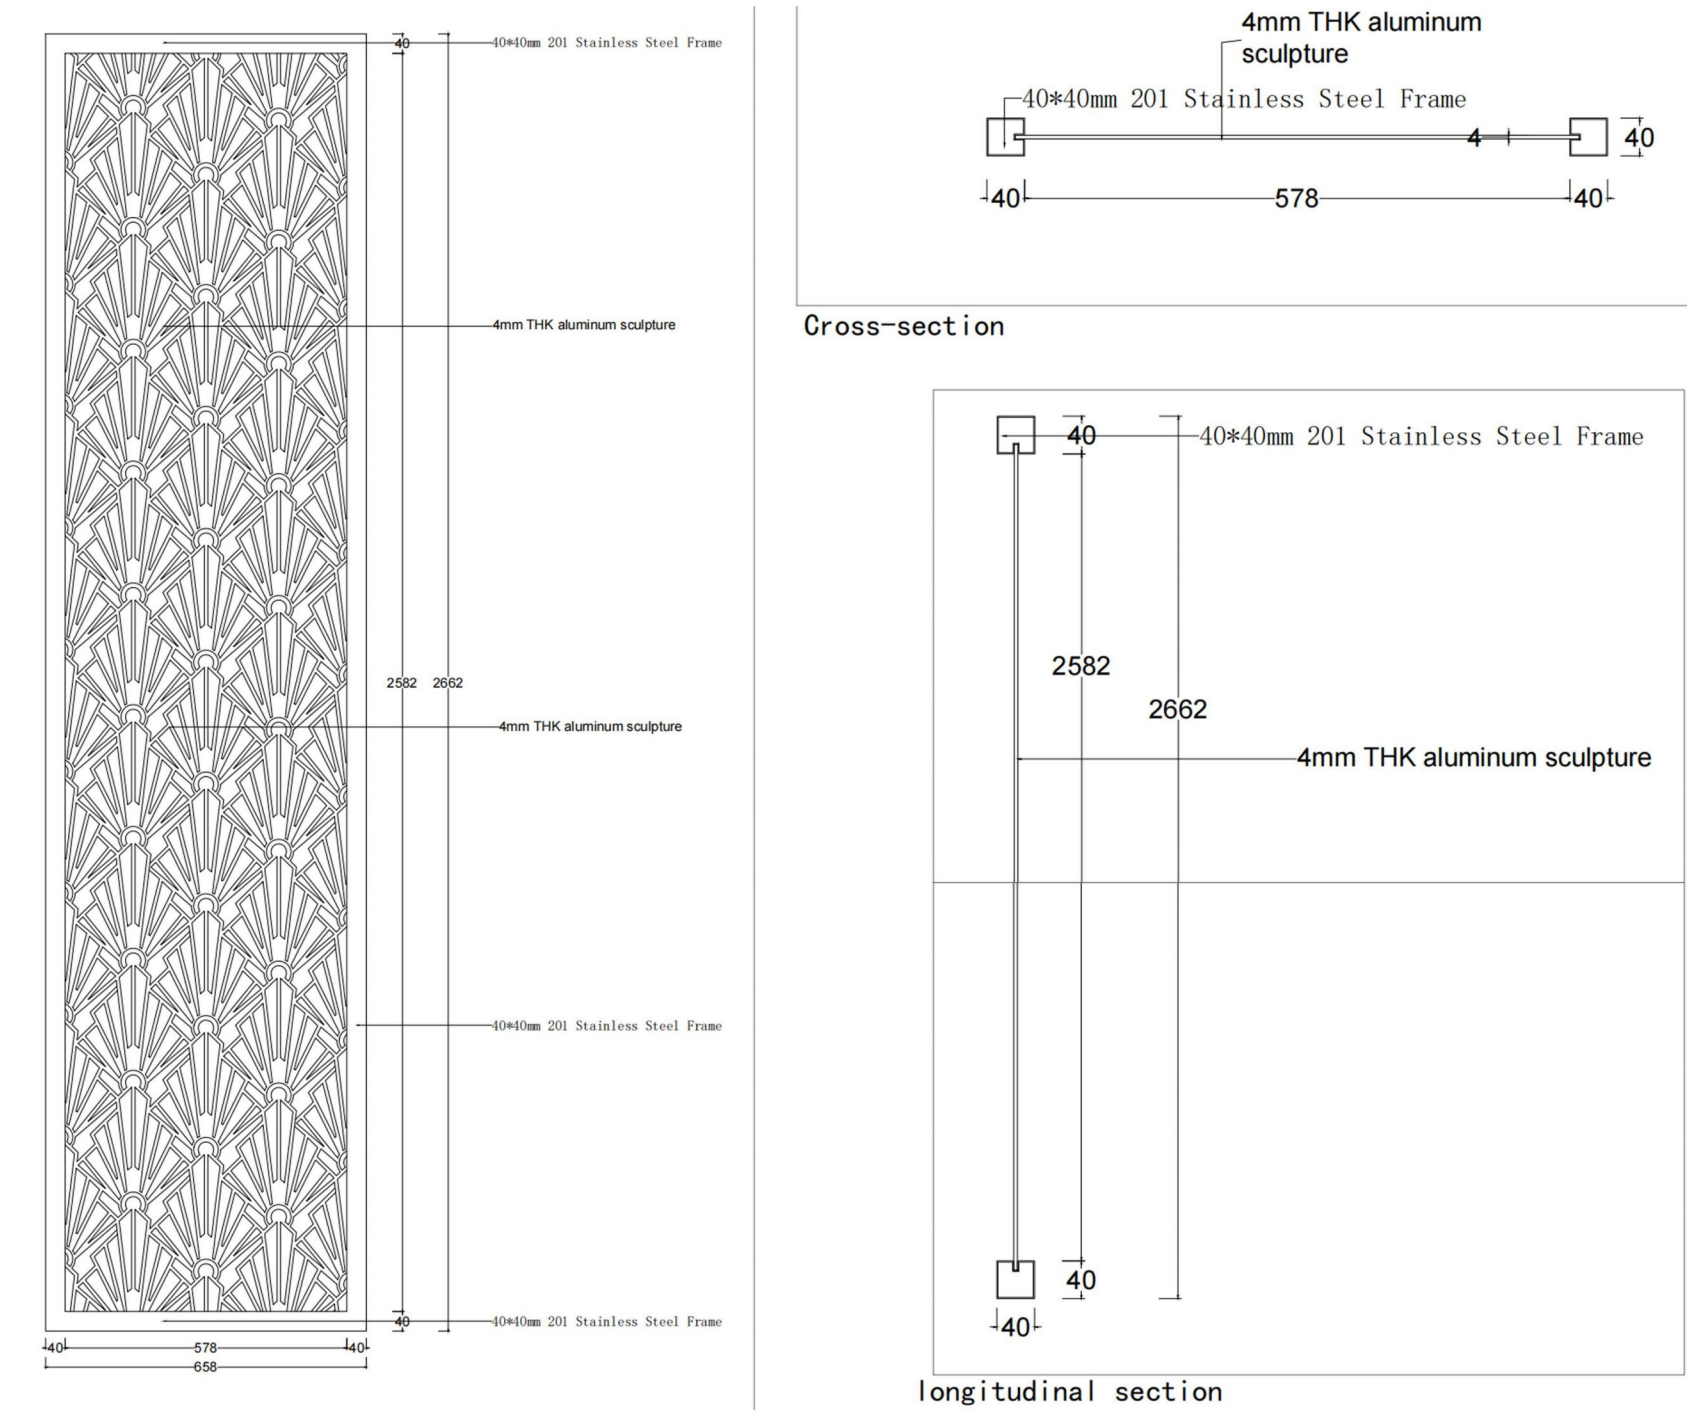



PS01

PS02


PS03



PS10

PS11

PS12

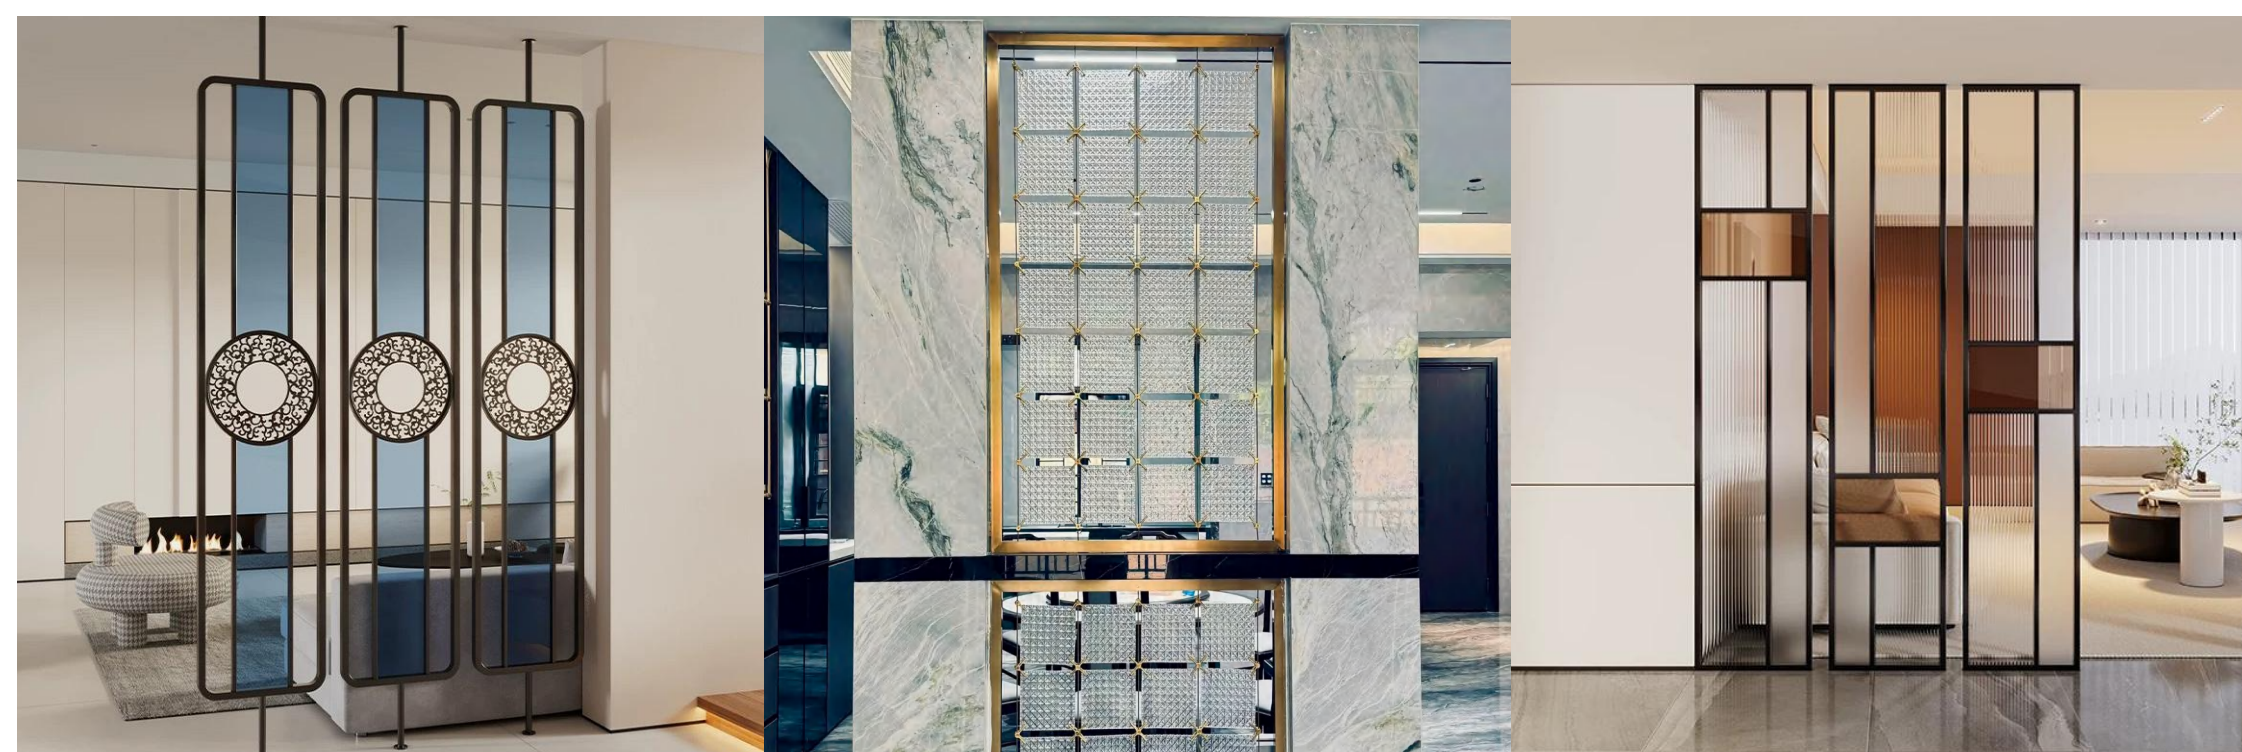

PS04

PS05


PS06



PS13

PS14


PS15

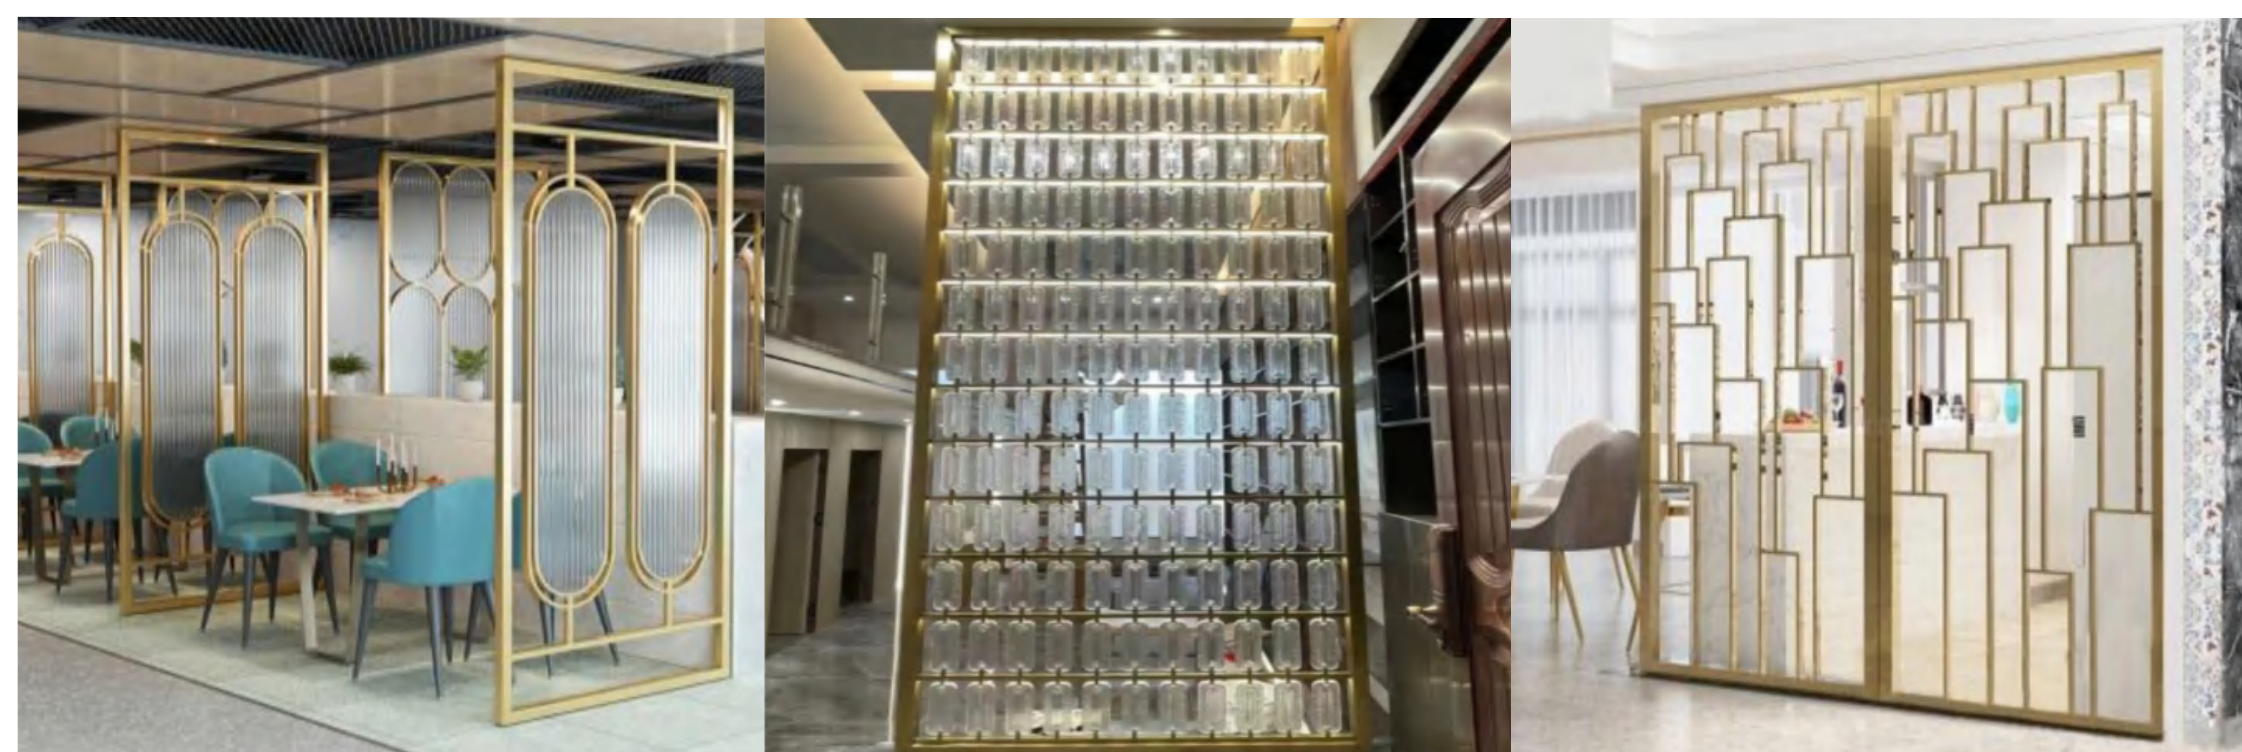

PS07

PS08

PS09

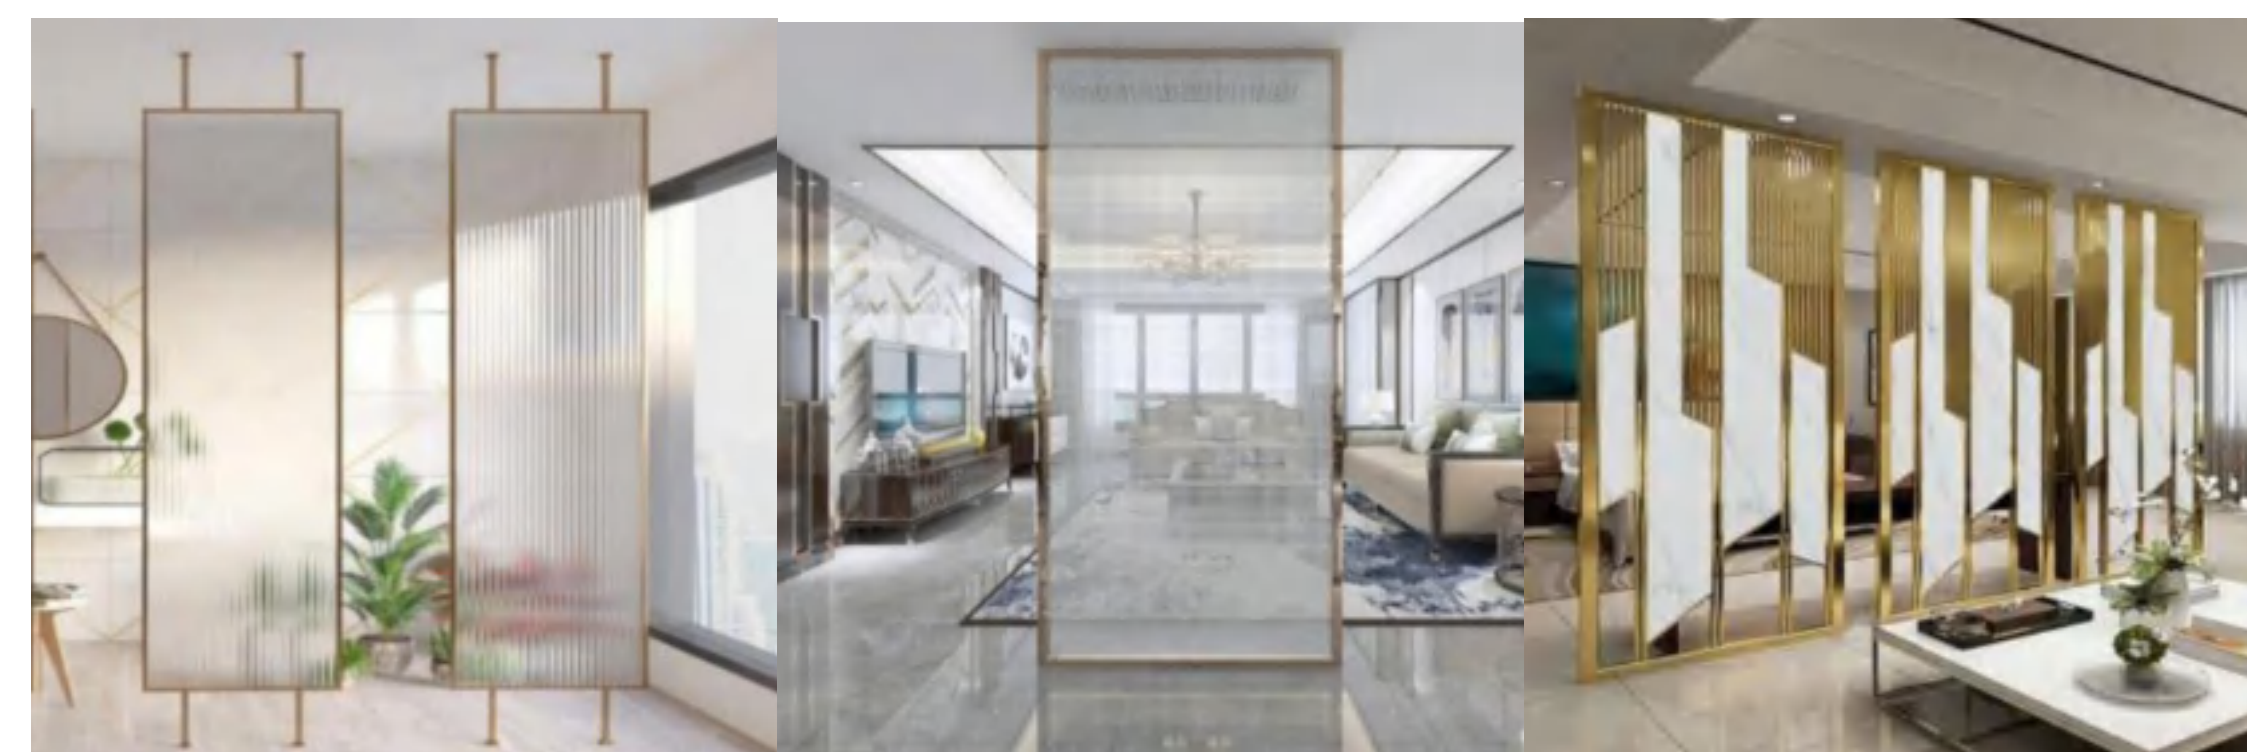

PS16

PS17

PS18



PS19

PS20


PS21



PS28

PS29

PS30

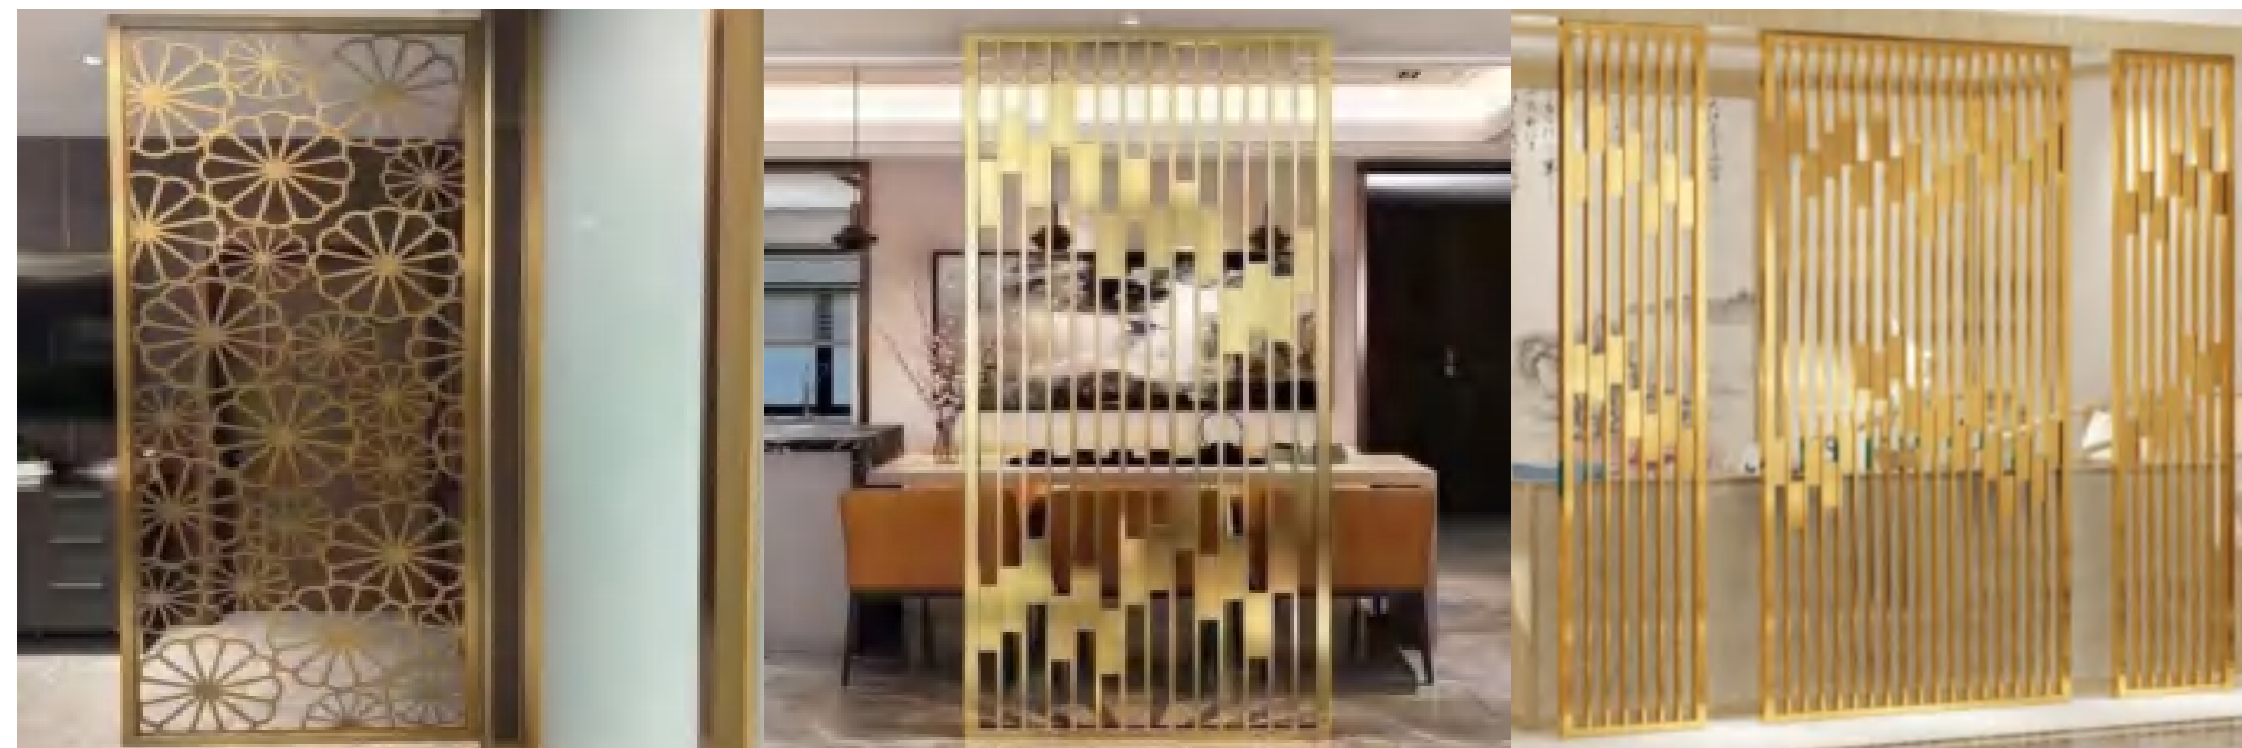

PS22

PS23


PS24



PS31

PS32


PS33

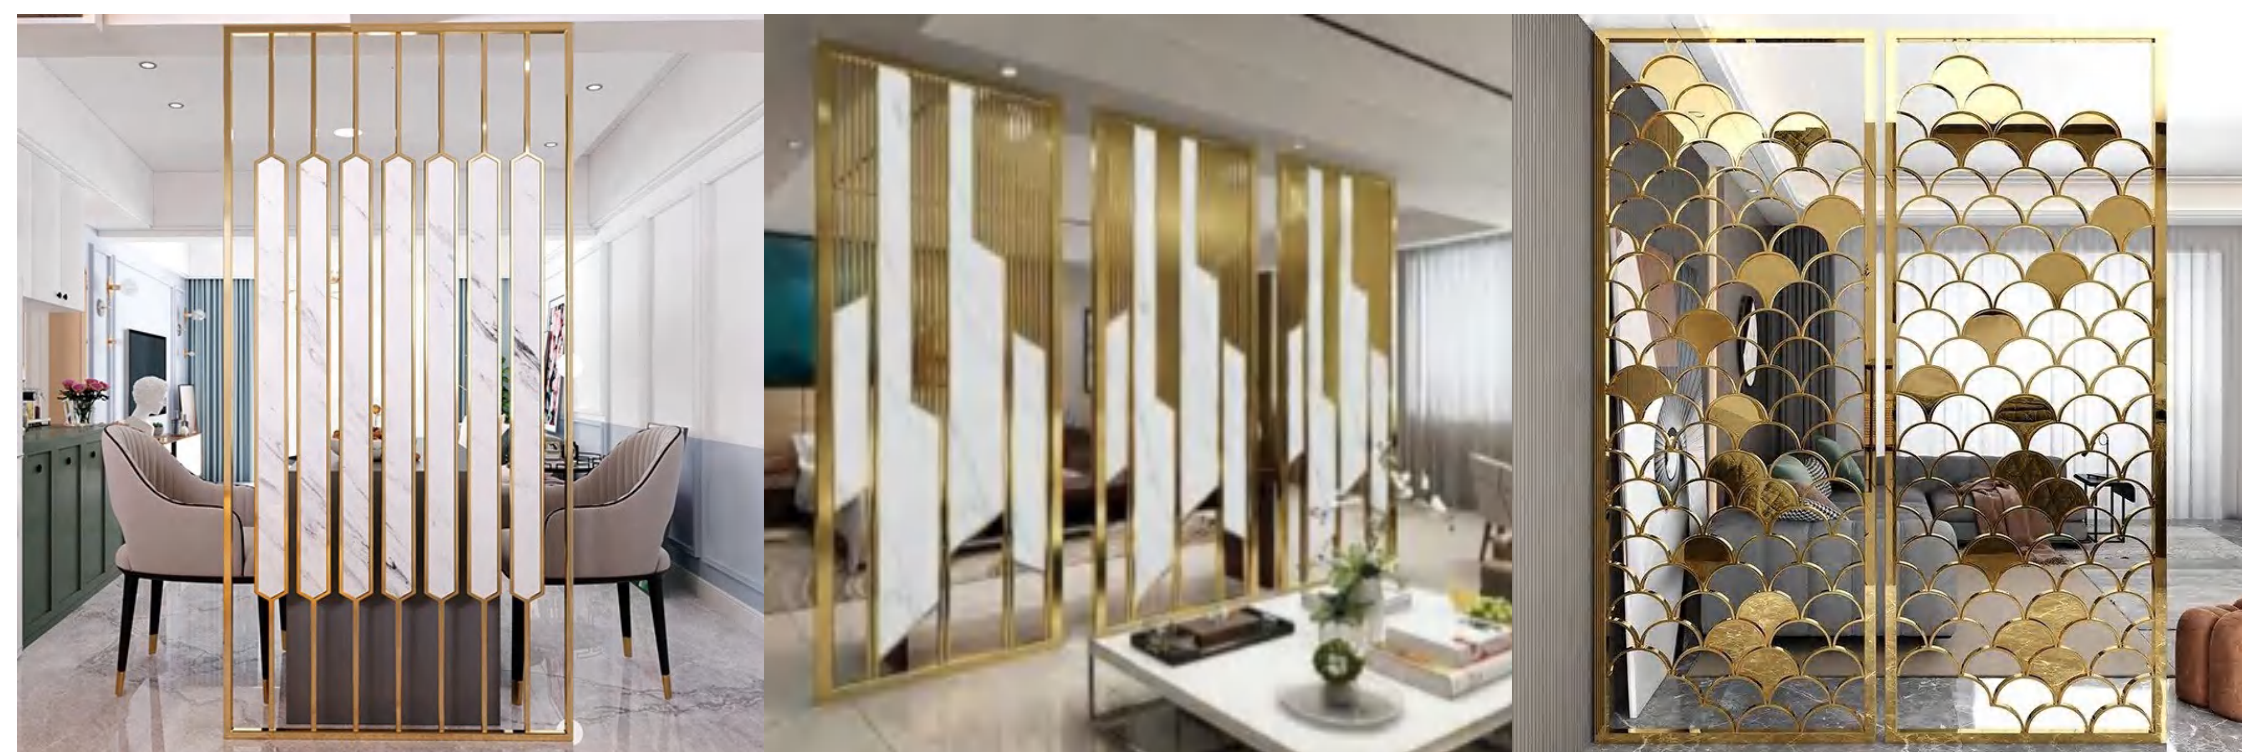

PS25

PS26

PS27

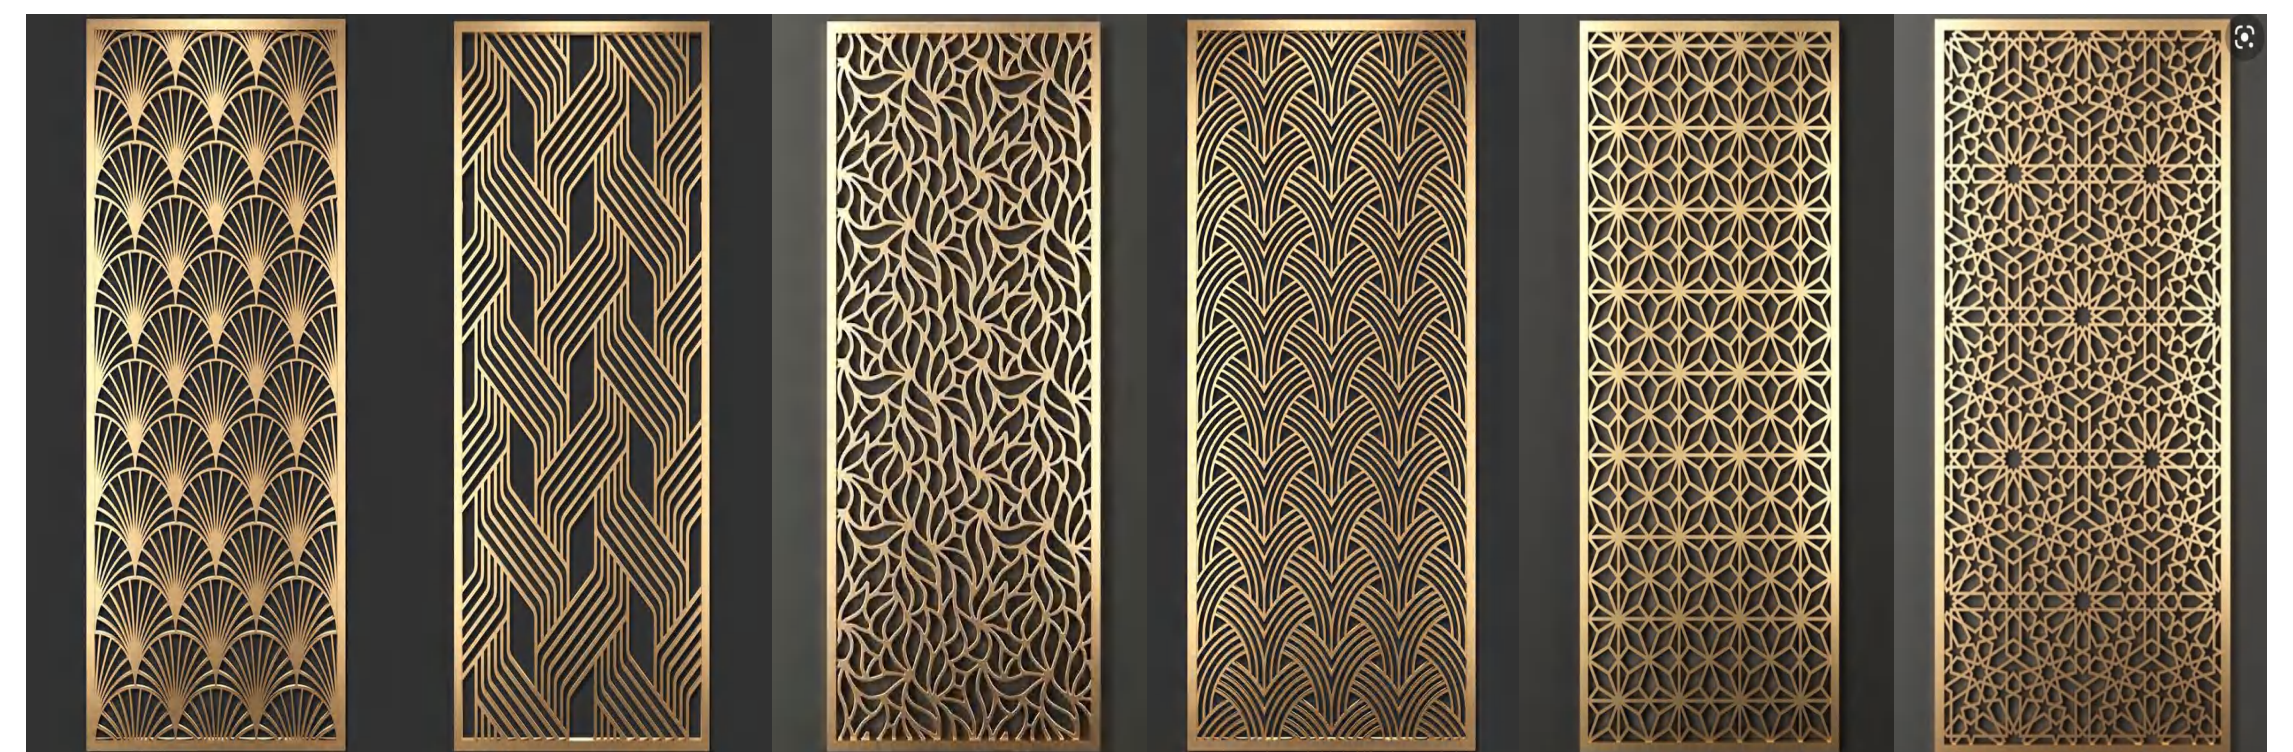

PS34


PS35

PS36

PS37

PS38

PS39

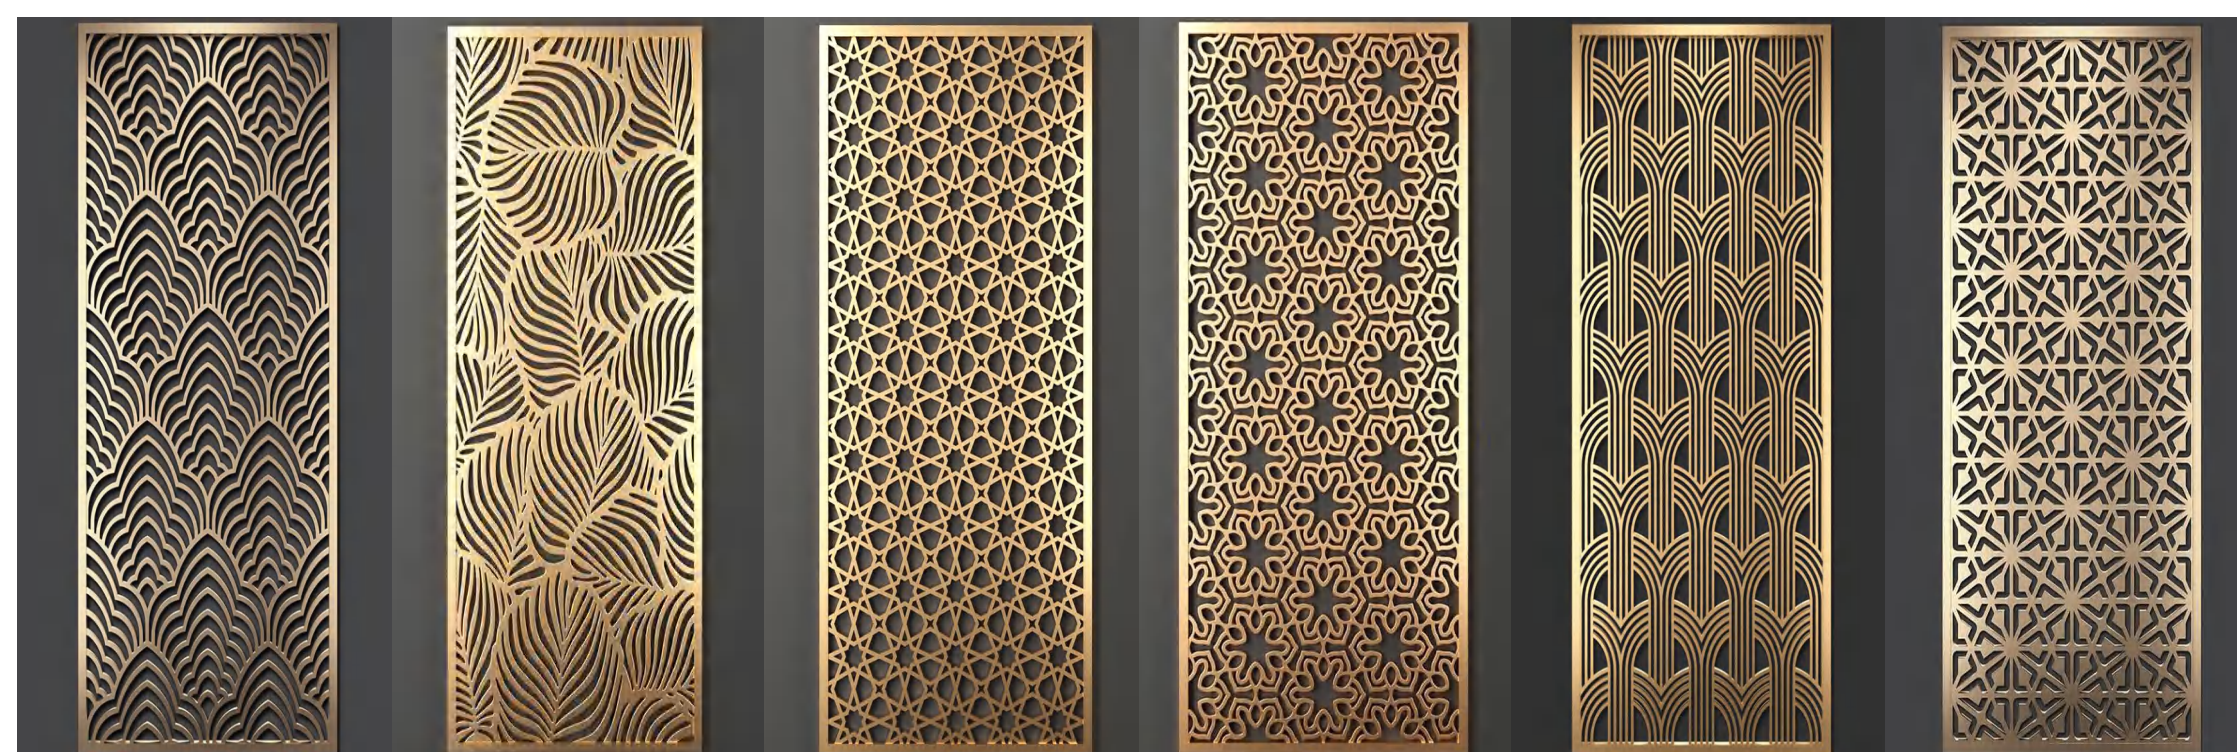


PS34 PS35 PS36 PS37 PS38 PS39



PS46 PS47 PS48



PS40

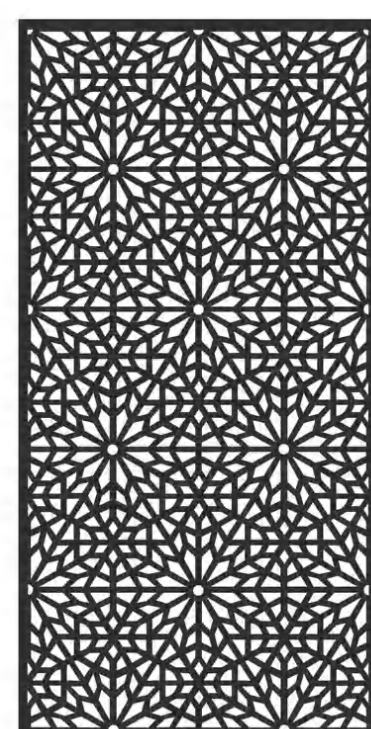

PS41



PS42



PS49 PS50 PS51



PS43




PS44




PS45



PS52

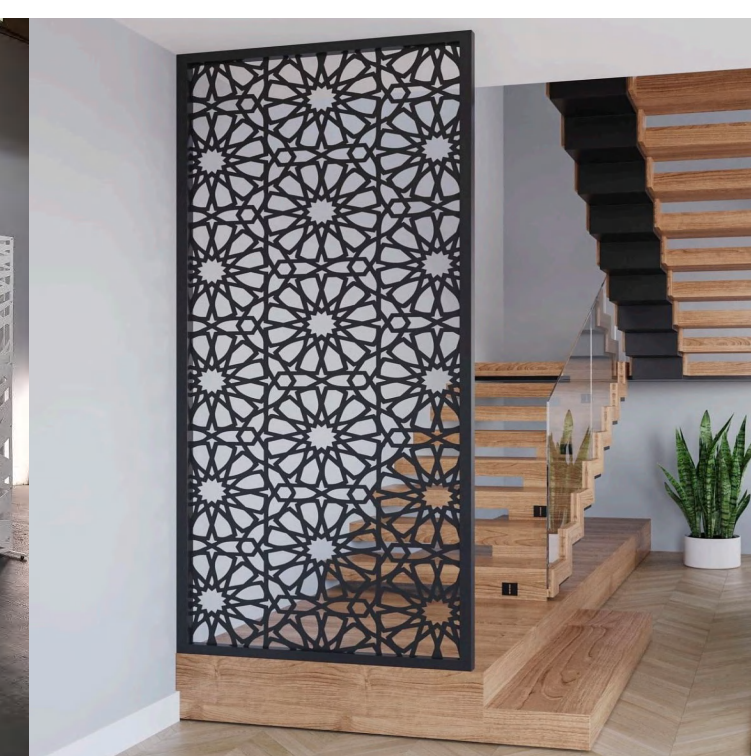

PS53

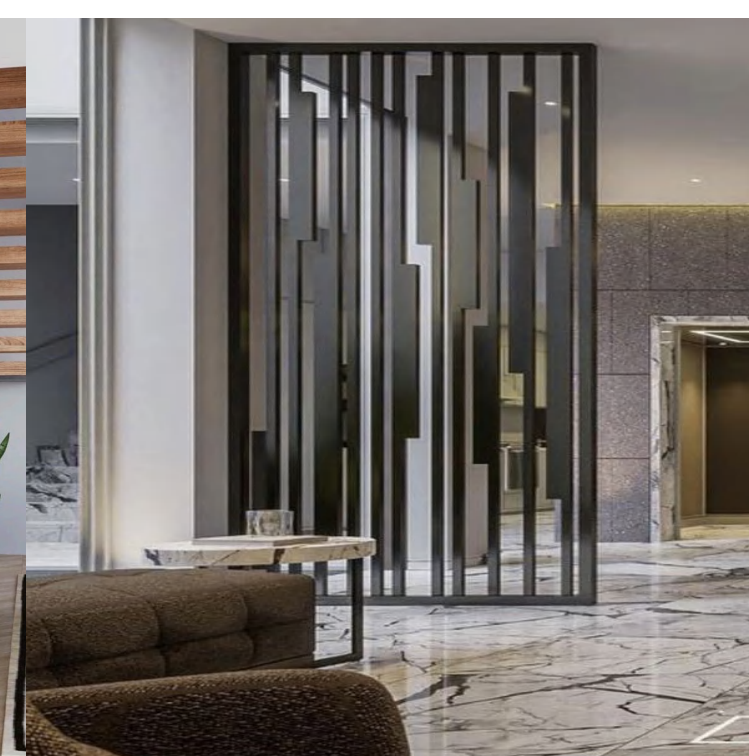

PS54





