


AA10039 Supercharger Tensioner Plate Installation

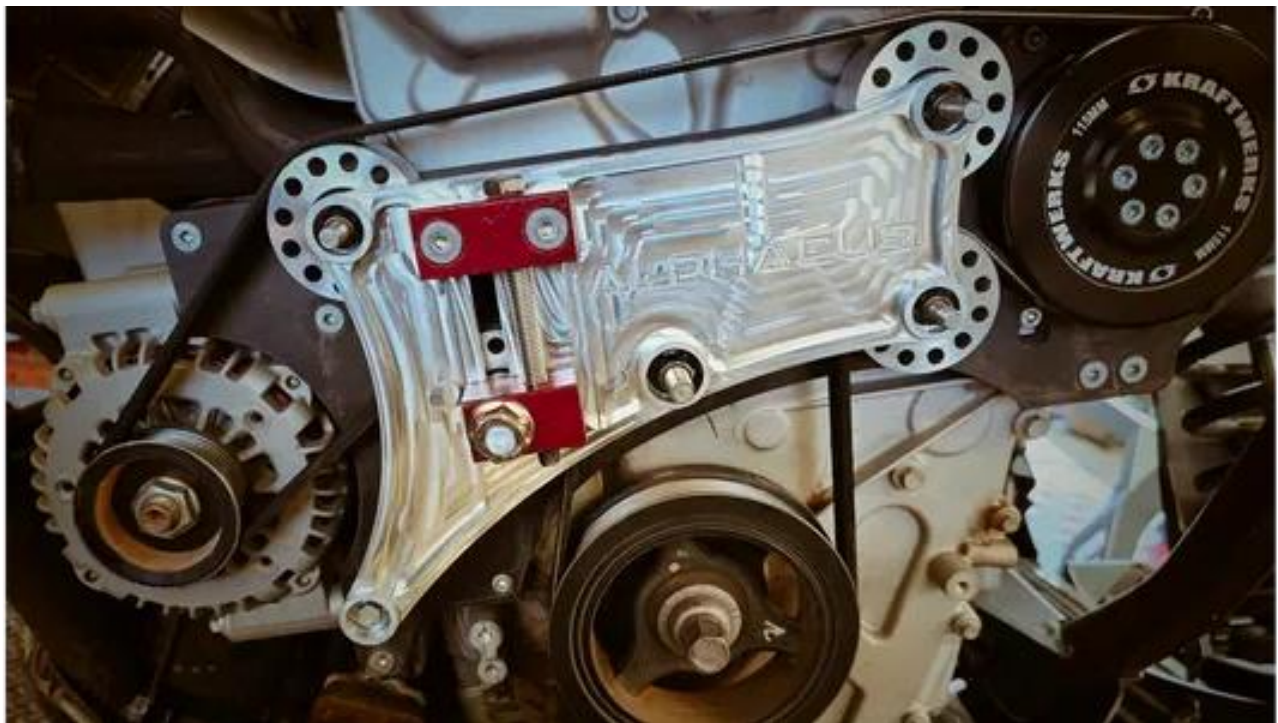

Step 1: Remove Existing Components

Remove existing Kraftwerk's front plate, belt, pulleys, and tensioner assembly.



Step 2: Install New Pulleys and Spacers

Install new pulleys and spacers with the snap ring towards the Kraftwerk backing plate.



Step 3: Remove Allen Bolt

Remove socket head allen bolt (M8x1.25) in the bottom left corner of the fixture.



Step 4: Install the Belt

Install belt (recommended belt # k060650 or longer will take much longer belts)





Step 5: Install the Tensioner Plate

Install tensioner plate on studs. Ensure that the tensioner tension screw fully extended.
Use supplied (M8x1.25 x 60mm) bolt in the bottom left corner using the spacer behind the plate.

Step 6: Tension the Belt

When tensioning the belt, you are looking for $\frac{1}{4}$ to $\frac{1}{2}$ of an inch deflection on the longest stretch of belt. (overtightening can result in belt breaking or premature bearing wear, under tension will result in slipping of the belt).

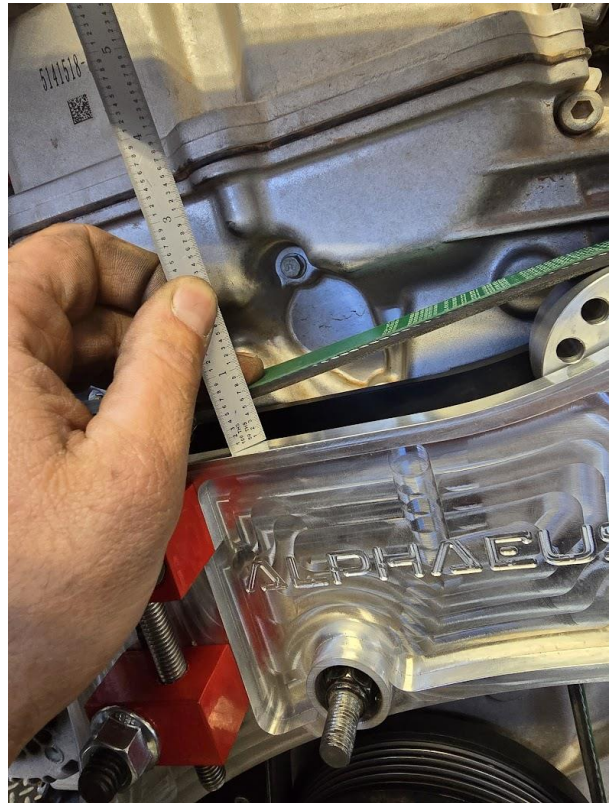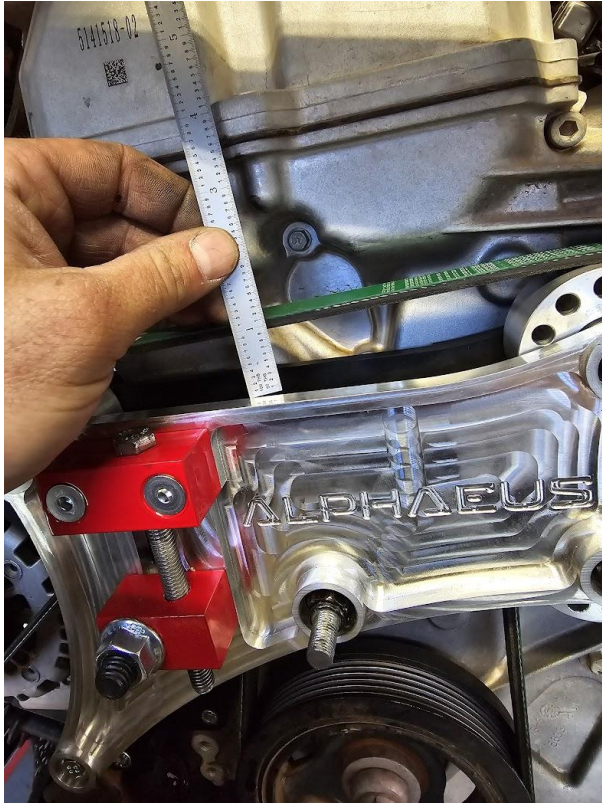

Installation of the tensioner assembly is complete. Get out and ride!

For questions feel free to contact us at info@alphaeusracing.com