

Master Trac Floor Mount System Parts and Installation



Call us at **1-855-854-7465**

or visit us at

www.woodtrac.com

NOTE: THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.




Purchased:

Lot #: 579554 03 /21 / 22


Table of Contents

| Part Identification | 3-9 |
|-------------------------------------|-------|
| Hardware Identification | 10-12 |
| Hardware Usage Guide | 13 |
| Floor Mount Installation | 14-34 |
| Door Installation | 35 |
| Drawer Installation | 36-37 |
| Shoe Shelf Installation | 38 |
| Closet Rod Installation | 39 |
| Adjustable Shelf Installation | 40 |
| H-Joint Channel Istallation | 41 |
| Cleat Dowel Boring Jig Installation | 42 |
| Hole Boring and Jig Installation | 43 |
| Cam and Toe Kick Kit | 44 |
| Toe Kick Installation | 45 |
| Weight Limts | 46 |
| Safety | 47 |
| Warranty | 47 |

Part Identification

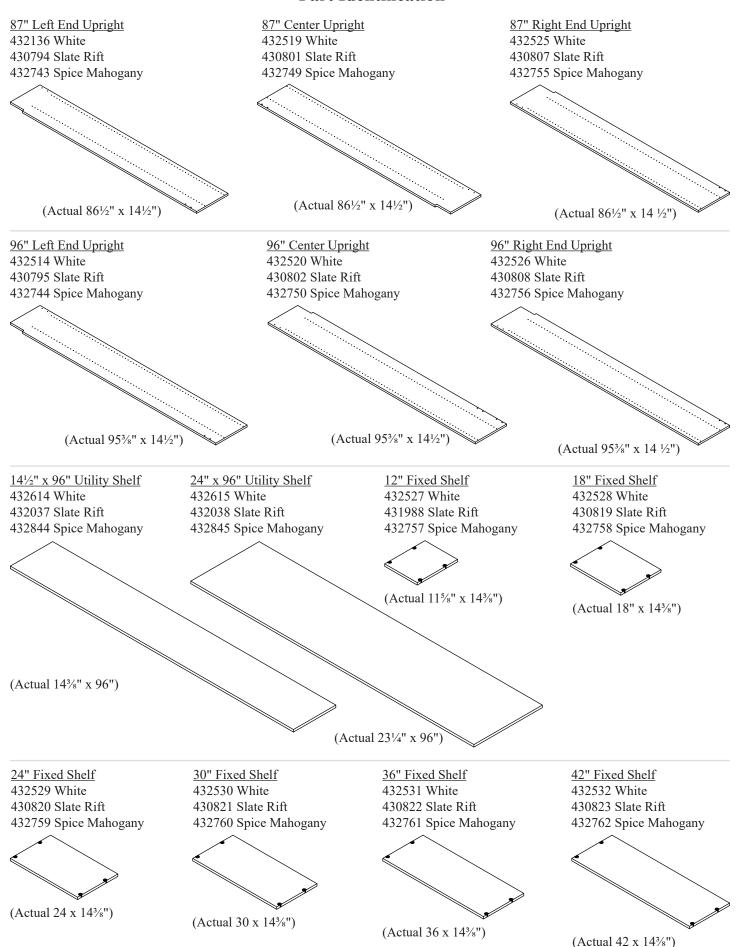


Part Identification

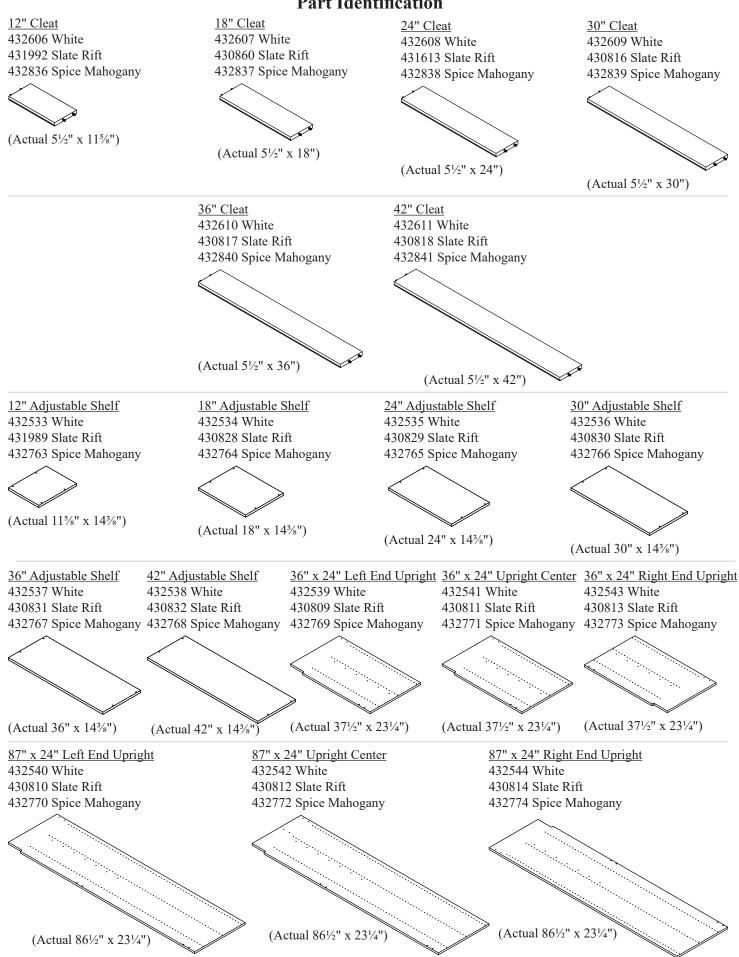

Page 4

Parts Identification

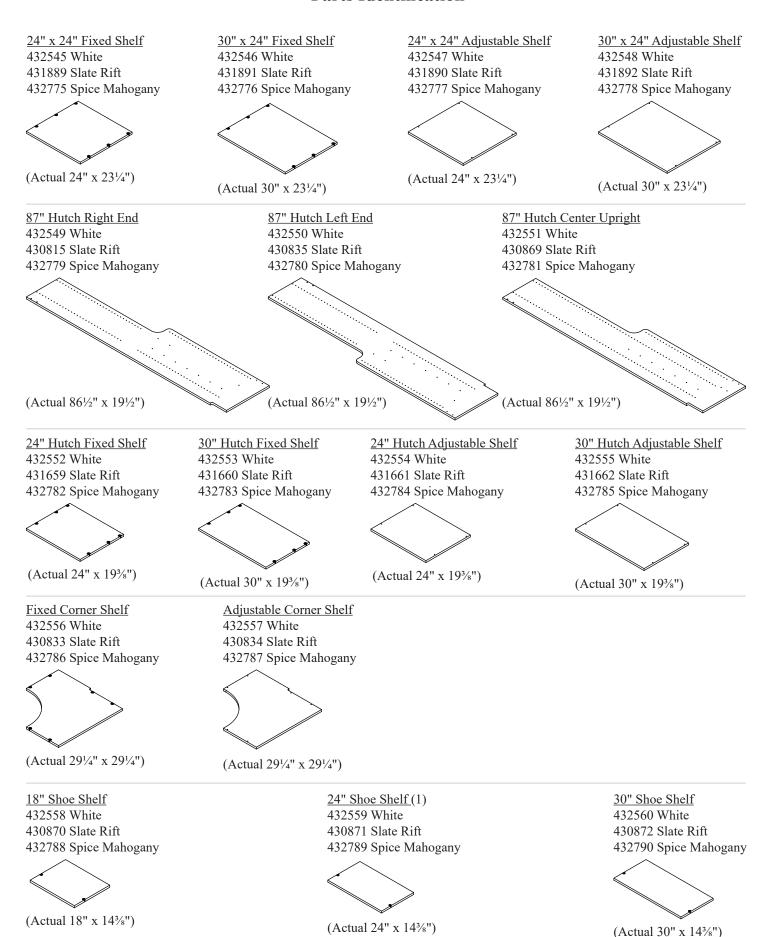

Part Identification

18" Shoe Fence 432926 Matt Nickel 432925 Polished Chrome




24" Shoe Fence 432927 Matt Nickel 432928 Polished Chrome



30" Shoe Fence Matt 432929 Matt Nickel 432930 Chrome



24" Coat Hook Board 432613 White 432035 Slate Rift 432843 Spice Mahogany

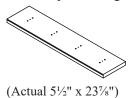

18" Coat Hook Board 432612 White 432034 Slate Rift 432842 Spice Mahogany



(Actual 5½" x 17½")

12" Toe Kick 432561 White 431990 Slate Rift 432791 Spice Mahogany



(Actual 115/8" x 61/4")

18" Toe Kick 432562 White 430836 Slate Rift 432792 Spice Mahogany



(Actual 18" x 61/4")

24" Toe Kick (1) 432563 White 430837 Slate Rift 432793 Spice Mahogany



(Actual 24" x 61/4")

30" Toe Kick 432564 White 430838 Slate Rift 432794 Spice Mahogany




(Actual 30" x 61/4")

36" Toe Kick 432565 White 430839 Slate Rift 432795 Spice Mahogany



(Actual 36" x 61/4")



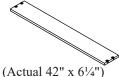

Short Corner Toe Kick 433571 White





Long Corner Toe Kick 433570 White 433572 Slate Rift 433574 Spice Mahogany



(Actual 28.5" x 6¹/₄")

18" Small Drawer Front 432567 White 430847 Slate Rift 432797 Spice Mahogany



(Actual 18½" x 4½")

24" Small Drawer Front 432568 White 430848 Slate Rift 432798 Spice Mahogany



(Actual 245/8" x 47/8")

30" Small Drawer Front 432569 White 430849 Slate Rift 432799 Spice Mahogany




(Actual 30½" x 4½")

18" Large Drawer Front Slab 432570 White 430853 Slate Rift 432800 Spice Mahogany



(Actual 18½" x 9½")

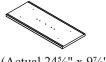

(Actual 24⁵/₈" x 9⁷/₈")

(Actual 30½" x 9½")


30" Large Drawer

430855 Slate Rift


Front Slab(1)

432572 White


18" Large Drawer Front Shaker 432573 White 430856 Slate Rift 432802 Spice Mahogany 432803 Spice Mahogany

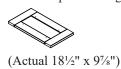

24" Large Drawer Front Shaker 432574 White 430857 Slate Rift 432804 Spice Mahogany

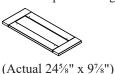

430858 Slate Rift 432805 Spice Mahogany

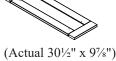


30" Large Drawer

Front Shaker

432575 White


www.woodtrac.com

Parts Identification

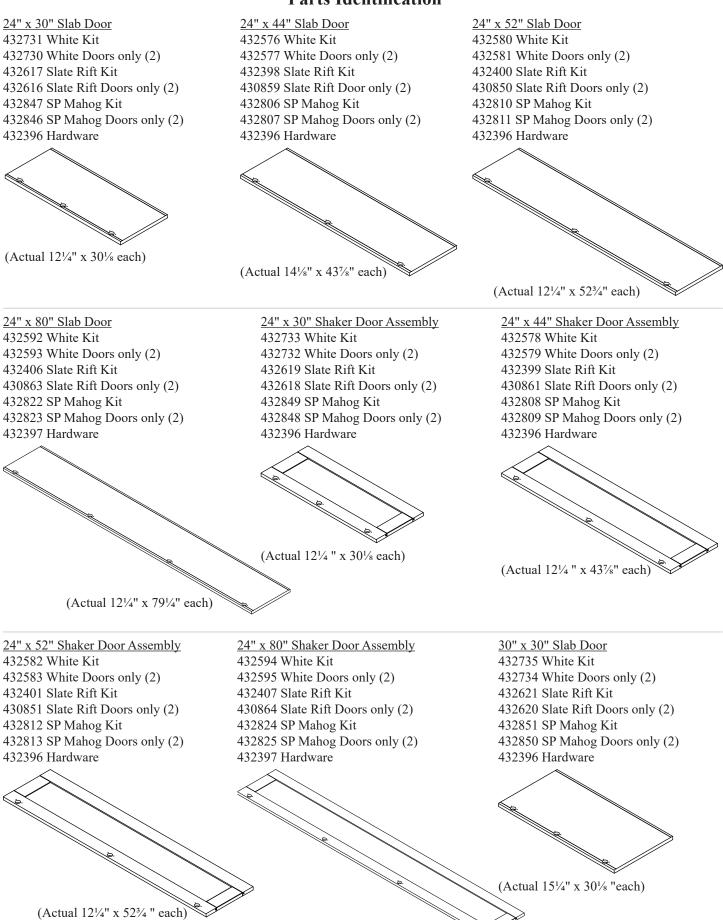

(Actual 121/4" x 791/4" each)


Part Identification

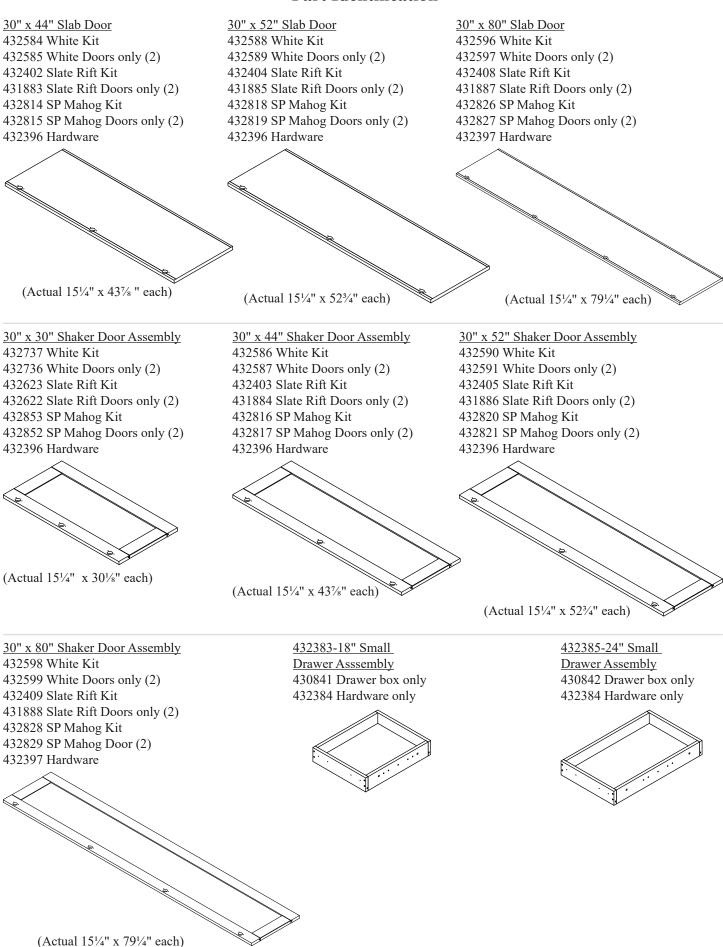


Page 8

Parts Identification


432386-30" Small
Drawer Assembly
430843 Drawer box only
432384 Hardware only

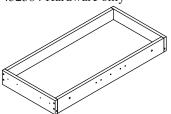


432387-18" Large Drawer Assembly 430844 Drawer box only 432384 Hardware only

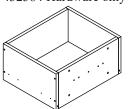

432389-24" Large <u>Drawer Assembly</u> 430845 Drawer box only 432384 Hardware only

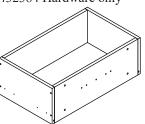

432390-30" Large Drawer Assembly 430846 Drawer box only 432384 Hardware only

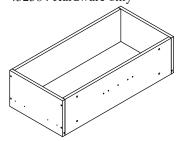


432391-24" Hutch Small Drawer Assembly 431655 Drawer box only 432392 Hardware only




432393-30" Hutch Small Drawer Assembly 431656 Drawer box only 432392 Hardware only



432394-24" Hutch Large Drawer Assembly 431657 Drawer box only 432392 Hardware only

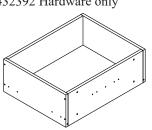


432395-30" Hutch Large Drawer Assembly 431658 Drawer box only 432392 Hardware only

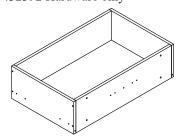


Crown Molding (classic) 432601 White 430874 Slate Rift 432831 Spice Mahogany




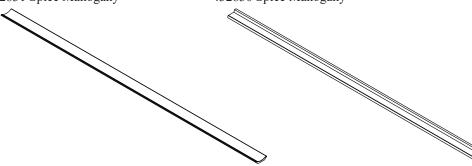

Stand Alone Island 430866 White 430865 Slate Rift 432066 Spice Mahogany

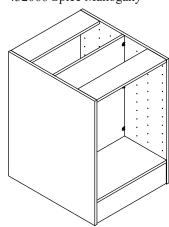


Bench 430868 White 430867 Slate Rift 432068 Spice Mahogany

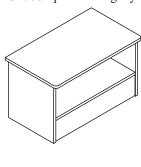

Hamper Kits

432604 White 24" Slab Door 432602 White 24" Shaker Door 432605 White 30" Slab Door 432603 White 30" Shaker Door 431874 Slate Rift 24" Slab Door 430875 Slate Rift 24" Shaker Door 431875 Slate Rift 30" Slab Door 430876 Slate Rift 30" Shaker Door 432834 Spice Mahogany 24"Slab Door 432832 Spice Mahogany 24" Shaker Door 432835 Spice Mahogany 30" Slab Door 432833 Spice Mahogany 30" Shaker Door

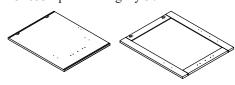

Hardware Identification

Shelf Cam 433145 White (2500)

433148 White (250)

433151 White (25)

433146_Bronze (2500)

433149 Bronze (250)

433152 Bronze (25)

433147 Brown (2500)

433150 Brown (250)

433153 Brown (25)



Push-In Dowel 433154 (5000) 433155 (250) 433156 (25)



<u>Screw-In Dowel</u> 433157 Steel (4500) 433158 Steel (250) 433159 Steel (25)



Double Dowel 433163 Steel (3000) 433164 Steel (250) 433165 Steel (25)




Bracket Only 433200 White (250) 433201 Brown (250) 433202 Black (250)




Bracket Kit 433203 White (10) 433204 Brown (10)


433205 Black (10)

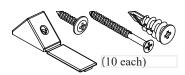

Toggle Anchor 431220

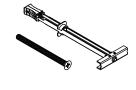

Extension Rail Template Kit 433169

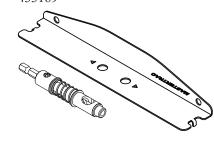

Corner Shelf

H-Joint Channel


433171 White (100)

433172 White (1)


433173 Bronze (100)

433174 Bronze (1) 433175 Brown (100)

433176 Brown (1)

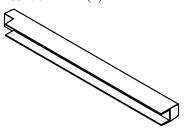


Cleat Dowel Boring Jig 433713

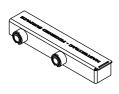


Cam Jig Install Kit 433170 Zinc



Rolled Edge Banding 429614 White 432854 Slate Rift 432855 Spice Mahogany

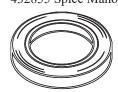

2-3/4" Flat Head Screw 433179_(250) 433180 (25)

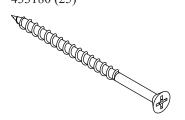


5/16" Euro Screw 433182 (250) 433183 (25)



5/8" Flat Head Screw 433378 (250) 433377 (25)



Hinge Kit 432396 (6 hinge pack) 432397 (8 hinge pack)

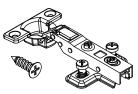


Hardware Identification



(4 each)



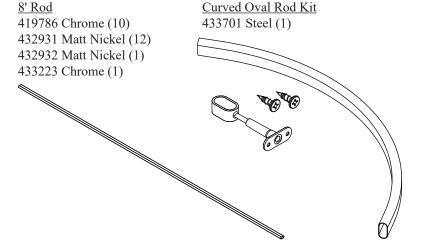

Rod Cup 432933 Matt Nickel (200) 432934 Matt Nickel (10) 433224 Chrome (200) 433225 Chrome (10)

(4 each)



Shelf Support 432935 (500) 432937 Nickel (50)



Contemporary Pull 433189 Brushed Nickel 433190 Polished Chrome 433191 Matt Gold 433192 Matt Black 433193 Matt Chrome



Pull 433194 Polished Chrome 433195 Matt Black 433196 Brushed Brass 433197 Stainless Steel

Knob 433184 Matt Nickel 433185 Slate 433186 Polished Chrome 433187 Matt Gold 433188 Matt Aluminum




Applique 5 Pack


432856 White





Valet Rod

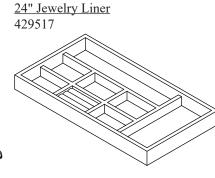

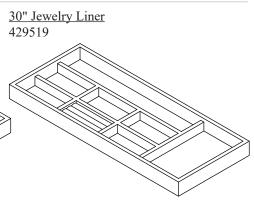

Hardware Identification

Coat Hook 432906 Matt Aluminum 432907 Polished Chrome




Double Hook 432909 Matt Aluminum 432908 Polished Chrome




Waterfall Hook 432912 Polished Chrome 432913 Matt Aluminum




Broom Holder 432910 White 432911 Grey

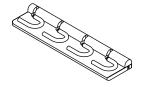


Sliding Scarf Rack 432923 Polished Chrome 432924 Matt Aluminum

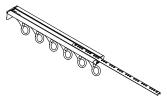

Sliding Tie Rack 432917 White 432918 Polished Chrome 432919 Matt Aluminum

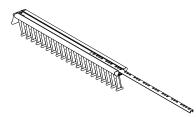

Sliding Belt Rack 432920 White 432921 Polished Chrome 432922 Matt Aluminum

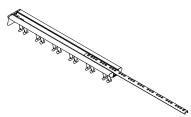

6" x 18" Basket 432897



6" x 24" Basket 432900



6" x 30" Basket 432903



11" x 18" Basket 432898



11" x 24" Basket

432901

11" x 30" Basket 432904



17" x 18" Basket



17" x 24" Basket





17" x 30" Basket




Page 12

Hardware Usage Guide

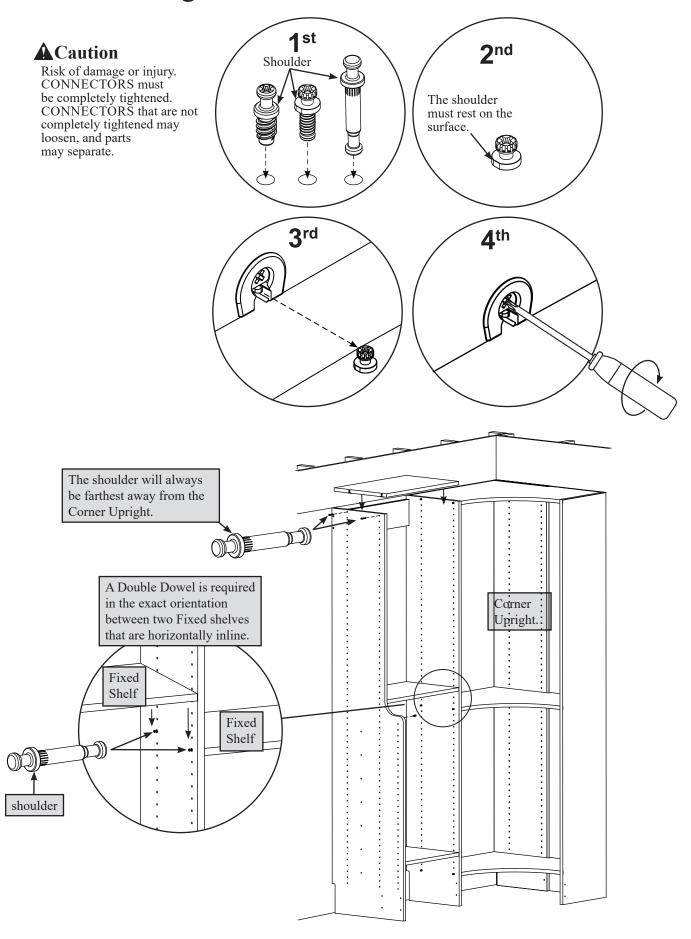


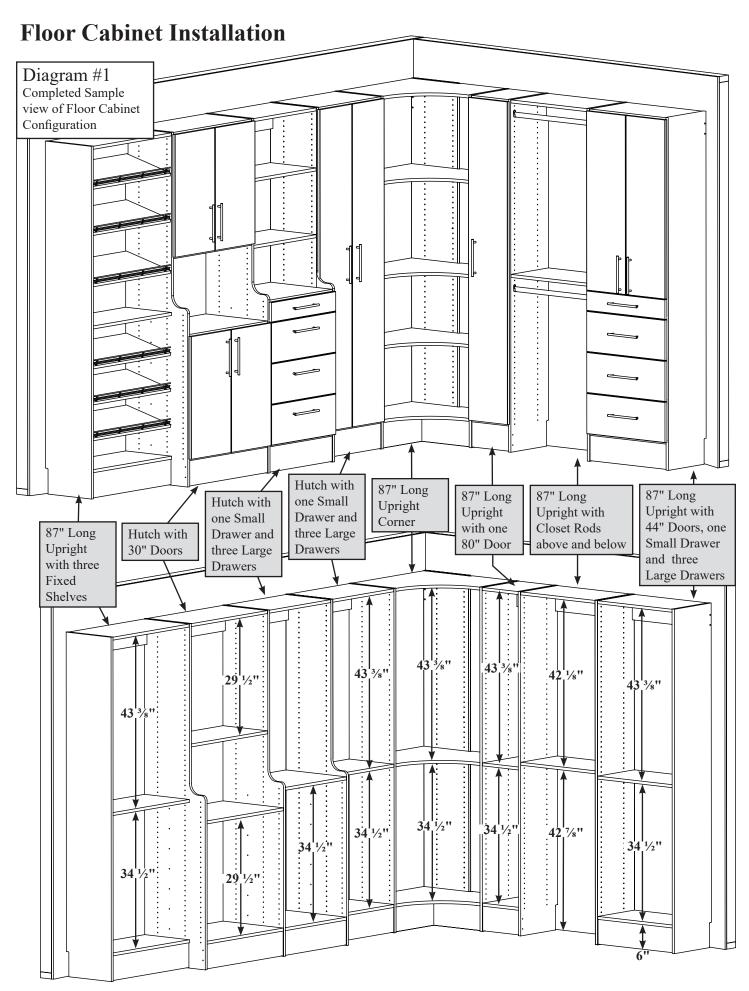



Page 14

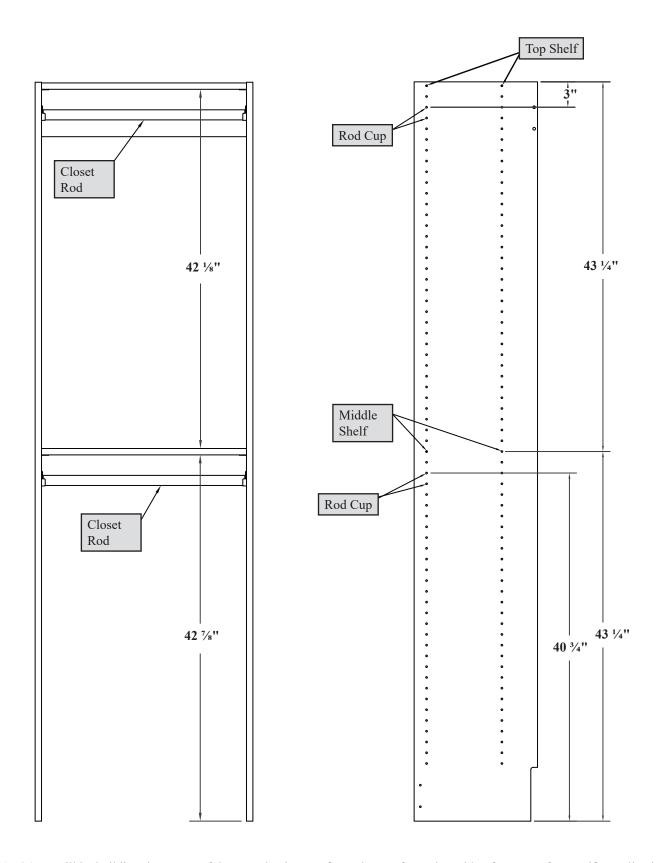


In pages 15-34 we will be building the carcus of the Sample view configuration. Refer to the Table of contents for specific applications necessary to complete your installation of Hardware, Doors, Drawers, Closet Rods, Adjustable Shelves modifying Fixed Shelves, Toe Kicks and Cleats.

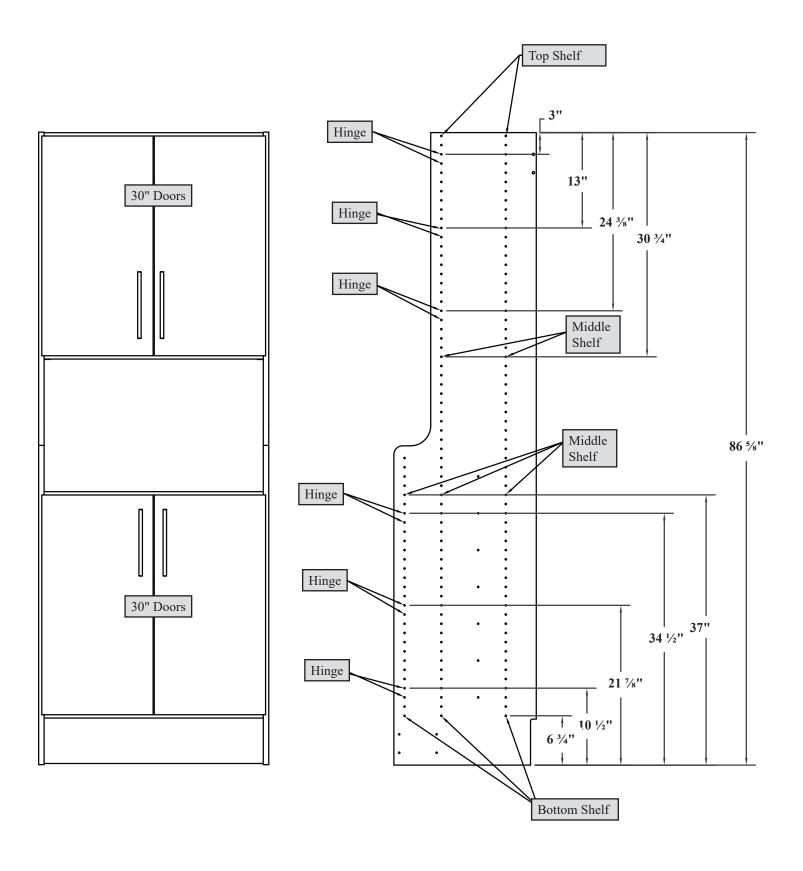

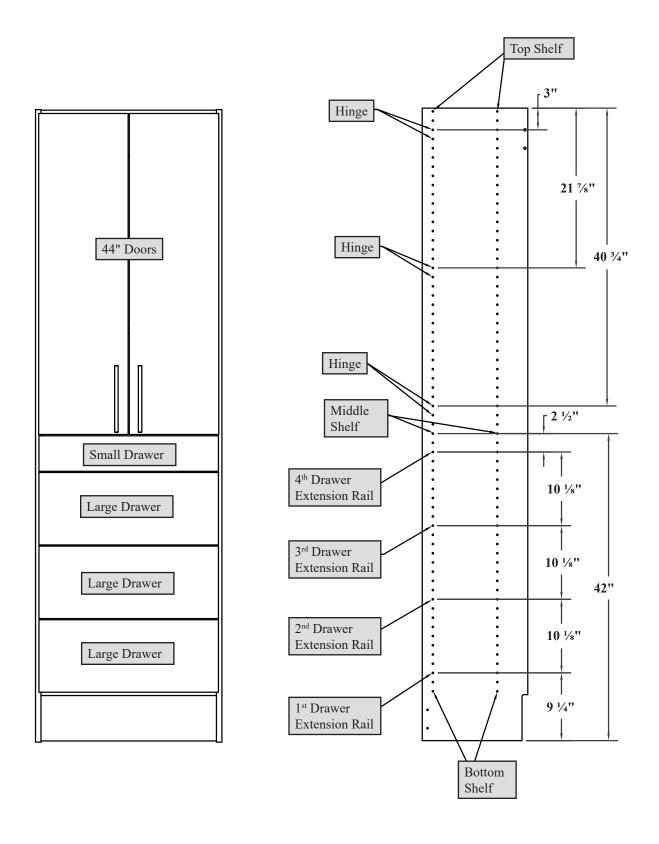


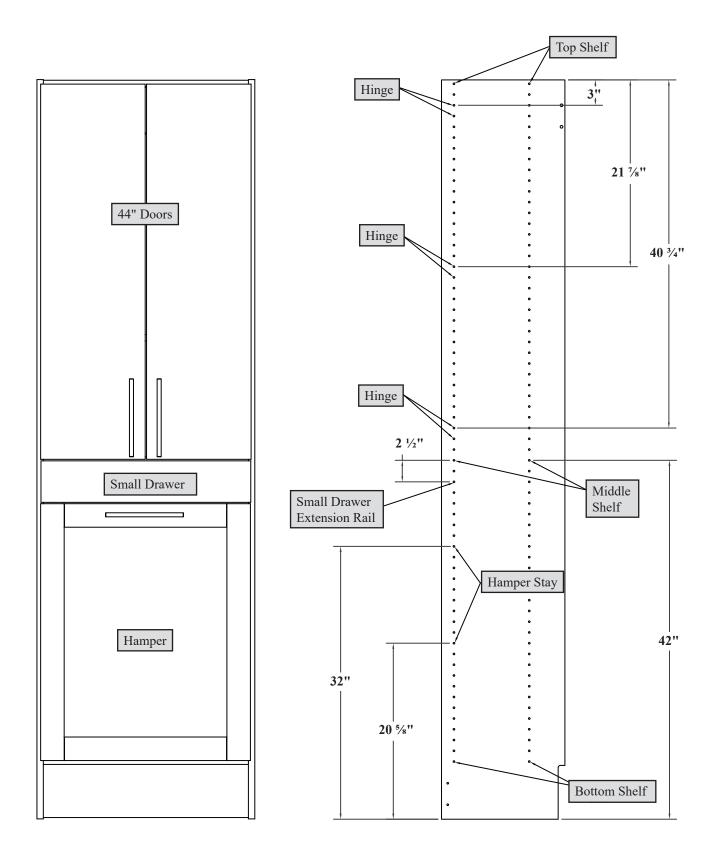

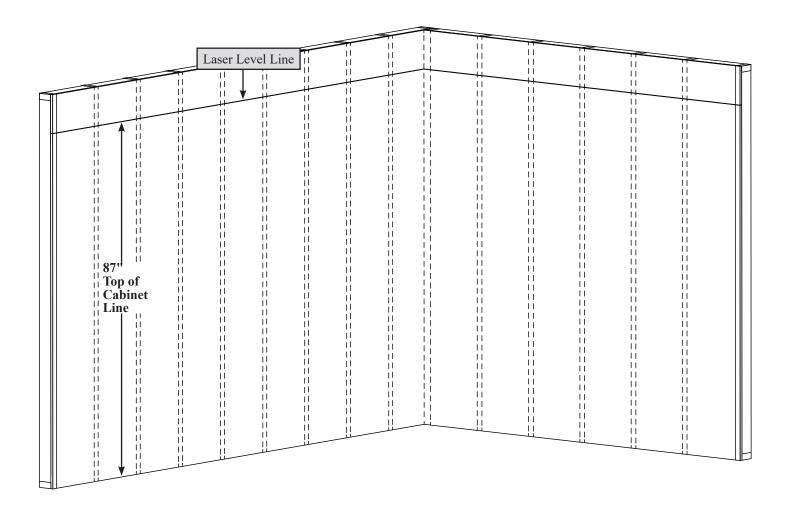

With a level or laser, create a line 87" off the floor onto your wall to indicate the top edge of the cabinets


<u>NOTE</u>: As you build your Floor Cabinets, you may need to shim underneath the Uprights to stay level with the line keeping the Uprights plumb.

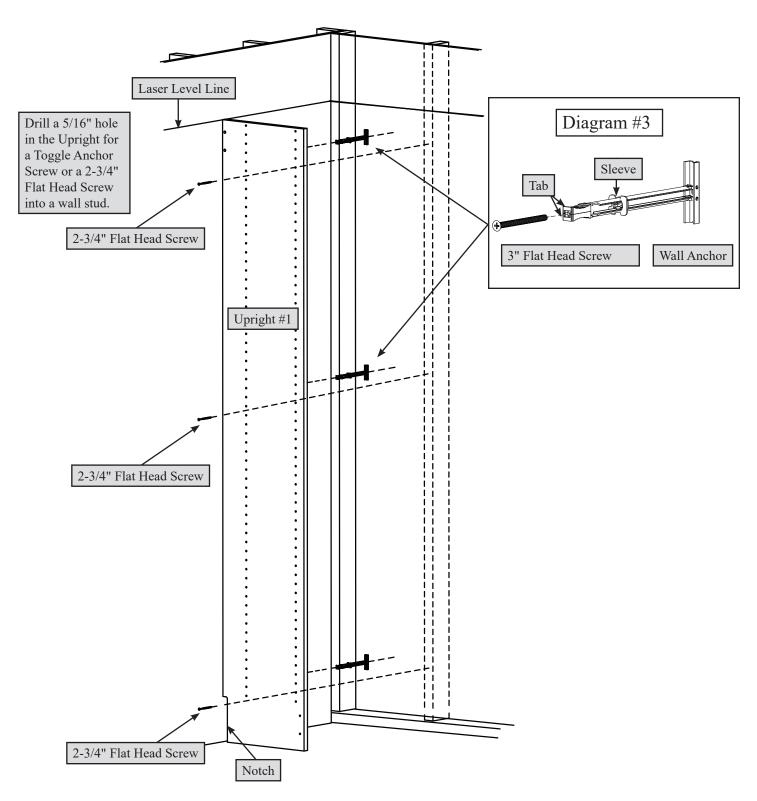

Fasten Upright #1 to the wall with three 2-3/4" Flat Head Screws into wall studs. Use three Toggle Anchors if a wall stud is not available.

Diagram #3


The Toggle Anchor requires 1/2" hole in the drywall. Push the Toggle Anchor into the hole, slide the Sleeve to the drywall and break off the Toggle Anchor.

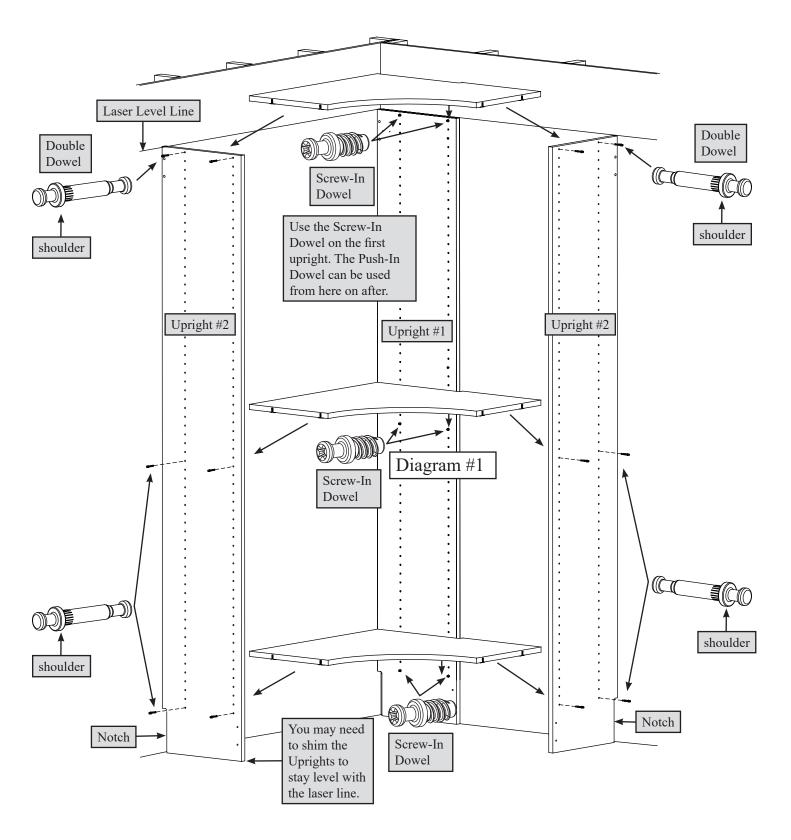

Turn four Screw-in Dowels into the top holes and bottom holes of the corner Upright. Turn additional Screw-In Dowels into the holes per Design in Diagram #1 for placement of the Fixed Shelf.

Insert twelve Double Dowels completely into the holes in the Uprights #1 and #2.


Fasten the Fixed Shelves to the Uprights. Tighten twelve Connectors.

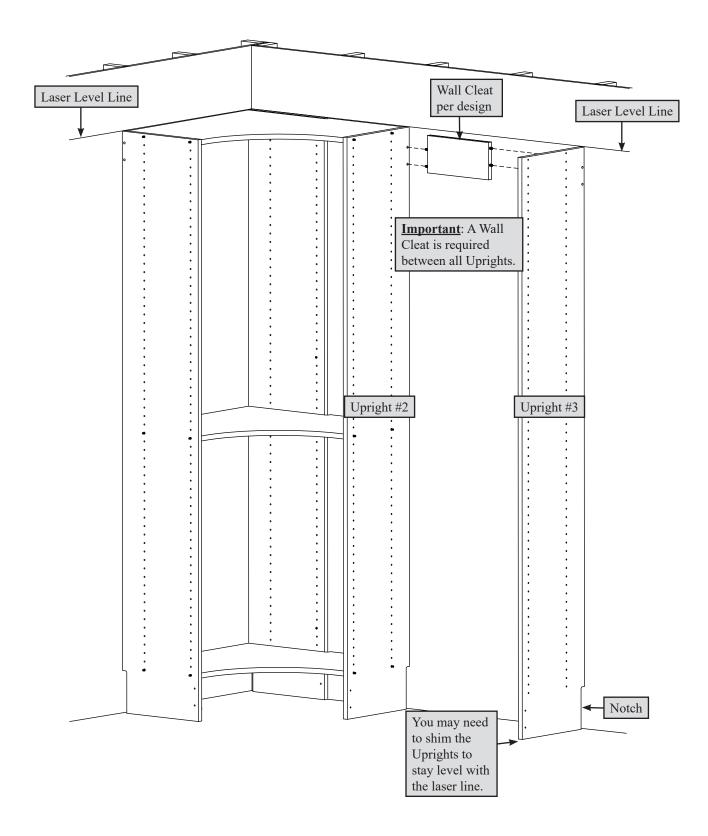

Wall Cleats come with pre-glue dowels in them. Fasten a Wall Cleat to Uprights #2 and #3 by pushing the wood dowels in the Wall Cleat into the Uprights.

Important: A Wall Cleat is required between all Uprights.


Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

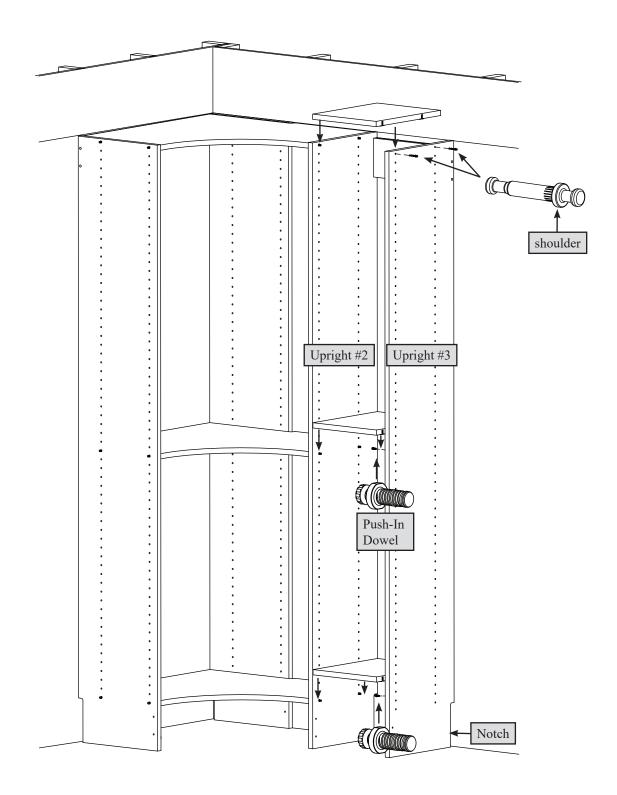

Insert two Double Dowels completely into the holes in Upright #3.

Insert four Push-In Dowels completely into the holes in the Upright #3.


Fasten three Fixed Shelves to Upright #2 and #3. Tighten twelve Connectors

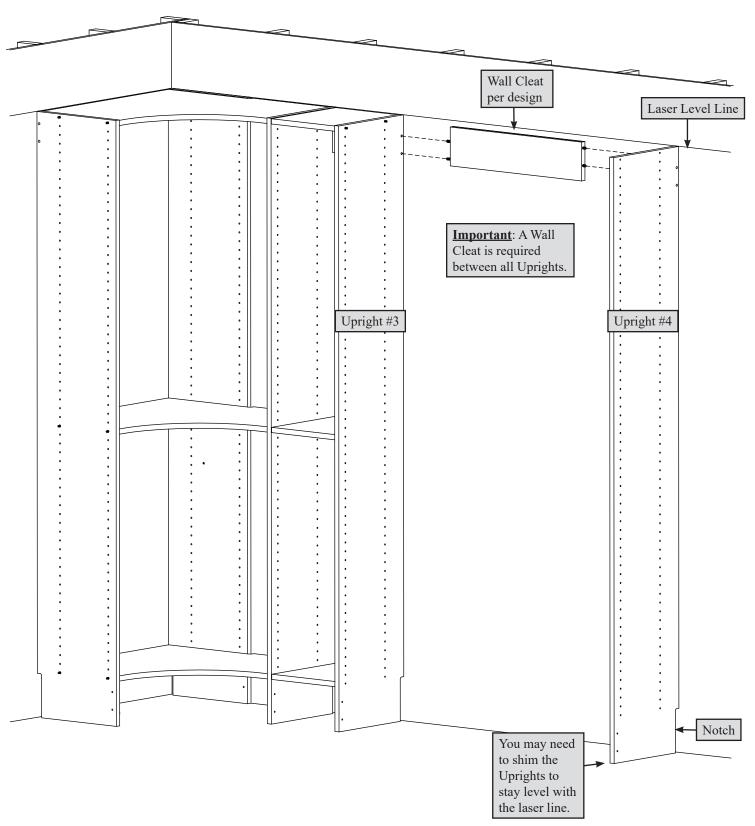

Fasten the Wall Cleat to Uprights #3 and #4 by pushing the wood dowels in the Wall Cleat into the Uprights.

Important: A Wall Cleat is required between all Uprights.


Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

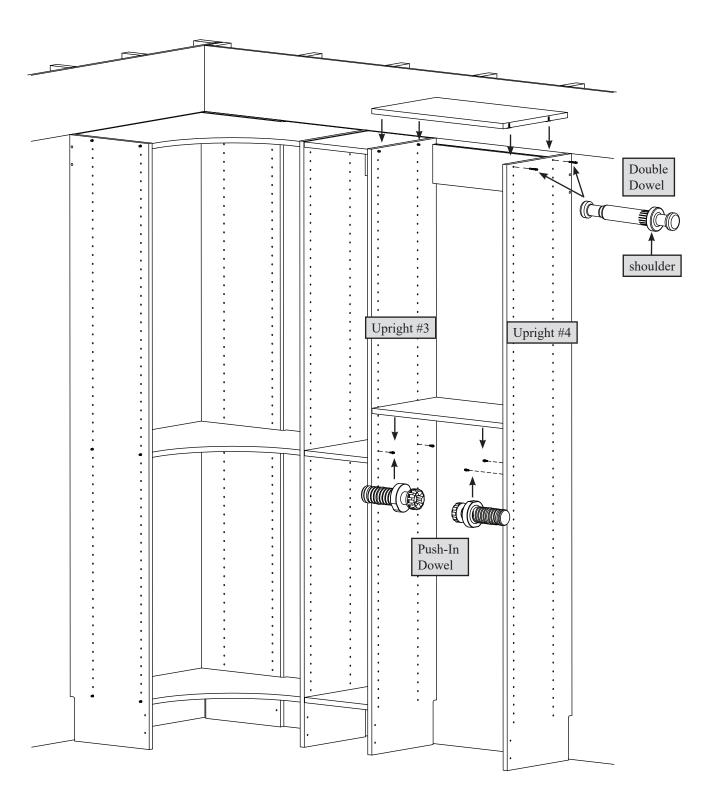

Insert two Double Dowels completely into the holes in Upright #4.

Insert four Push-In Dowels completely into the holes in Uprights #3 and #4.


Fasten two Fixed Shelves to Uprights #3 and #4. Tighten eight Connectors.

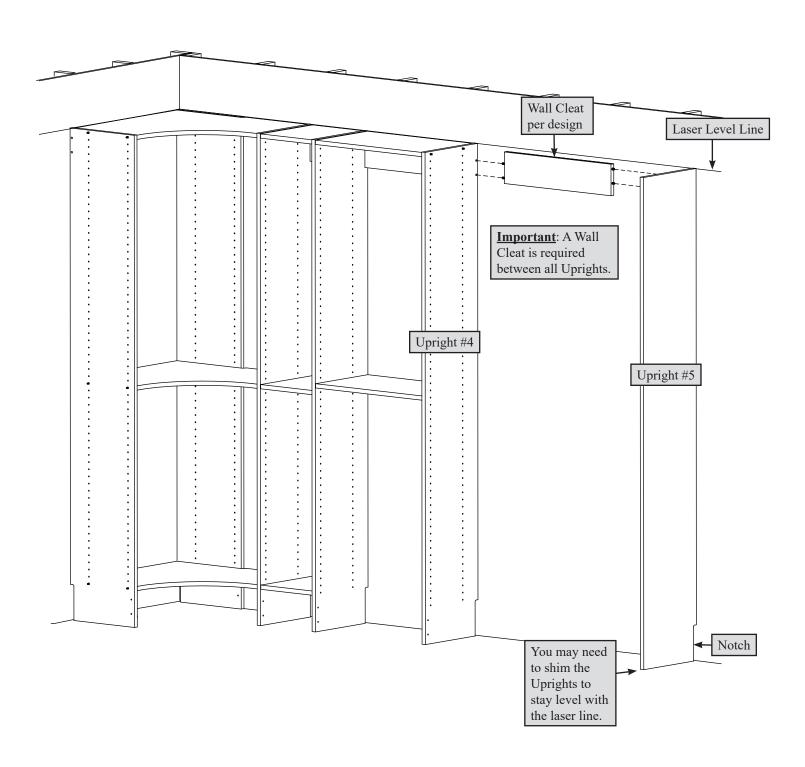

Fasten the Wall Cleat to the Uprights by pushing the wood dowels in the Wall Cleat into Uprights #4 and #5.


Important: A Wall Cleat is required between all Uprights.

Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

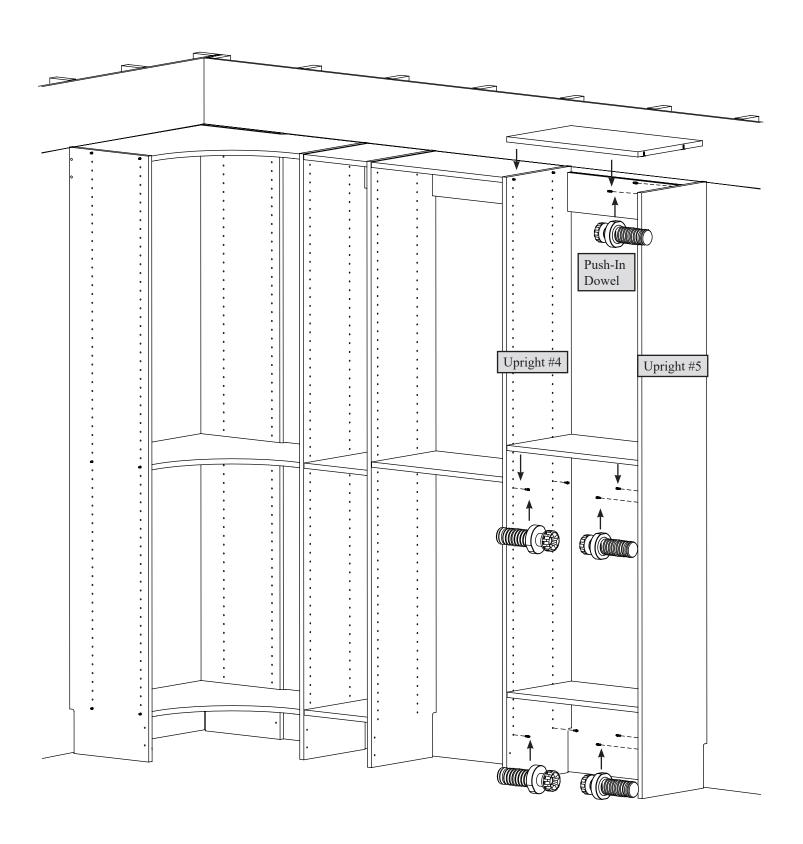

Insert ten Push-In Dowels completely into the holes in Uprights #4 and #5.


Fasten three Fixed Shelves to Uprights #4 and #5. Tighten twelve Connectors

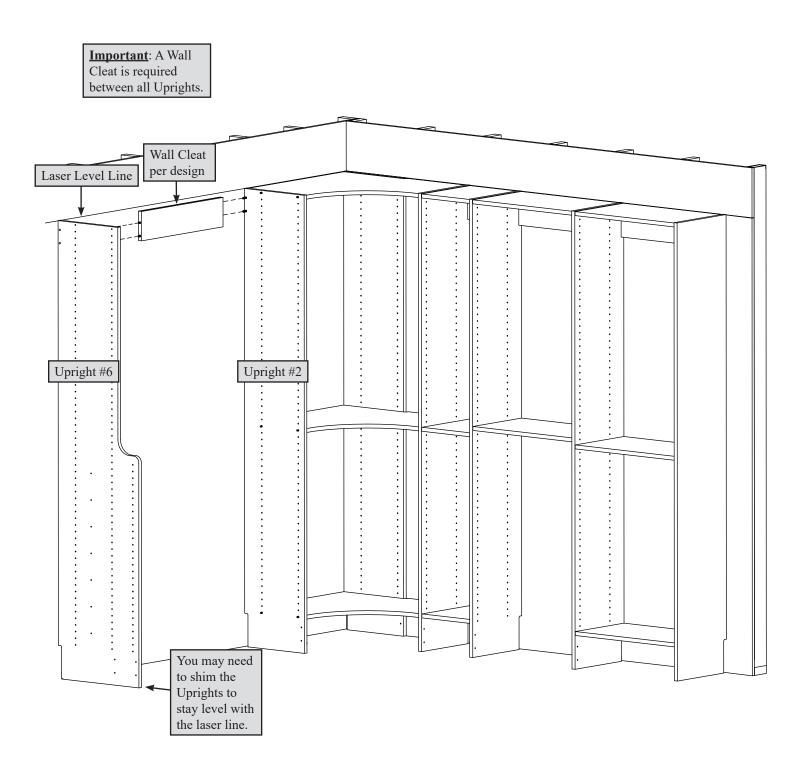

Fasten the Wall Cleat to the Uprights by pushing the wood dowels in the Wall Cleat into Uprights #2 and #6.

Important: A Wall Cleat is required between all Uprights.


Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

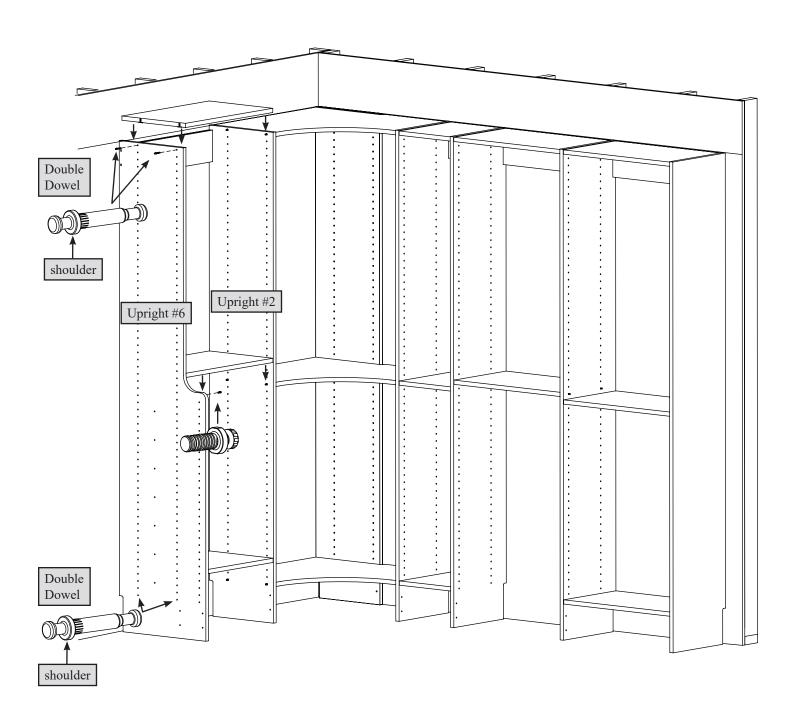

Insert four Double Dowels completely into the holes in Upright #6.

Insert two Push-In Dowels completely into the holes in Upright #6.


Fasten three Fixed Shelves to Uprights #2 and #6. Tighten twelve Connectors

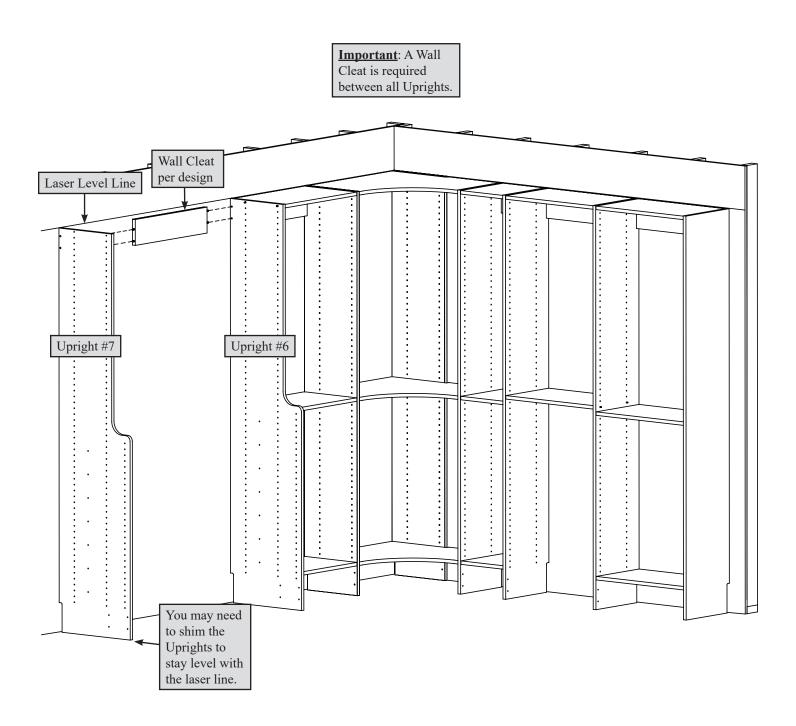

Fasten the Wall Cleat to the Uprights by pushing the wood dowels in the Wall Cleat into Uprights #6 and #7.

Important: A Wall Cleat is required between all Uprights.


Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

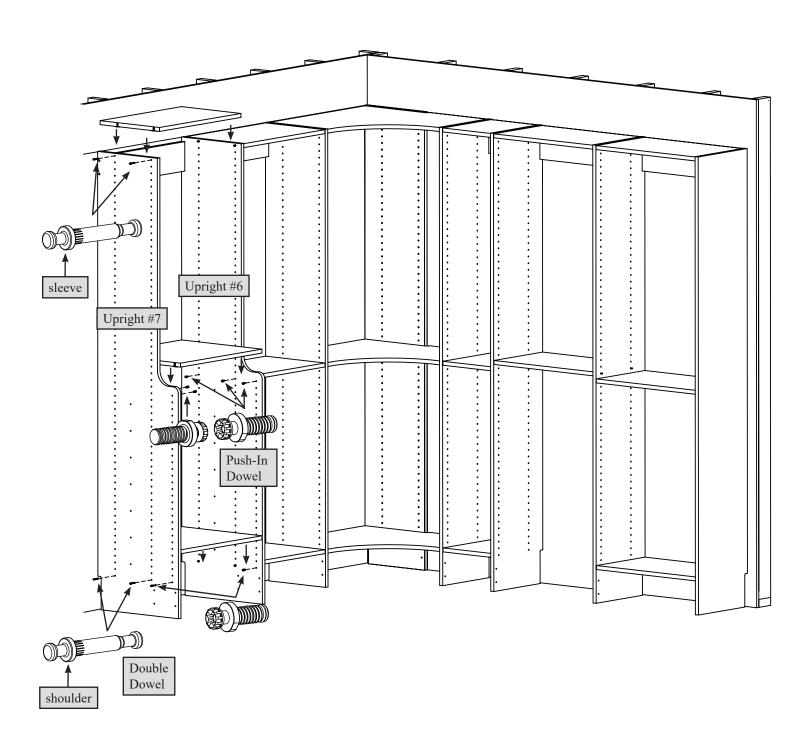

Insert four Double Dowels completely into the holes in the Upright #7.

Insert eight Push-In Dowels completely into the holes in Uprights #6 and #7.


Fasten three Fixed Shelves to Uprights #6 and #7. Tighten sixteen Connectors

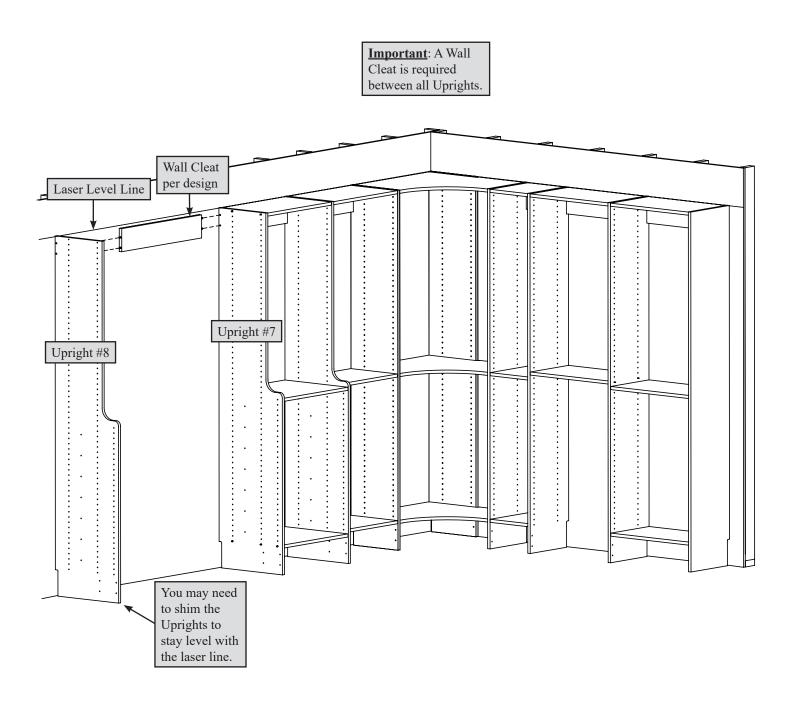

Fasten the Wall Cleat to the Uprights by pushing the wood dowels in the Wall Cleat into Uprights #7 and #8.

Important: A Wall Cleat is required between all Uprights.


Note: Wall Cleats will be anchored to the wall after all Uprights and Fixed Shelves are hung on page 34.

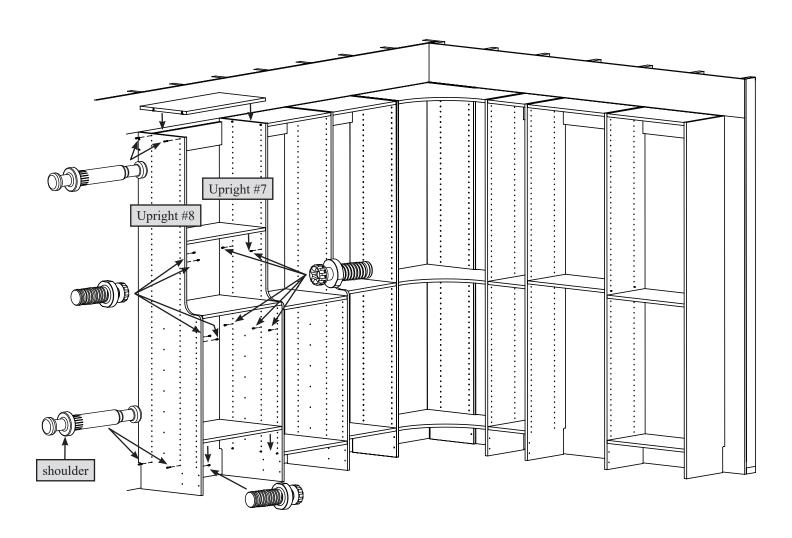

Insert four Double Dowels completely into the holes in Upright #8.

Insert eleven Push-In Dowels completely into the holes in Uprights #7 and #8.

Fasten three Fixed Shelves to Uprights #7 and #8. Tighten twenty Connectors

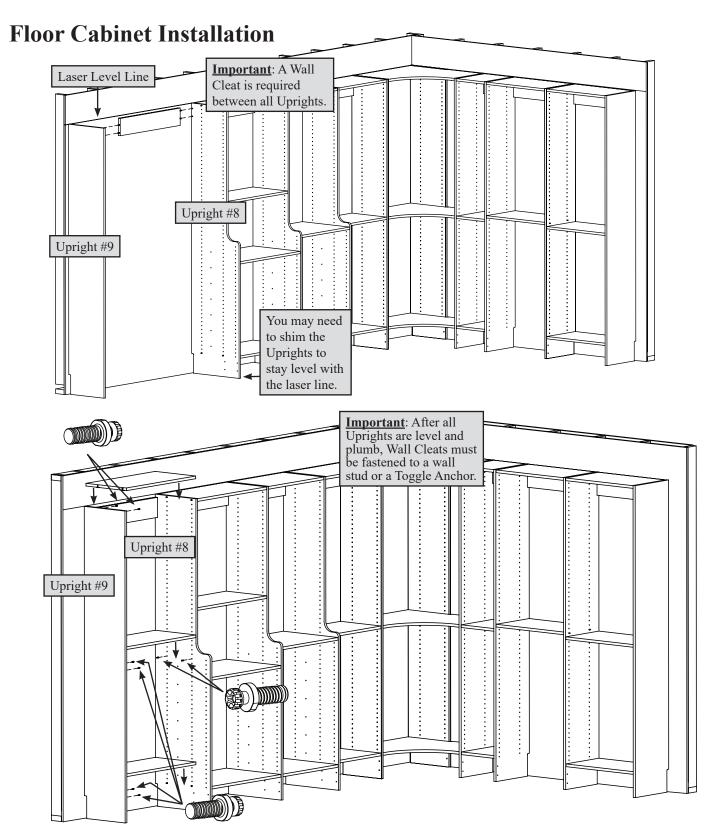


Fasten the Wall Cleat to the Uprights by pushing the wood dowels in the Wall Cleat into Uprights #8 and #9. Insert eight Push-In Dowels completely into the holes in Uprights #8 and #9.

Fasten three Fixed Shelves to Uprights #8 and #9. Tighten twelve Connectors.

<u>IMPORTANT</u>: After all Uprights are level and plumb, Wall Cleats must be fastened to a wall stud or a Toggle Anchor. <u>NOTE</u>: To allow for Rod Cups and Rods, Push-in Dowels must be in the fourth hole up from the bottom.

To add Rods, Doors, and Drawers, refer to the applicable pages listed in the Table of Contents.

Door Installation

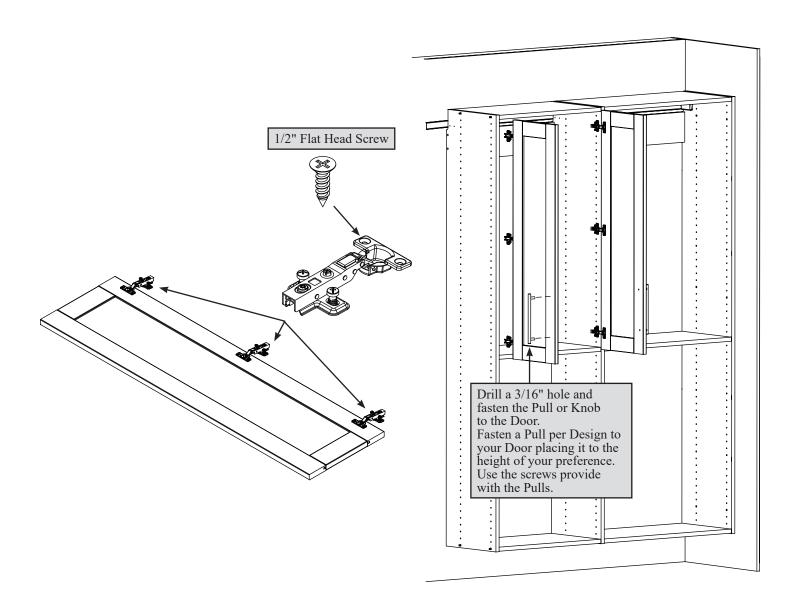


Fasten the Hinges to the Door. Use the Black 1/2" Flat Head Screws.

Fasten the Doors to the Uprights. Use the screws in the hinges.

Drill a 3/16" hole and fasten the Pull or Knob to the Door. Fasten a Pull per Design to your Door placing them to the height of your preference.

Use the screws provided with the Knob or Pull.

Drawer Installation

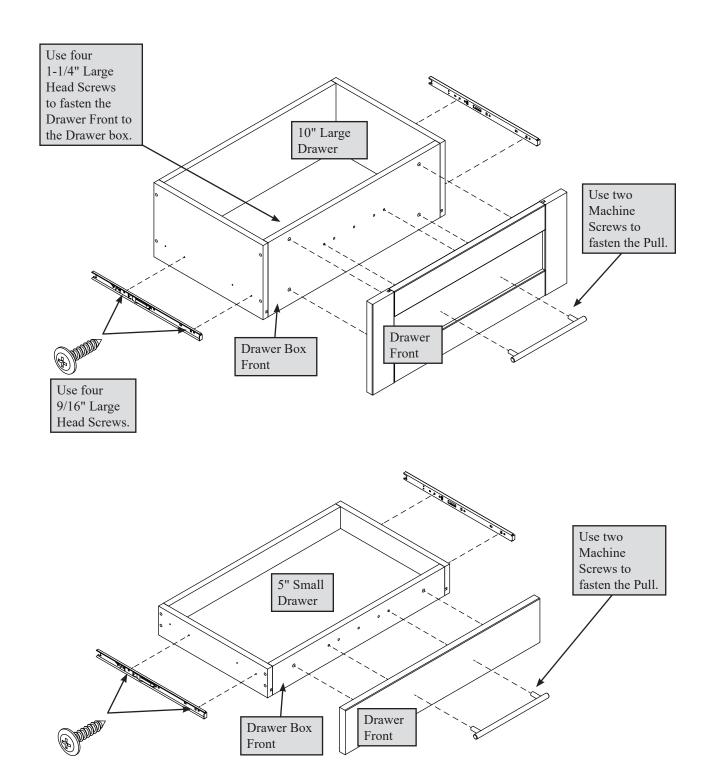


Fasten the Extension Slides to your Drawer box Sides using the 9/16" Large Head screw as shown.

NOTE: Drawer Fronts are not bored for hole placement of Pulls and Knobs. Place the Drawer front face down onto a spoil board and drill 3/16" holes in your Drawer front specific to the Pull or Knob boring.

Fasten the Drawer Front to the Drawer Front Box using the 1-1/4" Large Head Screw supplied with the drawer slide Do not tighten the Screws at this time. Drawer fronts will be adjusted after you insert them into your cabinet.

Fasten the Pull to the Drawer Front and Drawer box front using the Machine Screws supplied with the Pull.

Drawer Installation

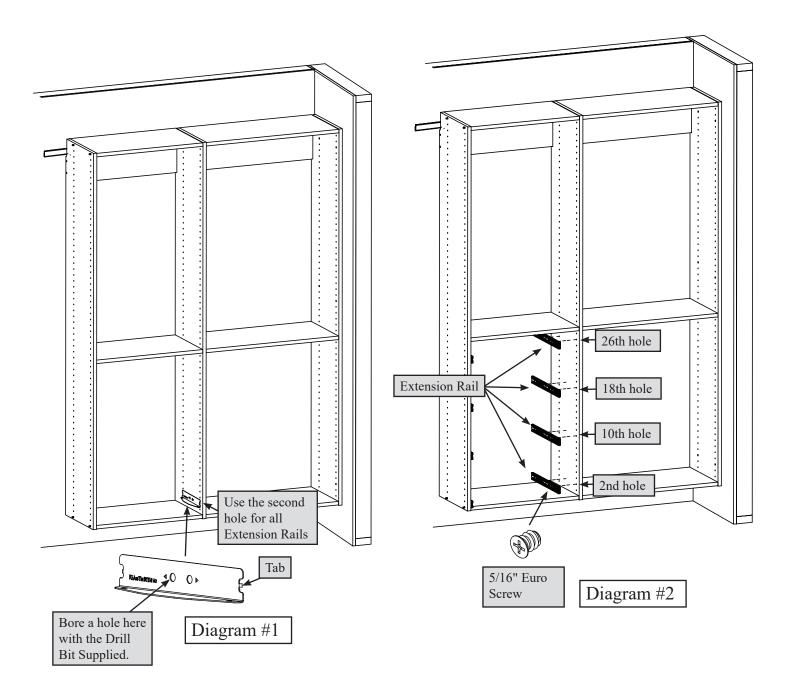


The rear hole for the 350mm Extension Rail requires boring. To do this, insert the tabs on the Rail Template Kit into the proper holes of the Upright. Use the Drill Bit supplied to drill the rear hole in the Template as shown in Diagram #1.

NOTE: The Lower Drawer Extension Rails will always use the 2nd hole up from the bottom. For 10" Large Drawers, use every 8th hole up as shown in Diagram #2. For 5" Small Drawers, use every 4th hole up. For every 10" Drawer, two 5" Drawers can be substituted.

Fasten the Extension Rails to the Upright. Use the 5/16" Flat Head Screws.

<u>NOTE</u>: The template is not needed if you are installing 450mm Extension Rails in your Closet Cabinets. Use the holes provided in the Uprights to fasten the 450mm Extension Rails to your Cabinet.

Shoe Shelf Installation

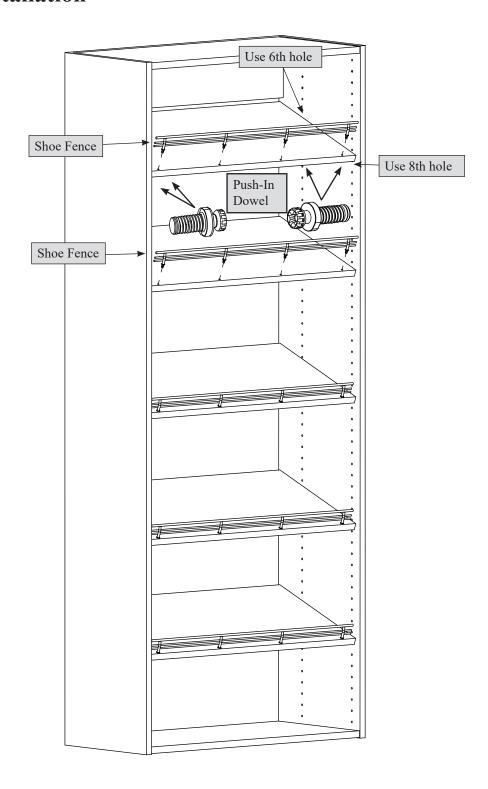

When locating a Shoe shelf in a Floor Cabinet, insert two Push-In Dowels into the 6th Upright holes below the top Fixed Shelf along the back edge.


Tighten the rear Connectors in the Shoe Shelf.

Next, insert two Push-In Dowels into the 8th Upright holes below the top Fixed Shelf along the front edge. The Shoe Shelf will rest on the front Push-In Dowels.

Then, insert the Shoe Fence into the holes along the front edge of the Shoe Shelf.

NOTE: For Shoe Shelf cabinets that hang side by side, a Double Dowel will be used to support the Shoe Shelves.

Rod Installation

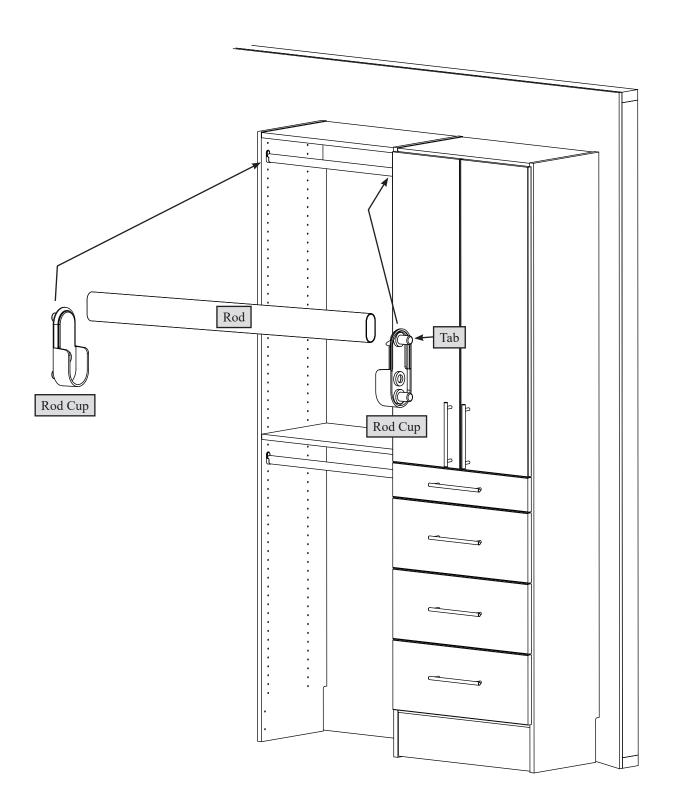


Insert the tabs of the Rod Cups into the exact holes shown.

<u>NOTE</u>: There should be one hole exposed above the Rod Cups.

Cut a Rod to length and place it in the Rod Cups.


Adjustable Shelf Installation

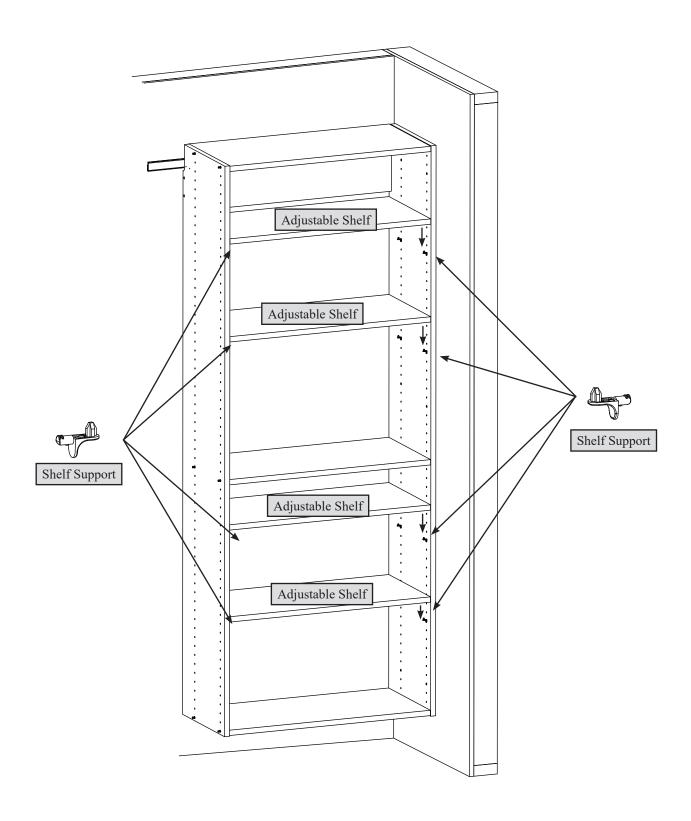

Insert the Shelf Supports into the hole locations of your choice.


Place the Adjustable Shelves onto the Shelf Supports.

H-Joint Channel Installation

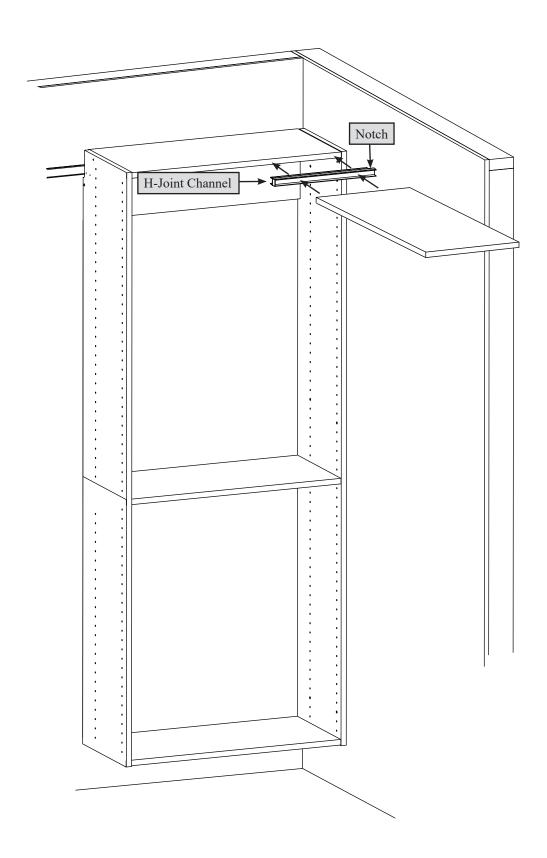

In some designs, you may have two Fixed Shelves that butt up to each other. For support between Fixed Shelves use the Corner Shelf H-Joint Channel as shown.

Cleat Dowel Boring Jig Installation

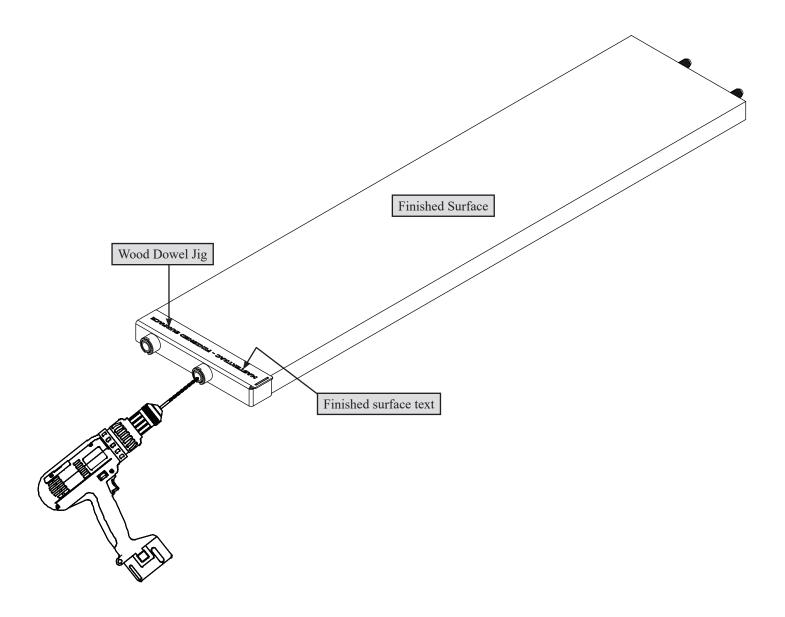


In some Designs, you may need to cut a Cleat to length and rebore holes to replace the Wood Dowels in a Cleat. Follow the diagram and steps below for instructions.

- 1. Cut a Cleat to length.
- 2. Place the template on the corner as shown with the finished surface text in the template on the finished surface of the Cleat.

 3. Drill two 5/16" diameter holes 1-1/16" deep through the template holes.
- 4. Push two Wood Dowels into the holes.

Hole Boring and Jig Installation

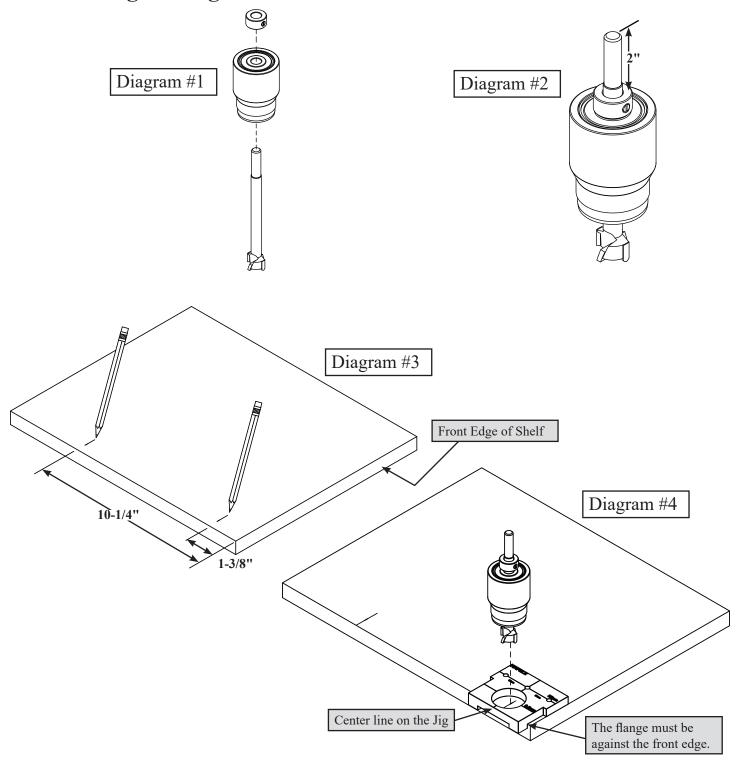


In some Designs, you may need to cut a Fixed Shelf to length and rebore holes to replace the connector holes in the Fixed Shelf. Follow the diagrams and steps below for instructions.

- 1. Insert the shaft of the bit through the plastic sleeve as shown in Diagram #1.
- 2. Place the the stop over the shaft of the bit 2" from the end and tighten the set screw as shown in Diagram #2
 3. Cut the Fixed Shelf to length.
 4. Mark lines on the shelf as shown in Diagram #3.
 5. Line up the center line on the jig with the line on the Fixed Shelf as shown in Diagram #4.

- 6. Drill the holes in your shelf as shown in Diagram #4.

Cam and Toe Kick Kit

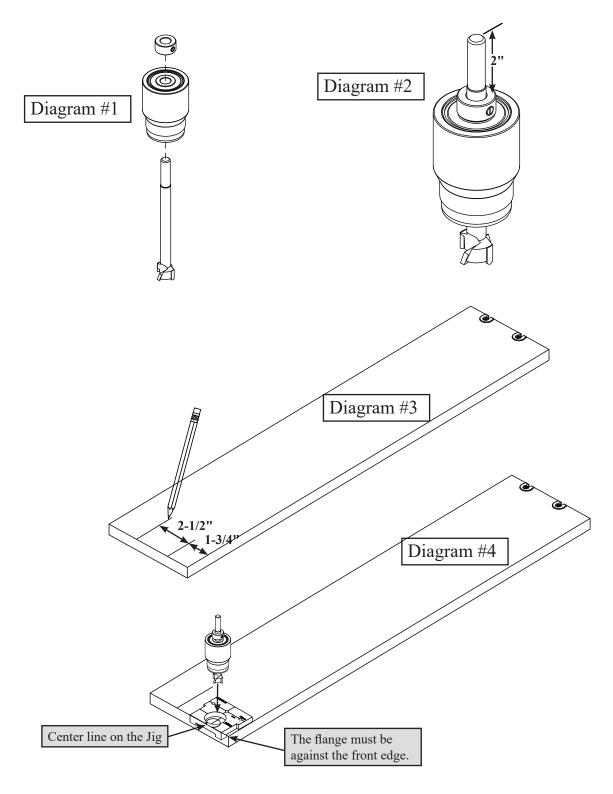

In some Designs, you may need to cut a Fixed Shelf to length and rebore holes to replace the connectors in the Shelf. Follow the diagrams and steps below for instructions.

- Insert the shaft of the bit through the plastic sleeve as shown in Diagram #1.
 Place the stop over the shaft of the bit 2" from the end and tighten the set screw as shown in Diagram #2.
 Cut the Toe Kick to length.
 Mark lines on the Toe Kick as shown in Diagram #3.

- 5. Line up the center line on the jig with the line on your Toe Kick.
- 6. Drill the holes in your shelf as shown in Diagram #4.

Toe Kick Installation Use the Double Dowel when Toe Kicks Long Corner are vertically Toe Kick inline. Short Corner Toe Kick 3rd Toe Kick per Design


1st - Corner Floor Cabinets will require a Long Corner Toe Kick and Short Corner Toe Kick. Insert four Push-In Dowels into the right corner Upright against the wall and the left corner upright. Push the connectors in the Long Corner Toe Kick completely onto the upper Push-In Dowels. Next, rotate the Toe Kick on the upper Push-In Dowels until the connectors are exposed. Tighten two upper connectors. Rotate the Toe Kick down completely onto the lower Push-in Dowels.

NOTE: Toe Kicks that are vertically in line will use the Double Dowels in the place of the Push-In Dowels.

2nd - Insert four Push-In Dowels into the Long Corner Toe Kick and the right corner Upright. Push the upper connectors in the Short Corner Toe Kick onto the upper Push-In Dowels. Next, rotate the Toe Kick on the upper Dowels until the connectors are exposed. Tighten two upper connectors. Rotate the Toe Kick down completely onto the lower Push-in Dowels

 3^{rd} - For all other Toe Kicks, insert four Push-In Dowels or Double Dowels into the Uprights and follow the same fastening process used in steps 1 and 2.

Weight limits

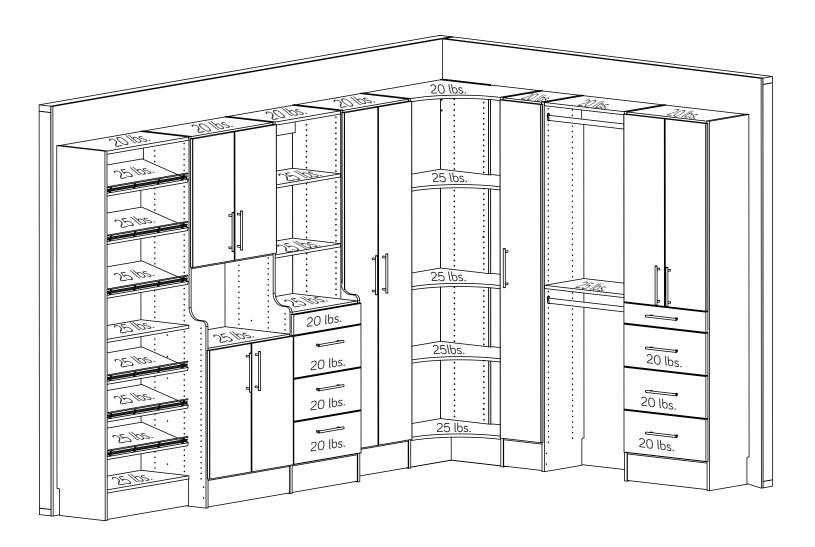

A WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart*.

| Look out for: | What can happen: | How to avoid the problem: |
|---|--|--|
| Loose or unstable closet components. Tall closet component structures. Closet component structures that are over five feet tall and placed in an open area or a walk—in closet. | Risk of injury Closet components that are not properly connected can easily slide against each other and cause the structure to be unstable and tip over. A tall closet structure can tip unless it is properly secured. | Closet components must be securely attached to each other from side to side, and top to bottom. Secure the closet structure to a wall stud whenever possible. If you cannot use a wall stud, use the supplied wall anchors into your drywall. (If attaching the product to a wall made of concrete, plaster, or other material, purchase and use the appropriate mounting hardware. The attachment hardware must be rated to provide a minimum of 100 pounds of pull strength.) |
| Overloaded drawers and shelves. | Risk of injury. Top—heavy furniture can tip over. Overloaded drawers or shelves can break. | Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers. |
| Improper use of furniture to support TVs. Setting TVs on furniture items not intended to support them is hazardous. | Risk of injury. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward. | • This product is not designed to support a television. |
| Children climbing or hanging on the shelves or clothing bars. | Risk of injury or death. | Do not allow children to climb or hang on the shelves or clothing bars. Avoid placing items like toys or candy on shelves. |

WOODTRAC® CLOSET PRODUCTS LIMITED WARRANTY

WoodTrac® by Sauder provides limited lifetime warranty coverage on WoodTrac® Closet Products (the "Products") to the original first use retail consumer ("Consumer") as set forth in this limited warranty statement. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Limited Lifetime Warranty Coverage: WoodTrac® warrants that the Products will be free from defects in material and workmanship under conditions of normal, residential use, for the lifetime of the Products. This limited warranty extends only to the original, first-use retail Consumer, and is not transferable.

Limitations on Warranty Coverage: WoodTrac's® Limited Lifetime Warranty (described above) is the only warranty coverage provided by WoodTrac® for the Products, and is in lieu of all other warranties. Under the laws of certain states, there may be no implied warranties from WoodTrac®, and ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED AND EXCLUDED TO THE FULLEST EXTENT ALLOWED BY LAW.

Exclusions from Coverage: This limited warranty does not cover defects arising from (1) the improper installation or use of the Products; (2) abuse or neglect; (3) any commercial, rental or non-residential use of the Products (including the installation and use of the Products in a commercial or rental structure); or (4) normal wear and tear.

Exclusive Remedy: WoodTrac® will (at its option) repair or replace any defective Products (or components) at no charge, subject to confirmation of the defect and proof of purchase, as the sole and exclusive remedy under this limited warranty. This limited warranty does not cover costs for installation, returning any defective Products to WoodTrac®, for removal or other labor costs in connection with the repair or replacement of the Products, all of which shall be the responsibility of the Consumer. WoodTrac's® liability under this limited warranty shall not exceed the purchase price of the Products. WoodTrac® shall have NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, and all such claims and damages are DISCLAIMED AND EXCLUDED FROM THIS LIMITED WARRANTY. You must notify WoodTrac®, in writing, within 90 days after discovering any defect in order to receive limited warranty coverage.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

To Obtain Warranty Service or Information: For warranty inquiries or claims, contact WoodTrac® at 1-855-854-7465, 502 Middle Street, Archbold, OH (USA) 43502, woodtrac@sauder.com. Return of any defective Product may be required by WoodTrac®, or we may elect to examine the product at its location. If we ask you to ship any Products to us, we will issue you a return authorization number and provide return instructions. For returned Products to qualify for limited warranty coverage, they must be returned in the original or equivalent packaging, in accordance with the shipping instructions you receive from us, and must prominently display the return authorization number on the return package.

Stay Connected with WOODTRAGE









Trust Sauder

Sauder has been making wood products since 1934. Today we offer a wide range of products, mostly made right here in Archbold, Ohio, and supported by our award-winning customer service.

WoodTrac® Closets by Sauder are supported by our Limited Lifetime Warranty and offers the same made-in-the-USA advantages as the rest of our product line.

Certificate of Conformity

- 1. This certificate applies to the Sauder Woodworking Product identified by this Instruction Book.
- This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
- 3. This product is manufactured by:

Sauder Woodworking Company 502 Middle Street Archbold, Ohio 43502 (419) 446-2711

4. Date of Manufacture:



register your new product online

For immediate service, our website is available 24 hours a day, 7 days a week to order replacement parts, register your product, and view Woodtrac products. www.woodtrac.com

Consumer Services in United States and Canada Mon.-Fri. – 9am-5:30pm ET(except holidays) **1-855-854-7465**

