

Air Connect Installation Instructions

Items included in the kit:

1. Air Connect Rail Mounts Qty 2 per unit
2. Connecting Bolts Qty 2 per unit
3. Adhesive Neoprene Rubber Qty 1 per unit

Tools Needed:

1. Allen Wrench
2. Quick Grip clamp (Not Needed but makes things easier)
3. Lock Tight

Install:

1. Decide where you are placing your Air Connect mount. (Should be placed on a flat area of the rail)
2. Next place your 3/32 gasket around the rail. It should tuck nicely all the way under the rail on both sides. Your lower gasket is 4" x 2 7/8 inches, the gasket will go around your rail and tuck up underneath the whole rail. If it is not long enough to tuck under both sides of the rail you have the gasket material in the wrong direction, change the direction so it wraps completely under the rail.




3. Insert each side of the Air Connects over the top of the adhesive rubber you just placed onto the rail. Inserting at a slight angle and then straightening them up to meet. Be sure they meet exactly or your screw holes will not line up.



4. Squeeze the two pieces together as close as possible (Quick Grip Clamp is useful here). Place a small amount of your favorite lock tight on the bolt threads and insert a bolt in each hole. **Get each bolt started being very careful not to cross thread the bolt into the Air Connect. Bolt alignment is key here.**

5. Tighten each bolt a few turns rotating back and forth on each bolt so they squeeze to the rail equally. Be careful not to over tighten once the two sides are joined together.

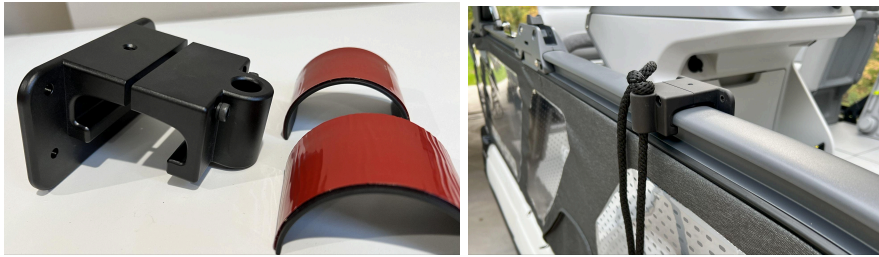

To mount the Scotty Side mount you can use 4 of a 10-24 x 1 inch screw with a 10-24 Nylock Nut works well to mount the scotty side mount. You should always try to use stainless screws. (Not Included)

Care and Maintenance:

1. Although your mounts are using a UV treated in the anodized process and will last a long time with proper care, they will not hold up if in direct sunlight when stored.

Many use an aftermarket cover and your mounts are covered well but there are also many that use the seadoo mooring cover which does not cover our mounts and they need to be covered. You should always keep your mounts and boat fully covered when not in use to avoid any discoloration of the mounts due to some harsh UV climate areas.

Unfortunately due to the wide variation of customer care storage we do not warranty any discoloration.

2. We recommend cleaning your mounts with after each use with a soft cloth and fresh water