



IDEALCYCLE .COM

2000-01 Honda CBR929RR Undertail Installation instructions

- 1) Carefully remove the tail section body work. Save all bolts, washers and plastic rivets for re-installation of tail.
- 2) Disconnect and remove the brake light (with all mounting grommets and washers) license plate and turn signals, key lock (with clip) and move all wiring out of the cutting areas.
- 3) Remove the two bolts at the rear end of the stock fender (inside glove box) to allow the end to hang down for cutting.



IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

- 4) Using a “Dremel” tool or cutting disc, remove the plastic shown in the photos to the above and below. Be sure to take your time cutting, so that you don’t cut away any more plastic than necessary.





IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

5) Insert Key lock into position.



6) Install license plate bracket. Hold license plate in desired location on the undertail, carefully mark and drill holes, install using the hardware provided.





IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

7) Re-mount glove box to bike using stock hardware.





IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

8) Replace tail section, do not use any fasteners until undertail is in place.




9) Insert undertail left side first, then right side, be carefully not to crack or scratch undertail. Tighten light first, then all other bodywork mounting locations, then insert 2 screw rivets into stock locations into undertail.



IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

10) Check Lock position, adjust if necessary.

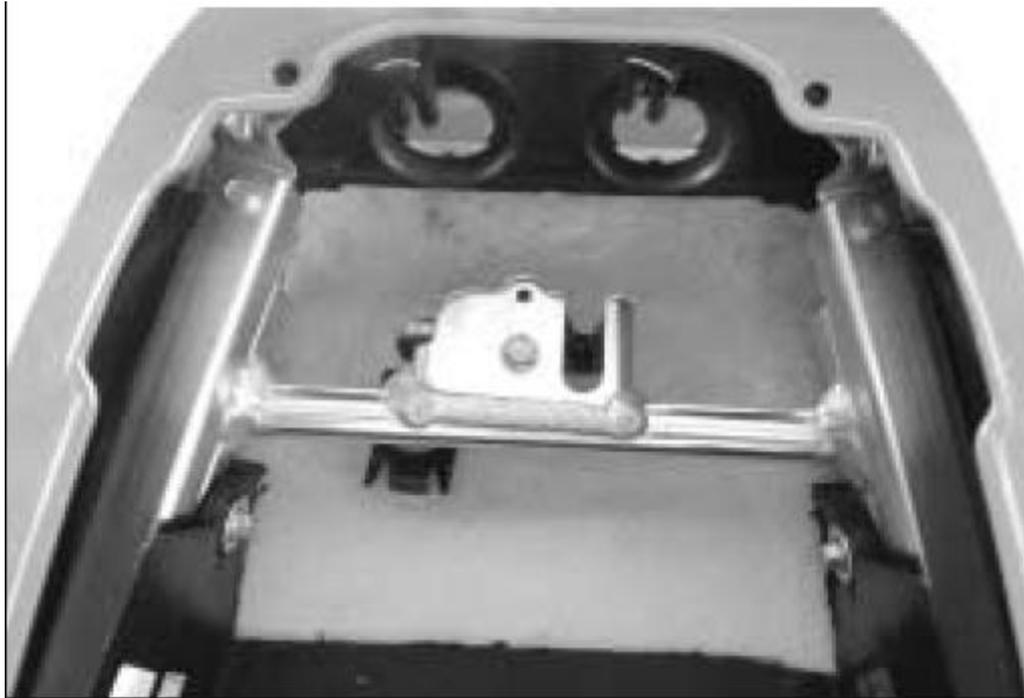



IDEALCYCLE.COM

2000-01 Honda CBR929RR Undertail Installation instructions

HOW TO CONNECT THE TURN SIGNALS (BLIKERS)

Wire the turn signals on by cutting the original cables of the signal lights and then stick them to the turn signal lights on the undertail.

BLACK= ground

RED= positive

Test them to make sure everything is working fine.



You are done!!!

