

Remove the tail section

#### NOTE:

Please take notes or memorize how everything was before so you don't have problems later reassembling.







This is the way it looks before removing the part.





Remove the original tail section

Cut thru the line indicated in red on the original fender





#### Should look like this





Start putting it on the bike and screw everything back







Wire the turn signals on by cutting the original cables of the signal lights and then stick them to the turn signal lights on the undertail.

BLACK= ground RED= positive


Test them to make sure everything is working fine





Place back the tail section (do not tight anything yet) and then slide the undertail in very carefully so you don't scratch the paint.

Align everything, start tightening it using the stock push pins. First the two top ones, then the two bottom ones.

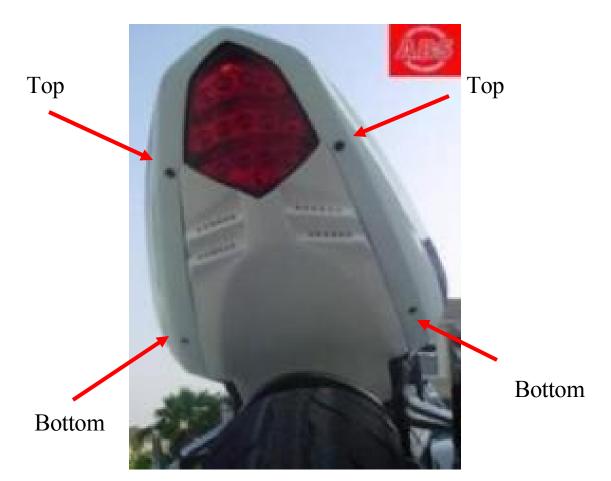



#### You are done!

