


Magnet Feet Landing Pad Installation

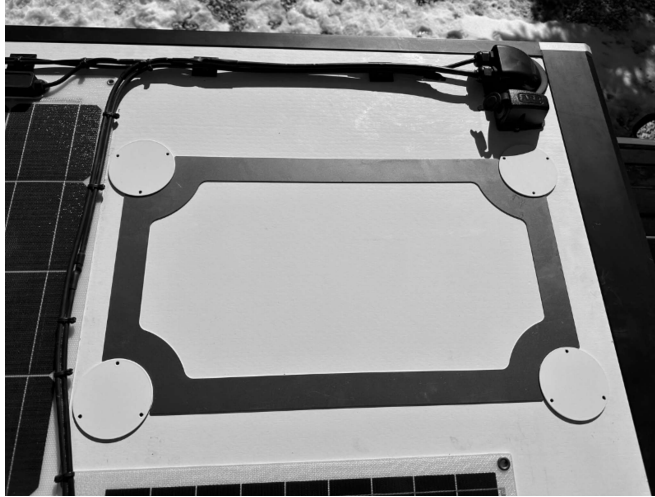

Steps

1. Use supplied template to align landing pad discs.
2. Fasten using Sikaflex adhesive, 3M VHB adhesive tape, or three #8 screws per pad (not included).
3. Remove and discard the template.
4. Align and attach magnets to the centers of pads.

Hope you enjoy
your new and improved hardware! Please feel free to reach out with any
questions/ concerns to: info@uniquecomponentry.com

