

PARTAYGARAGE WIND WEIGHT INSTALLATION & EXAMPLES

One Wind Weight Kit for a 50 inch wide PARTAY Panel has a two piece Wind Weight, 3 wing nuts and Two Laminated Safety Walk Thru Signs with Clips



1. Locate pair of pre-perforated holes in two center slats of a 50" PARTAY Panel. Push Weight piece, with protruding studs, center stud, thru the two holes with the stud **facing away from the garage door.** Place the Weight piece with holes only, center hole, over the center stud and loosely secure a wing nut on the center stud.

2. Locate and push the two outboard studs of the Weight thru the pair of pre-perforated holes in two outer slats of a 50" PARTAY Panel, both sides respectfully. Make sure that the slats stay in their front/back/front/back respective positions. Loosely secure wing nuts on both of the outer studs.

3. Arrange the slats in a balanced way so the overlaps are uniform and the panel drapes in a smooth fashion. Next secure the wing nuts snug in position to contain the panel as one unit.

4. Clip on the Walk Thru Signs, slightly below eye level, to the second slat from the outboard slat of the Weighted Panel. Have the arrow pointing in the direction where no weight is below it as shown.




**Safe,
Trip Free
Passage
Location
is now Clearly
defined for
PARTAY
TIME!**



9, 10, and 18 foot wide doors utilize a narrow 26" wide panel. This small panel has minimal wind losses so weights for such are special order only. Wind Weights assemble as per above with the 26" panel in between. Now passage can be made with little motion of the wind weights.

Gentlemen ~ Start Your PARTAY ENGINES !!

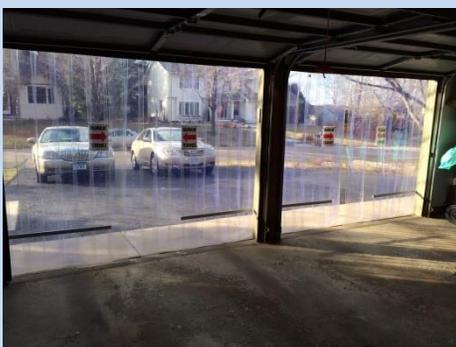

Double 10' Doors Inside



Outside



Outside with Garage Doors Closed

PARTAYGARAGE Wind Weight Kits improve the thermal efficiency of the PARTAYGARAGE System in blustery/windy conditions. Assemble the Kits as directed noting that **SAFETY WALK THRU SIGNS MUST BE USED !!**

The Wind Weight Kits fall under the Hold Harmless Agreement of PARTAYGARAGE products.

If, for whatever reason, the Wind Weight System is not working safely and safe passage is Misunderstood, remove the Wind Weights Immediately!

Note: All Assembly Techniques are Proprietary to PARTAYGARAGE and cannot be copied or replicated for use with any Climate Barrier Screen Technology

PARTAYGARAGE
P.O. Box 79178, Houston Texas 77279
Contact: info@partaygarage.com
713-628-5554